




STAPLER-ERSATZTEILE.COM

Kohle- bürsten

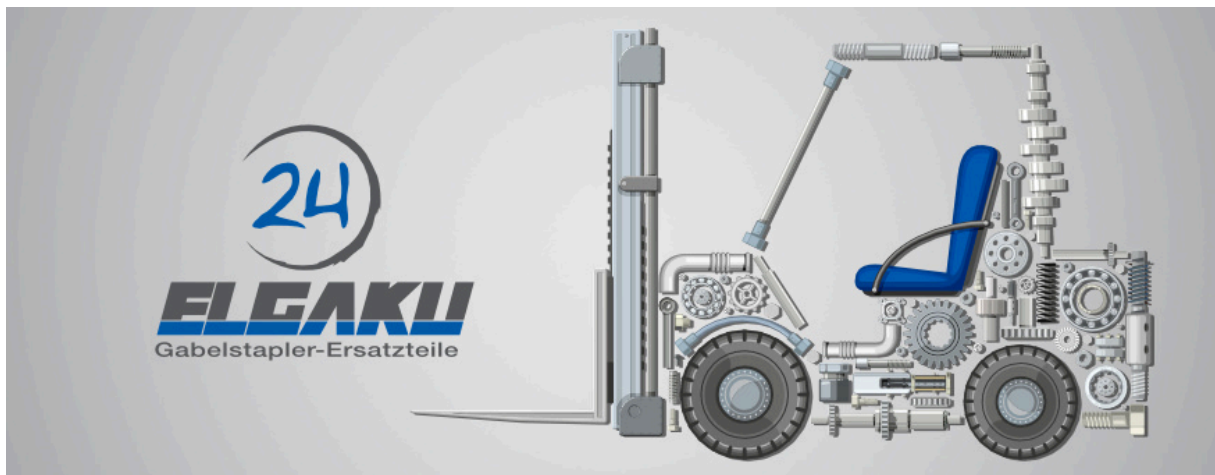

INDEX

PAGE

Part 1: NICE TO KNOW

• 1. Main brush grades	5
• 2. Brush arrangement	6
• 3. Fitting and seating carbon brushes	6
• 4. Brush pressure	6
• 5. Commutators and slip-rings	7
• 6. Brush operating problems	8
• 7. Comparison table of carbon brush running surfaces	11
• 8. Various states of commutator surface	12
• 9. Illustrations of various states of commutator surface	13

Part 2: TECHNICAL DETAIL

• Technische fiche koolborstel	18
• Fiche technique balai de charbon	21
• Technisches Datenblatt Kohlenbürste	24
• Technical sheet carbon brush	27
• Technische fiche kolenkit	30
• Fiche technique jeu de balais	32
• Technisches Datenblatt Kohlebürsten Satz	34
• Technical sheet carbon brush kit	36

Part 3: BRUSHES & BRUSH KITS used for:

ALLIS CHALMERS-KALMAR AC	40
ASEA (ABB) (Cfr KALMAR)	
ATLET-LAFIS	48
BALKANCAR	56
BAUMANN	57
BISHAMON	60
BKS (Cfr JUNGHEINRICH-STEINBOCK)	
BOBCAT	61
BONSER (Cfr LINDE-LANSING)	
BOSS (Cfr JUNGHEINRICH-STEINBOCK)	
BRUNILIFT	63
BT	64
BULLI KAHL	92
BV VESTERGAARD (Cfr ROCLA)	
CATERPILLAR (Cfr MITSUBISHI-CATERPILLAR)	
CESAB (Cfr BT)	
CHARLATTE	93
CLAAS-UNITRAC	95
CLARK-SAMSUNG	96
COVENTRY CLIMAX	129
CROWN	135
DAMBACH	146
DATSUN (Cfr NISSAN)	
ESSELINGEN (Cfr STILL)	
FENWICK-PEG	148
FIAT (Cfr OM-PIMESPO)	
GENIE	159
GROVE	161
GULDNER (Cfr LINDE-LANSING)	
HAKO	163
HALLA (Cfr HYUNDAI)	
HAMECH	166
HANGZHOU-HC-HANGCHA	169
HELI	170
HENLEY (Cfr LINDE-LANSING)	
HUBTEX	171
HYSTER	173





BRUSHES & BRUSH KITS

For all our latest catalogue updates and company info: www.tvh.com

INDEX

INDEX

	PAGE
HYUNDAI.....	.213
ICEM216
IRION (Cfr KALMAR)	
JCB.....	.218
JELAU (Cfr BALKANCAR)	
JLG220
JUNGHEINRICH-STEINBOCK223
KALMAR.....	.256
KENTRUCK-ROBUR.....	.261
KOMATSU263
LAFIS (Cfr ATLET-LAFIS)	
LANCER BOSS (Cfr JUNGHEINRICH-STEINBOCK)	
LANSING (Cfr LINDE-LANSING)	
LINDE-LANSING300
LMV (Cfr KALMAR)	
LUGLI353
MANITOU354
MATRAL (Cfr STILL)	
MIC (Cfr JUNGHEINRICH-STEINBOCK)	
MITSUBISHI-CATERPILLAR.....	.360
MORA401
NICHIYU-NYK.....	.402
NISSAN.....	.406
O&K.....	.422
OM-PIMESPO423
OMG437
PEG (Cfr FENWICK-PEG)	
PIMESPO (Cfr OM-PIMESPO)	
PATRIA441
PRAT442
RANSOMES (Cfr HYSTER)	
RAYMOND (Cfr BT)	
ROCLA446
SAMSUNG (Cfr CLARK-SAMSUNG)	
SALEV451
SAXBY (Cfr STILL)	
SHINKO454
SICHELSMIDT456
SISU (Cfr KALMAR)	
SKYJACK.....	.457
STEINBOCK (Cfr JUNGHEINRICH-STEINBOCK)	
STILL459
SUMITOMO (Cfr YALE)	
STOCKA485
STOCKLIN486
TCM.....	.488
TECNOCAR (Cfr BALKANCAR)	
TENNANT.....	.502
TOYOTA507
UNITRAC (Cfr CLAAS-UNITRAC)	
UPRIGHT533
VALMET (Cfr KALMAR)	
WAGNER (Cfr STILL)	
YALE535
YANG-YAM-PUMA.....	.573

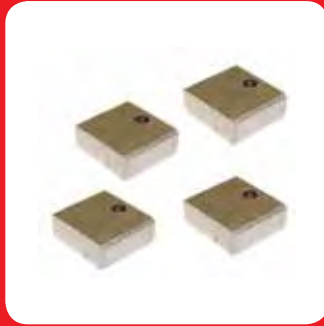

TECHNICAL DETAIL





TECHNISCHE FICHE
KOOLBORSTEL

Groep
02-12-06-00



Gegevens klant

Type machine:

Serienr. machine:

Type motor: Voltage:

Referentie motor:

- Prijsaanvraag
- Bestelling

Gelieve bij aanvraag een tekening/foto toe te voegen.

CODE: TY x MD x D x B x H x Kw



TY..... Type koolborstel, zie types.

MD..... Meldingsdraad: JA/NEE.

D..... Dikte.

B..... Breedte.

H..... Hoogte.

Kw Kwaliteit/hardheid, code op koolborstel.

TYPES

Enkele kool

Type E1
Zonder kabel



Type E2
Enkele kabel



Type E3
Meerdere kabels los van elkaar



Type E4
Meerdere kabels aan elkaar



Meerdere kolen

Type M2
2 koolblokjes aan elkaar



Type M3
3 koolblokjes aan elkaar




TYPES

Meerdere kolen

Type M4

4 koolblokjes aan elkaar

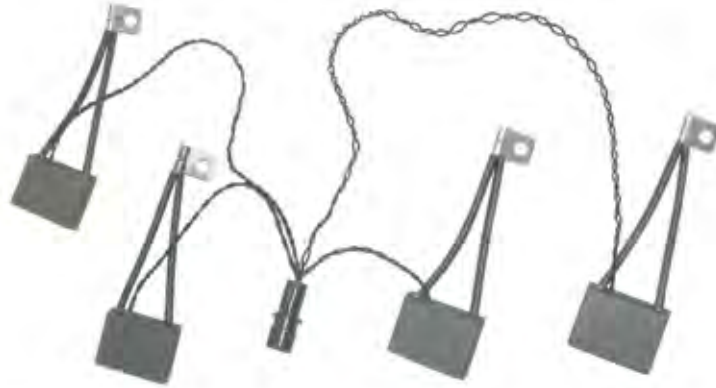

AFMETINGEN





FICHE TECHNIQUE

BALAI DE CHARBON

Groupe

02-12-06-00



Exemple



Données client

Type machine : Demande de prix
 No. série machine : Commande
 Type moteur : Voltage :
 Référence moteur :

Veuillez ajouter dessin/photo à la demande.

CODE : TY x MD x D x B x H x Kw

TY..... Type de balai, voir types.
 MD..... Fil témoin d'usure : OUI/NON.
 D..... Epaisseur.
 B..... Largeur.
 H..... Hauteur.
 Kw Qualité/dureté, code sur balai.

TYPES

Balai simple

Type E1
Sans câble



Type E2
Câble simple



Type E3
Plusieurs câbles séparés



Type E4
Plusieurs câbles unis



Plusieurs balais

Type M2
2 balais unis




Type M3
3 balais unis



TYPES

Plusieurs balais

Type M4
4 balais unis

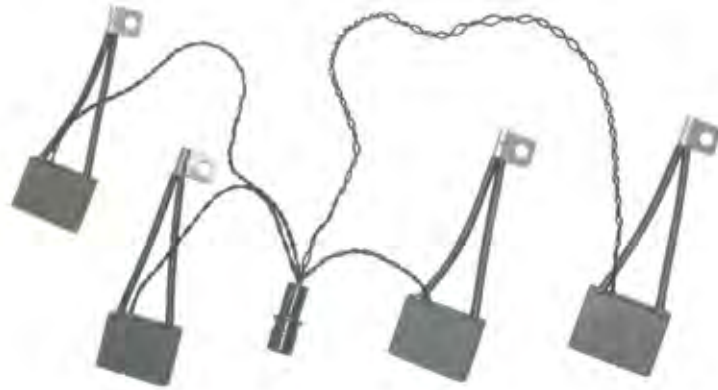

DIMENSIONS





TECHNISCHES DATENBLATT KOHLENBÜRSTE

Gruppe
02-12-06-00



Kundendaten

Maschinentyp:

Preisanfrage

Serien-Nr. Maschine:

Bestellung

Motor Typ: Volt:

Motor Referenz:

Bitte eine Zeichnung/Bild der Anfrage hinzufügen.

CODE: TY x MD x D x B x H x Kw

TY..... Typ Kohlenbürste, siehe Typen.

MD..... Sensorkabel: JA/NEIN.

D..... Dicke.

B..... Breite.

H..... Höhe.

Kw Qualität/Härte, Code auf der Kohlebürste.

TYPEN

Einzelne Kohle

Typ E1
Ohne Kabel



Typ E2
Einfachkabel



Typ E3
Mehrere einzelne Kabel



Typ E4
Mehrere miteinander verbundene Kabel



Mehrere Kohlen

Typ M2
2 verbundene Kohlenblöckchen



Typ M3
3 verbundene Kohlenblöckchen




TYPEN

Mehrere Kohlen

Typ M4

4 verbundene Kohlenblöckchen

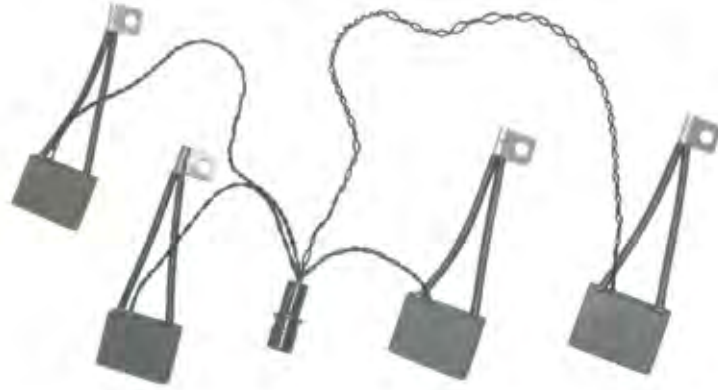

ABMESSUNGEN






TECHNICAL SHEET

CARBON BRUSH

TECHNICAL DETAIL

Group
02-12-06-00

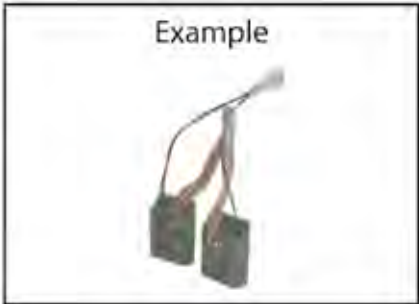

Customer details

Type machine:

Price inquiry

Serial n° machine:

Order

Motor type: Voltage:

Reference motor:

Please add a drawing/picture with each inquiry.

CODE: TY x MD x D x B x H x Kw

- TY..... Type of carbon brush, see types.
- MD..... Sensor wire: YES/NO.
- D..... Thickness.
- B..... Width.
- H..... Height.
- Kw Quality/hardness, code on carbon brush.

TYPES

Single brush

Type E1
Without wire



Type E2
Single wire



Type E3
Multiple wires separated



Type E4
Multiple wires joined



Multiple brushes

Type M2
2 brush blocks joined



Type M3
3 brush blocks joined




TYPES

Multiple brushes

Type M4

4 brush blocks joined

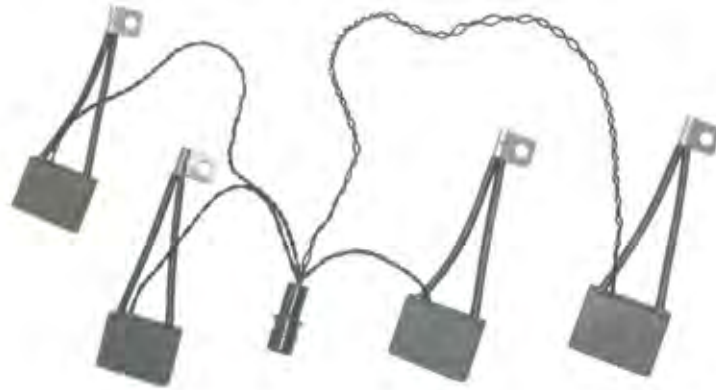

DIMENSIONS





TECHNISCHE FICHE


KOLENKIT

Groep

02-12-07-00



Voorbeeld

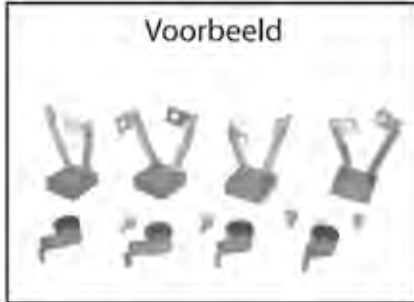

Gegevens klant

Type machine:

Prijsaanvraag

Serienr. machine:

Bestelling

Type motor: Voltage:

Referentie motor:

Gelieve bij aanvraag een tekening/foto toe te voegen.

CODE: AT-KO x AT-KB x MD x D x B x H x Kw x TB

AT-KO..... Aantal koolborstels.

AT-KB Aantal koolblokjes.

MD..... Meldingsdraad: JA/NEE.

D..... Dikte.


B..... Breedte.

H..... Hoogte.

Kw Kwaliteit/hardheid, code op koolborstel.

TB..... Toebehoren: JA/NEE (indien toebehoren aanwezig zijn = JA).


AFMETINGEN

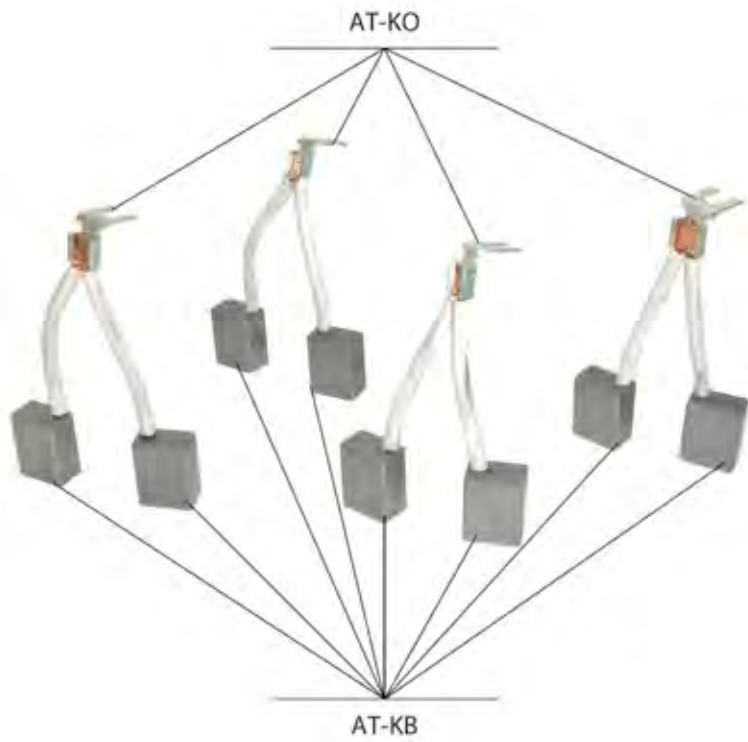



FICHE TECHNIQUE
JEU DE BALAIS

Groupe
02-12-07-00

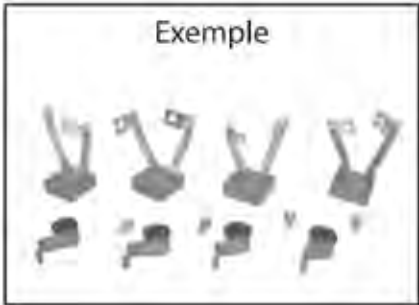

Données client


Type machine : _____ Demande de prix
 No. série machine : _____ Commande
 Type moteur : _____ Voltage : _____
 Référence moteur : _____

Veuillez ajouter dessin/photo à la demande.

CODE : AT-KO x AT-KB x MD x D x B x H x Kw x TB

- AT-KO..... Nombre de balais.
- AT-KB..... Nombre de blocs de charbon.
- MD..... Fil témoin d'usure : OUI/NON.
- D..... Epaisseur.
- B..... Largeur.
- H..... Hauteur.
- Kw..... Qualité/dureté, code sur balai.
- TB..... Accessoires : OUI/NON (si des accessoires sont présents = OUI).

DIMENSIONS

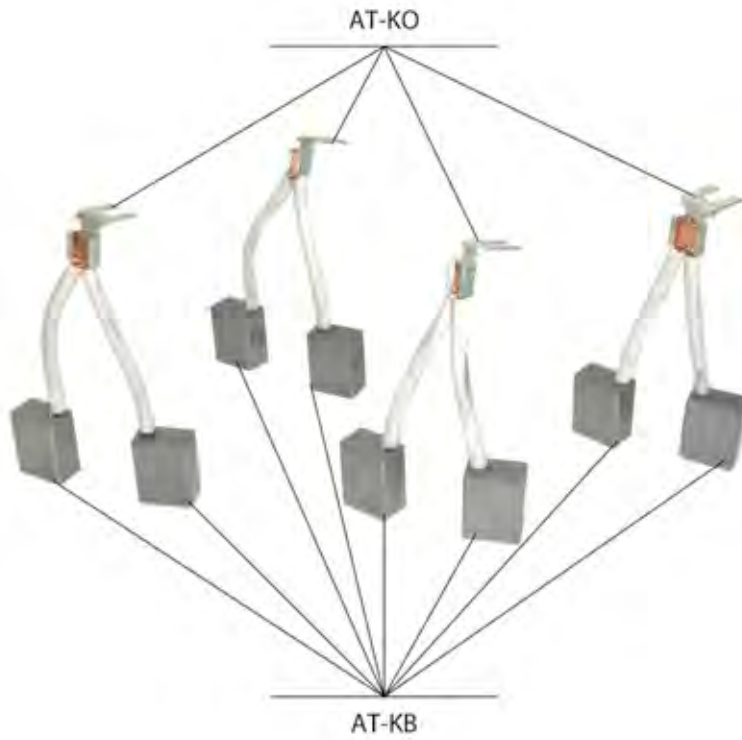




TECHNISCHES DATENBLATT

KOHLEBÜRSTEN SATZ

Gruppe
02-12-07-00

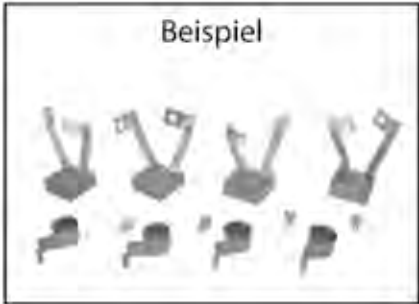

Kundendaten

Maschinentyp:

Preisanfrage

Serien-Nr. Maschine:

Bestellung

Motor Typ: Volt:

Motor Referenz:


Bitte eine Zeichnung/Bild der Anfrage hinzufügen.

CODE: AT-KO x AT-KB x MD x D x B x H x Kw x TB



- AT-KO..... Anzahl Kohlebürsten.
- AT-KB..... Anzahl Kohleblöcke.
- MD..... Sensorkabel: JA/NEIN.
- D..... Dicke.
- B..... Breite.
- H..... Höhe.
- Kw..... Qualität/Härte, Code auf der Kohlebürste.
- TB..... Zubehör: JA/NEIN (bei vorhandenem Zubehör = JA).

ABMESSUNGEN

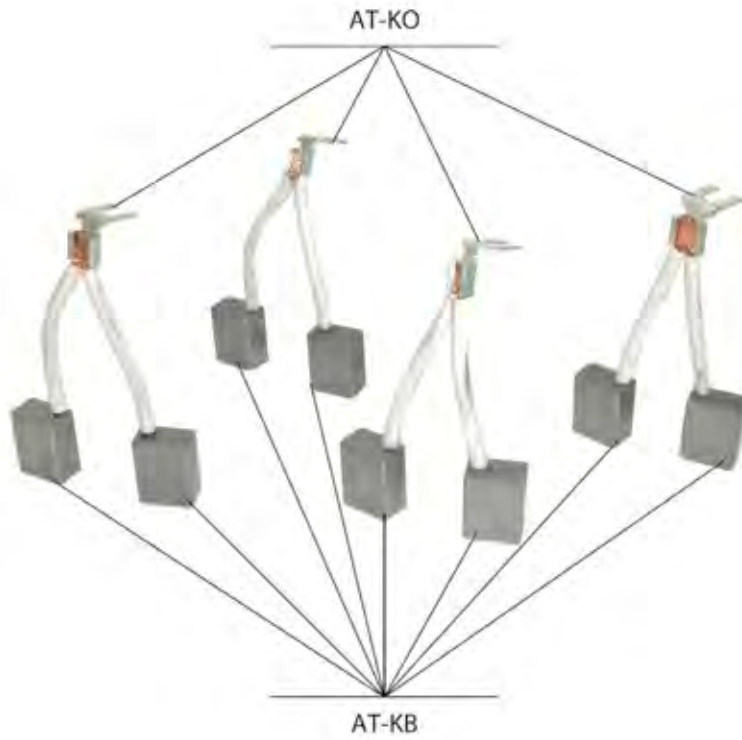




TECHNICAL SHEET

CARBON BRUSH KIT

Group
02-12-07-00

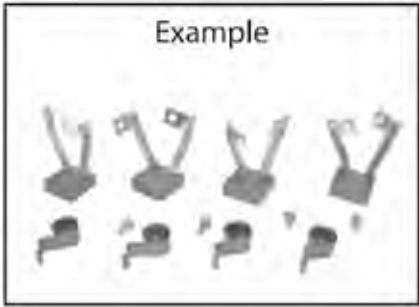

Customer details

Type machine:

Price inquiry

Serial n° machine:

Order

Motor type: Voltage:



Reference motor:



Please add a drawing/picture with each inquiry.

CODE: AT-KO x AT-KB x MD x D x B x H x Kw x TB

- AT-KO..... Number of brushes.
- AT-KB..... Number of brush blocks.
- MD..... Sensor wire: YES/NO.
- D..... Thickness.
- B..... Width.
- H..... Height.
- Kw..... Quality/hardness, code on carbon brush.
- TB..... Accessories: YES/NO (if accessories present = YES).

DIMENSIONS

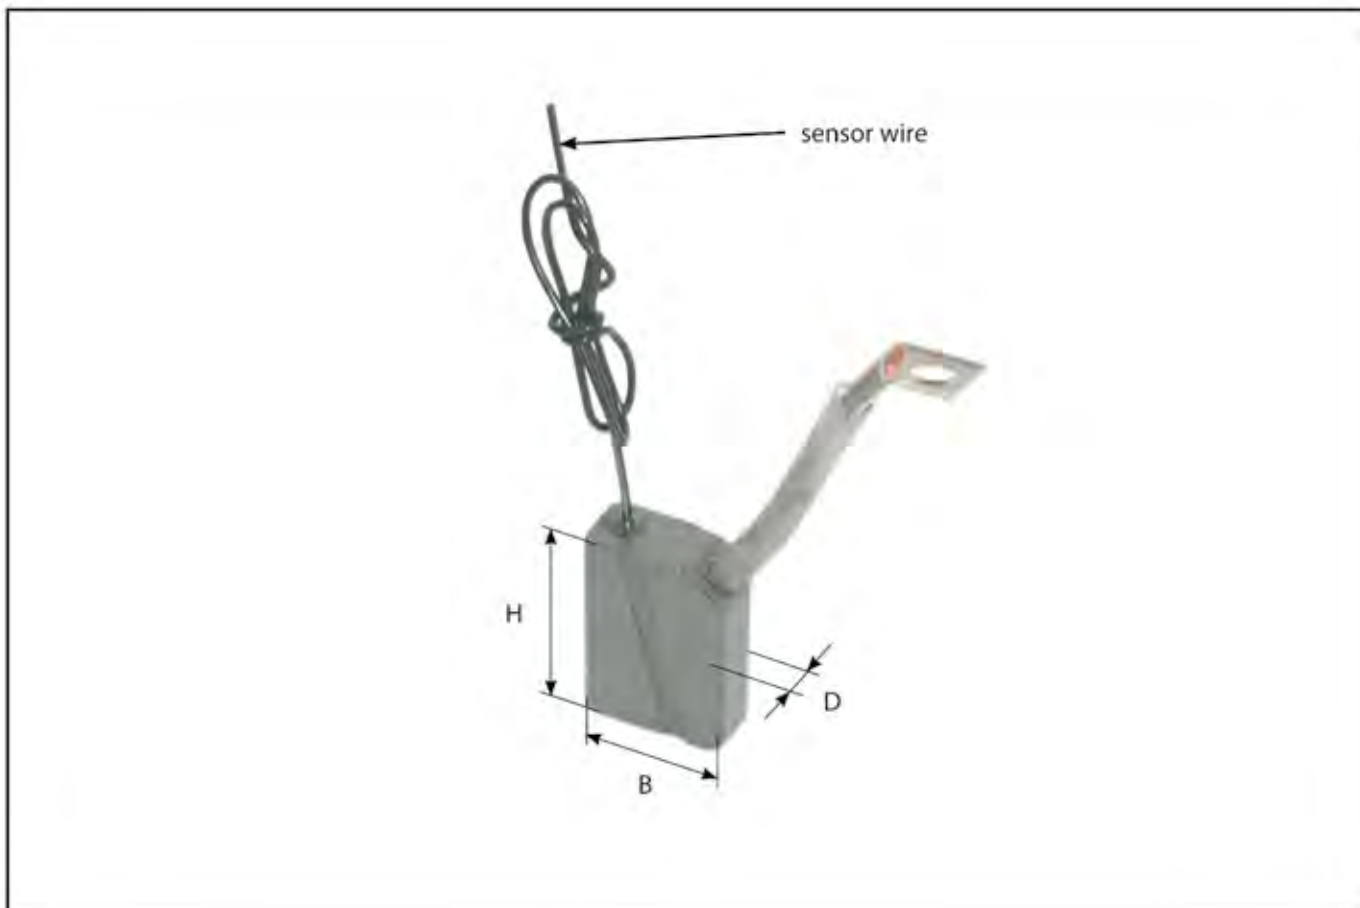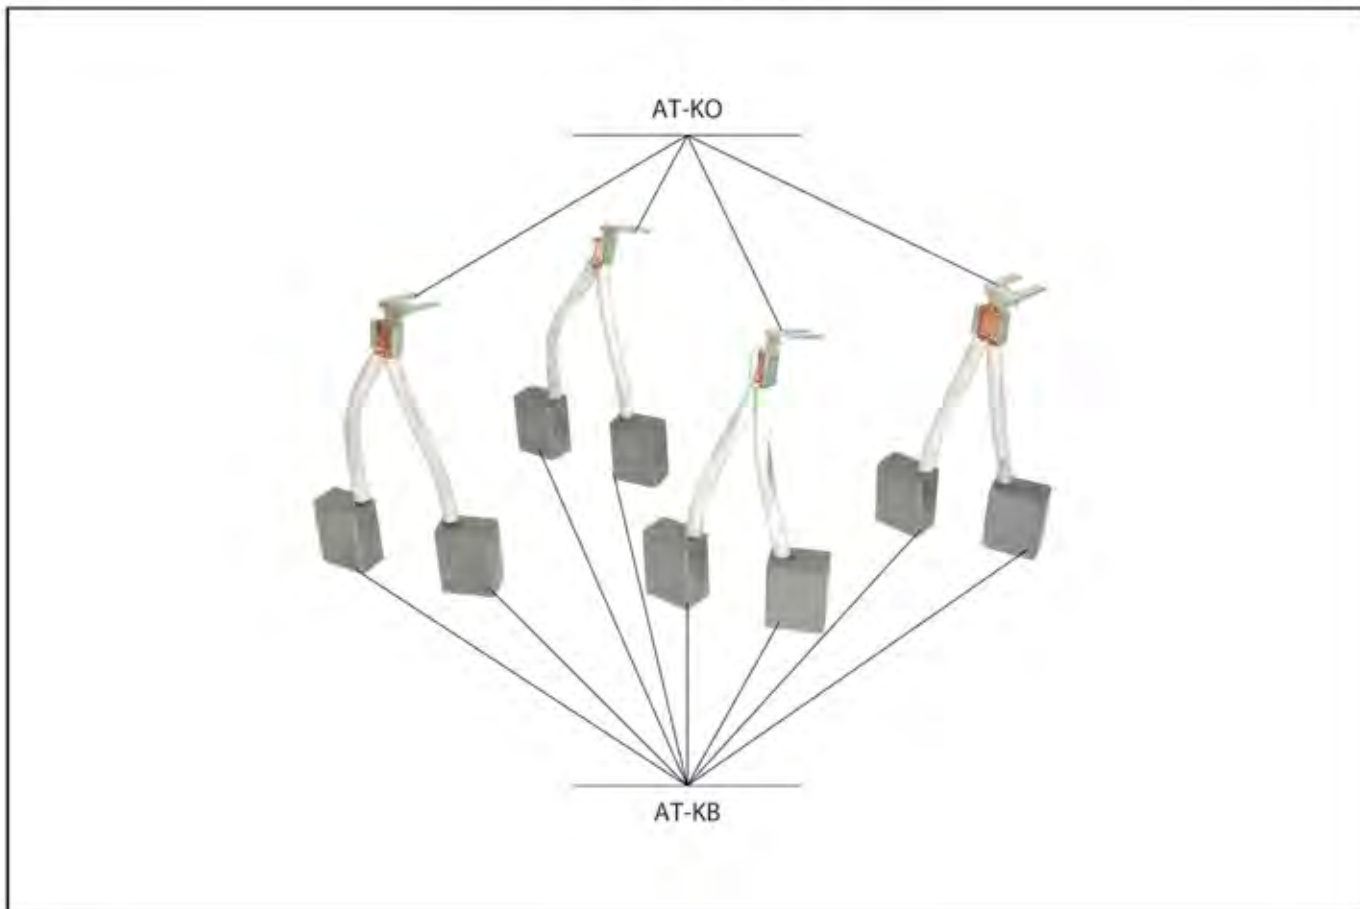

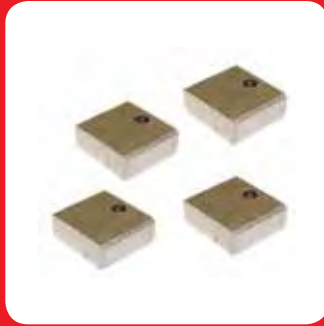


3

BRUSHES & BRUSH KITS

Look up
these parts via



used for: **ALLIS CHALMERS-KALMAR AC**

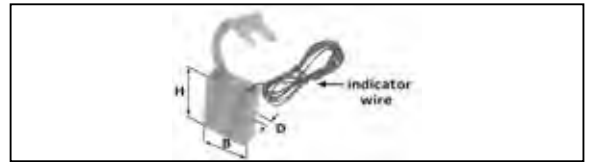


Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E1	6,5	10,0	17,0		122TA3868
	6,5	19,0	16,0		122TA3867
E2	5,0	7,0	15,0		122TA3871
	5,0	8,0	18,5		122TA3872
	5,0	8,0	19,0		140TA4401
	5,0	8,0	23,0		122TA3870
	6,0	7,0	20,0		122TA3873
	6,0	7,0	20,0		122TA3874
	6,0	22,0	24,0		140TA4402
	7,0	10,0	18,0		122TA3876
	7,0	11,0	19,0		122TA3877
	7,0	11,0	19,0		122TA3880



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **ALLIS CHALMERS-KALMAR AC**

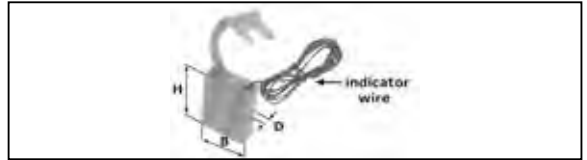

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	7,0	12,0	16,5		122TA3875
	7,0	14,0	16,0		122TA3879
	7,0	14,0	16,0		122TA3878
	7,0	16,0	14,0		140TA4403
	7,0	19,0	15,5		140TA4404
	7,0	22,0	20,0		122TA3881
	8,0	9,5	19,5		140TA4405
	8,0	16,0	25,0		140TA4406
	8,0	24,5	21,0		122TA3882
	9,0	18,5	20,0		140TA4407
	9,0	19,0	21,0		140TA4408
	9,5	20,5	30,0		122TA3884



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **ALLIS CHALMERS-KALMAR AC**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	9,5	31,5	32,0		140TA4409
	10,0	25,0	20,0		140TA4410
	12,0	20,0	32,0		122TA3886
	12,0	32,0	37,0		122TA3885
	12,0	39,5	25,5		140TA4411
	16,0	20,0	32,0		122TA3887
E4	7,0	25,0	29,0		140TA4412
	8,0	32,0	30,0		122TA3888
	10,0	20,0	20,0		122TA3889
	10,0	25,0	33,0		140TA4413
	12,0	20,0	32,0		122TA3890
	12,0	32,0	32,0		122TA3891



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **ALLIS CHALMERS-KALMAR AC**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	12,5	31,5	41,0		140TA4414
	14,0	51,0	36,0		140TA4415
	16,0	24,5	33,0		140TA4416
	16,0	24,5	33,5		122TA3893
	16,0	25,0	32,0		140TA4417
	16,0	25,0	33,0		140TA4418
	16,0	31,5	33,0		140TA4419
	16,0	32,0	40,0		122TA3892
	16,0	40,0	40,0		140TA4420
M2	11,0	25,0	35,0		122TA3894
	12,5	28,0	36,0		122TA3895
	13,0	28,5	38,0		140TA4421



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **ALLIS CHALMERS-KALMAR AC**

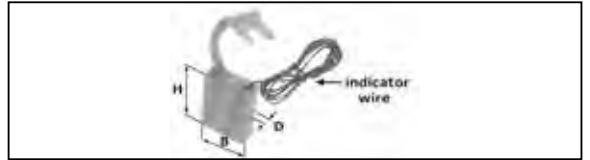


Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
M2	13,0	32,0	34,0		140TA4422
	16,0	28,0	44,5		122TA3896
	16,0	28,5	44,5	yes	122TA3899
	16,0	32,0	40,0		122TA3897
	16,0	44,5	38,0		122TA3898
	19,0	32,0	44,0		140TA4423



used for: **ALLIS CHALMERS-KALMAR AC**




Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	6,0	22,0	25,0		121TA2190
	6,0	27,5	30,0		121TA2189
	7,0	19,0	16,5		141TA3619
	8,0	20,0	22,0		121TA2192
	8,0	28,0	32,0		141TA3620
	8,5	19,0	14,5		121TA2194
	8,5	19,0	16,5		141TA3621
	8,5	19,0	17,0		141TA3622

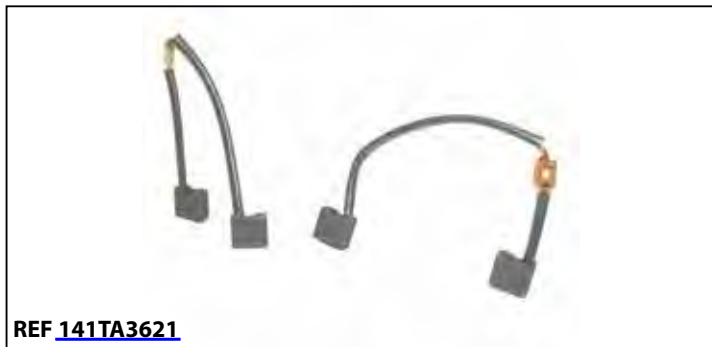


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **ALLIS CHALMERS-KALMAR AC**

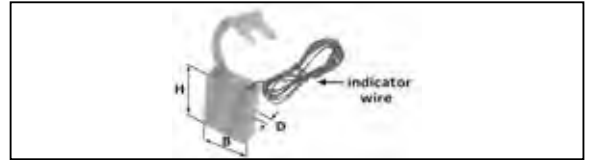

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	9,0	13,0	25,5		140TA9185
	9,0	13,0	25,5		141TA3623
	9,0	26,0	25,5		141TA1083
	9,5	22,0	25,0		140TA9187
	10,0	25,5	35,0		141TA3624
	10,0	25,5	35,0		141TA3625
	12,5	32,0	35,5		141TA3626
8	7,0	22,0	19,5		140TA9188

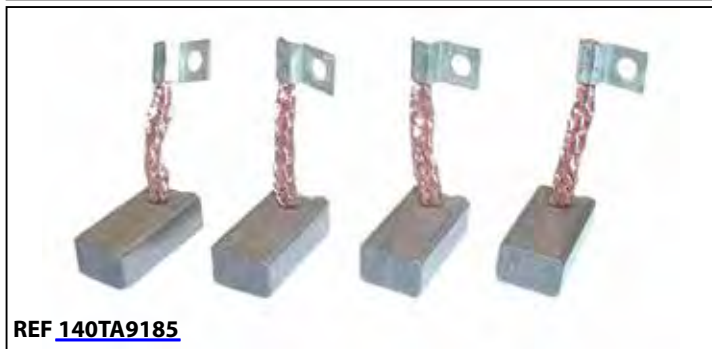

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **ALLIS CHALMERS-KALMAR AC**




Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	7,0	22,0	20,0		141TA3627
	12,5	15,5	35,0		141TA3628
	14,0	25,5	35,0		141TA1087
	14,0	25,5	35,5		141TA3629
	14,0	25,5	37,5		141TA3630
	16,0	24,5	33,5		141TA1088
	16,0	31,5	44,0		141TA3631



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **ATLET-LAFIS**

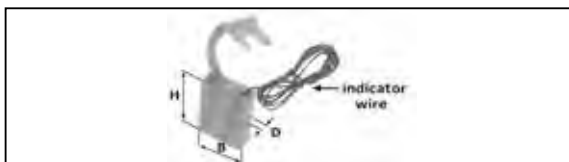

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E1	7,0	19,0	16,5		122TA6020
E2	8,0	12,5	22,0		140TA4424
	8,0	16,0	22,0		140TA4425
	8,0	20,0	22,5		140TA4426
	9,0	13,0	26,0		140TA4427
	9,0	17,5	16,0		122TA3901
	9,0	20,0	28,5		122TA3902
	10,0	12,0	22,0		140TA4428
	10,0	12,0	23,0		122TA3905
	10,0	20,0	22,0		122TA3903
	10,0	20,0	25,0		140TA4429
	10,0	25,0	22,5		140TA4430



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **ATLET-LAFIS**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E3	8,0	28,0	30,5		140TA4431
	10,0	25,0	25,0		140TA4432
E4	6,0	22,0	25,5		122TA3908
	6,0	28,0	30,5		122TA3907
	6,0	28,0	30,5		140TA4433
	8,0	28,0	30,5		122TA3909
	8,0	28,0	31,0		140TA4434
	9,0	20,0	22,0		140TA4435
	10,0	24,0	32,0		140TA4436
	10,0	25,0	22,0		140TA4437
	10,0	25,0	30,0		140TA4438
	10,0	25,0	30,5		140TA4439



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **ATLET-LAFIS**

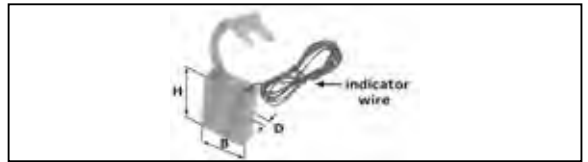

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	10,0	26,0	30,0		140TA4440
	10,0	28,0	30,0		140TA4441
	10,0	32,0	32,0		140TA4442
	12,0	32,0	33,0		140TA4443



used for: **ATLET-LAFIS**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
2	7,5	22,0	22,0		141TA3632
	8,0	8,0	19,5		141TA3633
	10,0	12,5	22,0		141TA3634
4	6,0	28,0	30,5		141TA3635
	7,0	12,5	20,5		141TA3636
	7,0	19,0	16,5		141TA3637
	8,0	16,0	25,0		141TA3640
	8,0	27,5	30,5		121TA2208




Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **ATLET-LAFIS**




Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	8,0	28,0	30,5		141TA3638
	8,0	28,0	30,5		141TA3639
	8,0	28,0	30,5		140TA9198
	8,0	28,0	32,0		140TA9199
	9,0	13,0	25,5		141TA3647
	9,0	16,0	17,0		141TA3645
	9,0	16,0	17,0		140TA9195
	9,0	17,5	13,0		141TA3641

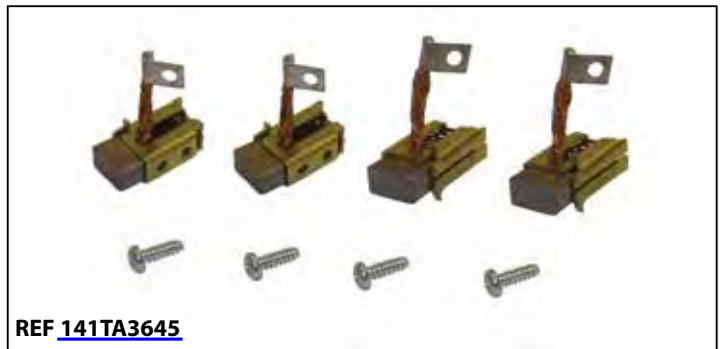

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **ATLET-LAFIS**

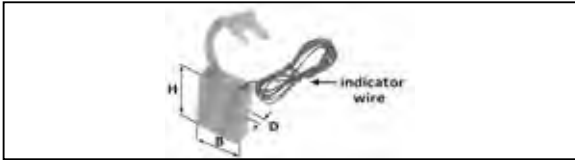

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	9,0	17,5	16,0		141TA3642
	9,0	19,5	13,0		141TA3643
	9,0	20,0	29,0		141TA3648
	9,0	26,0	26,0		141TA3644
	9,0	30,0	28,0		140TA9200
	10,0	25,0	23,0		140TA9196
	10,0	25,0	23,0		141TA3649
	12,5	31,5	27,5		141TA3650






Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **ATLET-LAFIS**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	7,0	22,0	20,0		141TA3651
	10,0	20,0	25,0	yes	141TA3654
	10,0	20,0	25,5		141TA3652
	10,0	20,0	29,0		141TA3655
	10,0	32,0	25,0		141TA3653
	12,0	20,0	30,5		141TA3656
	12,0	32,0	32,0		141TA3657
	12,5	20,0	28,0		141TA3660

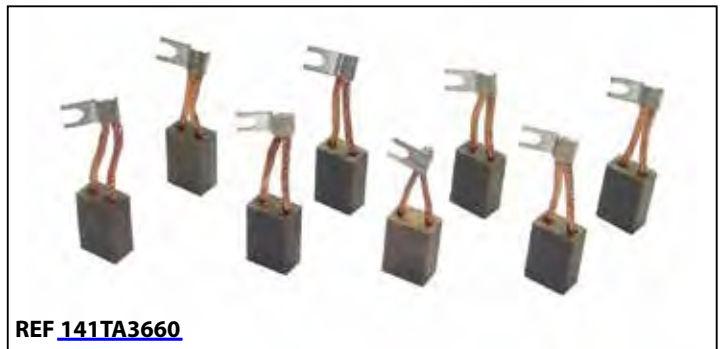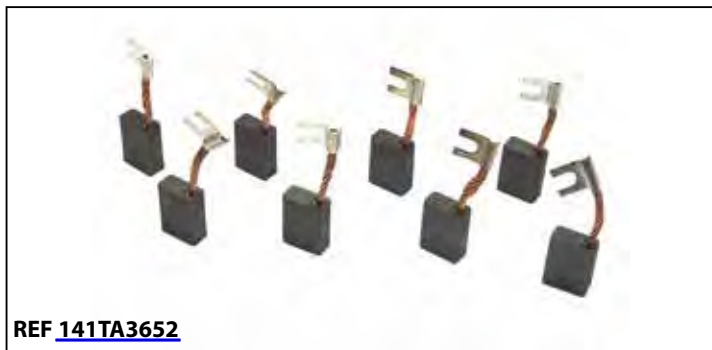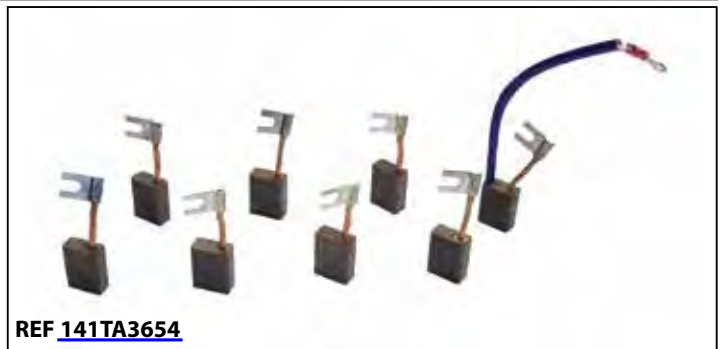


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.


used for: **ATLET-LAFIS**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	12,5	20,0	28,0	yes	141TA3661
	12,5	25,0	32,0	yes	141TA3658
	12,5	25,0	40,0		141TA3659

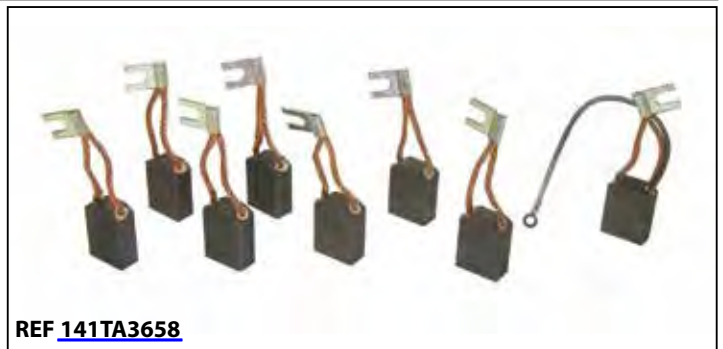


used for: **BALKANCAR**

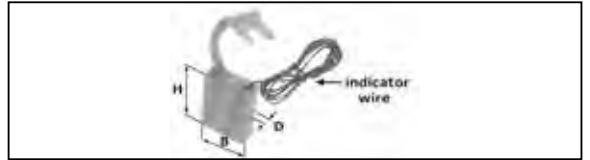

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	6,0	16,0	21,0		140TA4444
E4	9,0	26,5	25,0		140TA4445
	9,0	26,5	26,5		122TA3910
	10,0	20,0	32,0		140TA4446
	10,0	20,0	32,0		122TA3911
	12,5	25,0	32,0		140TA4447
	12,5	25,0	35,0		140TA4448



used for: **BAUMANN**

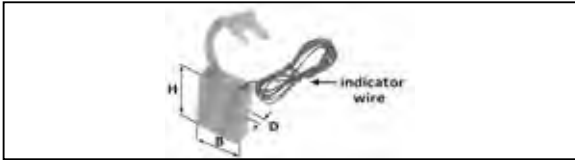

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	16,0	24,5	33,5		140TA4449
	16,0	40,0	30,0		140TA4450



used for: **BAUMANN**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
2	8,5	20,0	30,0		140TA9207
4	8,0	20,0	25,0		140TA9208
	8,0	20,0	33,0		121TA2223
	10,0	32,0	32,0		140TA9211
	12,5	20,0	32,0	yes	140TA9209
	16,0	24,5	33,0		140TA9210
8	10,0	20,0	25,0		140TA9212
	10,0	32,0	30,0		141TA3662



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.


used for: **BAUMANN**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	12,0	20,0	25,0		140TA9213
	12,5	20,0	32,0	yes	140TA9214
16	12,5	20,0	30,0	yes	140TA9215




used for: **BISHAMON**

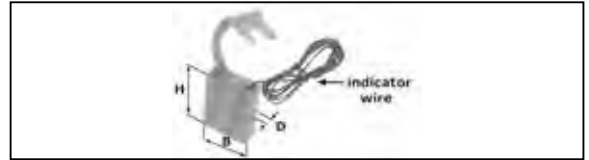

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	16,0	18,0	29,0		140TA4451
E4	8,0	22,0	18,0		140TA4452
	8,0	22,0	32,0		140TA4453
	9,0	25,0	25,0		122TA3912




used for: **BOBCAT**

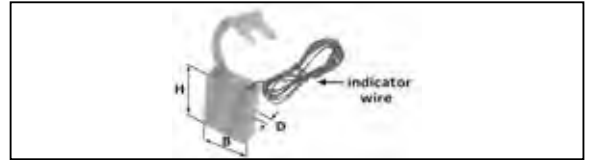


Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E1	6,5	19,0	16,0		140TA4454
	8,0	19,0	19,0		140TA4455
	10,0	19,0	19,0		140TA4456
	10,0	19,0	19,0		140TA4457
E2	6,0	7,0	20,0		140TA4458
	7,0	18,0	18,0		140TA4459
	8,0	25,0	20,0		140TA4460
	8,0	25,0	20,0		140TA4461
M2	16,0	31,5	45,0		140TA4462




used for: **BOBCAT**

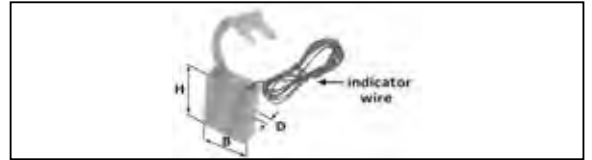

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	9,0	13,0	25,5		140TA9216
	12,5	32,0	30,0		140TA9217

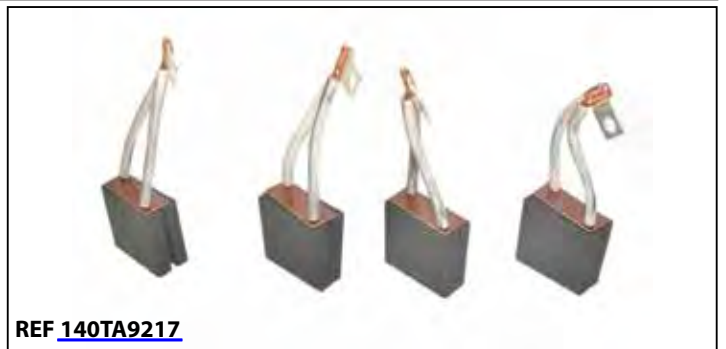


used for: **BRUNILIFT**

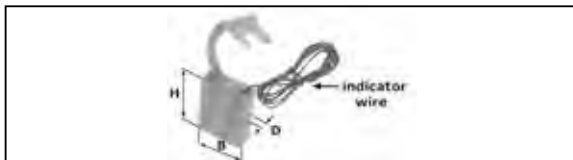

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E1	6,5	19,0	13,0		140TA4463
E2	9,0	20,0	29,0		122TA3913
E4	8,0	19,0	22,0		140TA4464
	8,0	32,0	32,0		122TA3914
	12,5	32,0	25,0		122TA3915



used for: **BT**

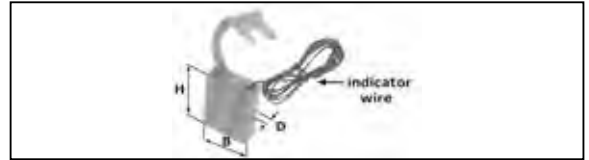


Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E1	20,0	20,0	20,0		122TA3916
E2	5,0	7,0	15,0		140TA4465
	6,0	9,5	20,0		140TA4466
	6,0	12,5	22,0		140TA4467
	6,0	16,0	20,0		140TA4468
	6,5	21,0	25,0		140TA4469
	8,0	8,0	16,0		140TA4470
	8,0	8,0	20,0		140TA4471
	8,0	9,5	17,0		116TA5048
	8,0	9,5	18,0		140TA4472
	8,0	9,5	19,5		140TA4473
	8,0	12,0	23,0		140TA4474



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **BT**

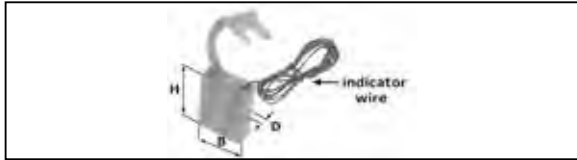

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	8,0	12,5	22,0		122TA3918
	8,0	22,0	28,5		140TA4475
	8,0	25,0	21,0		140TA4476
	9,0	13,0	25,0		140TA4477
	9,0	13,0	25,0		140TA4478
	9,0	13,0	25,0		122TA3920
	9,0	13,0	25,5		140TA4479
	9,0	13,0	25,5		122TA3922
	9,0	20,0	28,5		122TA3923
	9,0	25,0	23,0		140TA4480
	9,5	16,0	29,0	yes	140TA4481
	9,5	20,5	30,0		140TA4482



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **BT**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	9,5	30,0	21,0		140TA4483
	9,5	31,5	32,0		140TA4484
	10,0	20,0	20,0		140TA4485
	10,0	20,0	20,0		140TA4486
	10,0	20,0	20,5		140TA4487
	10,0	20,0	22,0		140TA4488
	10,0	20,0	25,0		140TA4489
	10,0	20,0	25,0		140TA4490
	10,0	20,0	26,0		140TA4491
	10,0	20,0	26,0		122TA3926
	10,0	25,0	20,0		122TA3924
	10,0	25,0	21,0		122TA3925



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **BT**

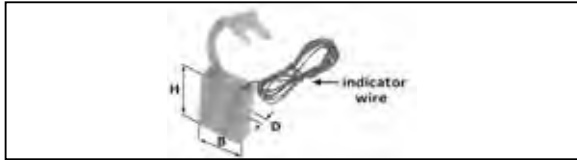

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	10,0	30,0	21,0		140TA4492
	12,0	17,0	15,0		140TA4493
	12,0	32,0	28,0		140TA4494
	12,0	39,5	25,5		140TA4495
	12,5	16,0	32,0		140TA4496
	12,5	16,0	36,5		140TA4497
	12,5	25,0	32,0		140TA4498
	12,5	25,0	33,0		140TA4499
	12,5	40,0	25,5		140TA4500
	16,0	16,0	33,0		140TA4501
	16,0	20,0	26,0		140TA4502
	16,0	25,0	42,0		140TA4503



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **BT**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E3	6,0	28,0	30,5		140TA4504
	6,0	28,0	31,0		140TA4505
	8,0	28,0	30,5		140TA4506
	8,0	28,0	30,5		140TA4507
	8,0	32,0	31,5		122TA3934
	15,0	40,0	35,0		140TA4508
E4	6,0	22,0	22,0		140TA4509
	7,5	22,0	22,5		140TA4510
	8,0	20,0	32,0		140TA4511
	8,0	22,0	21,5		140TA4512
	8,0	25,0	23,0		122TA3936
	8,0	32,0	25,0		140TA4513



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **BT**

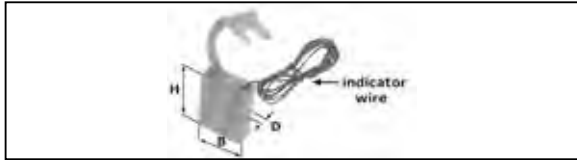


Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	8,0	32,0	32,0		122TA3937
	9,0	25,0	25,0		140TA4514
	9,0	26,0	25,0		140TA4515
	9,0	26,0	25,5		140TA4516
	10,0	20,0	18,0		140TA4517
	10,0	20,0	22,0		140TA4518
	10,0	20,0	22,0		140TA4519
	10,0	25,0	20,0		140TA4520
	10,0	25,0	22,0		122TA3938
	10,0	25,0	33,0		140TA4521
	10,0	31,5	32,5	yes	140TA4522
	10,0	32,0	32,0		140TA4523



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **BT**

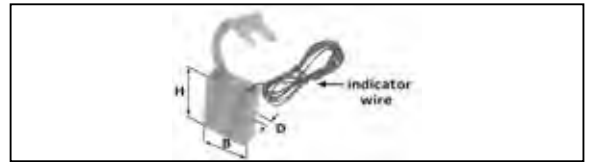


Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	10,0	32,0	32,0		140TA4524
	10,0	32,0	32,0		140TA4525
	10,0	32,0	32,0	yes	140TA4526
	10,0	32,0	32,0	yes	140TA4527
	10,0	32,0	40,0		140TA4528
	10,0	32,0	40,0		140TA4529
	10,0	32,0	40,0	yes	140TA4530
	10,0	32,0	40,0	yes	140TA4531
	10,0	40,0	30,0		140TA4532
	12,0	20,0	32,0		140TA4533
	12,0	25,0	28,5		140TA4534
	12,0	25,0	32,0		140TA4535



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **BT**

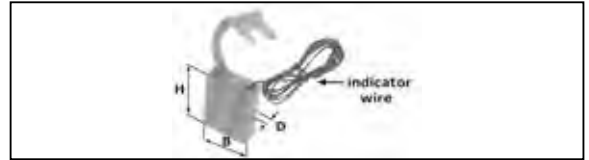


Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	12,0	25,0	32,5		140TA4536
	12,0	25,0	33,0	yes	140TA4537
	12,0	32,0	32,0		140TA4538
	12,5	17,0	39,0		122TA3946
	12,5	25,0	33,0		140TA4539
	12,5	25,0	39,0		140TA4540
	12,5	31,5	41,0		140TA4541
	12,5	31,5	41,0		140TA4542
	12,5	31,5	44,5		122TA3947
	12,5	32,0	32,0		140TA4543
	12,5	32,0	32,0		140TA4544
	12,5	32,0	34,0	yes	140TA4545



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **BT**

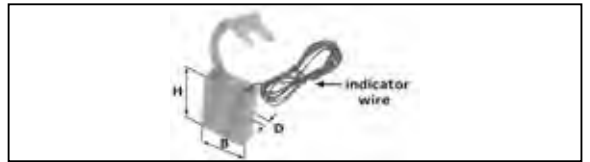


Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	12,5	32,0	40,0		140TA4546
	12,5	32,0	40,5		140TA4547
	12,5	40,0	25,5		140TA4548
	12,5	40,0	45,0	yes	140TA4549
	12,5	47,5	42,0	yes	140TA4550
	14,0	16,0	35,0		140TA4551
	14,0	25,0	35,0		140TA4552
	14,0	25,5	36,0		140TA4553
	14,5	30,0	21,5		140TA4554
	16,0	20,0	29,0		140TA4555
	16,0	24,5	33,0		140TA4556
	16,0	24,5	33,0		140TA4557



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **BT**

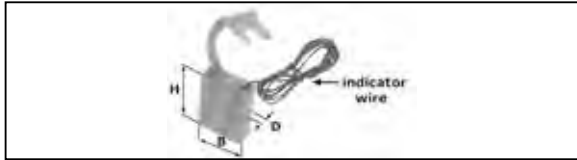

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	16,0	24,5	33,5		140TA4558
	16,0	25,0	32,0		140TA4559
	16,0	25,0	33,0		140TA4560
	16,0	25,0	33,0		140TA4561
	16,0	25,5	30,0		140TA4562
	16,0	31,5	33,0		140TA4563
	16,0	31,5	33,0		140TA4564
	16,0	32,0	35,0		140TA4565
	16,0	32,0	50,0		140TA4566
	16,0	37,0	35,0		122TA3949
	16,0	40,0	35,0		140TA4567
	16,0	40,0	35,0		122TA3952



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.


used for: **BT**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	16,0	40,0	50,0		140TA4568
M2	8,0	20,0	25,0		140TA4569
	10,0	20,0	21,0		140TA4570
	10,0	20,0	21,0		140TA4571
	10,0	20,0	21,0		140TA4572
	10,0	20,0	25,0		140TA4573
	13,0	28,5	36,0	yes	140TA4574
	13,0	28,5	36,0	yes	140TA4575
	16,0	28,5	44,5	yes	140TA4576



used for: **BT**

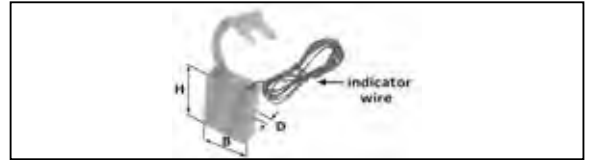


Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
2	5,0	8,0	19,5		140TA9218
	6,0	22,5	22,5		141TA3664
	6,5	10,0	15,0		141TA3665
	7,5	22,0	22,0		140TA9225
	8,0	8,0	19,5		140TA9219
	8,0	9,5	20,0		140TA9220
	8,0	12,5	22,0		140TA9223
	8,0	16,0	20,0		141TA3667

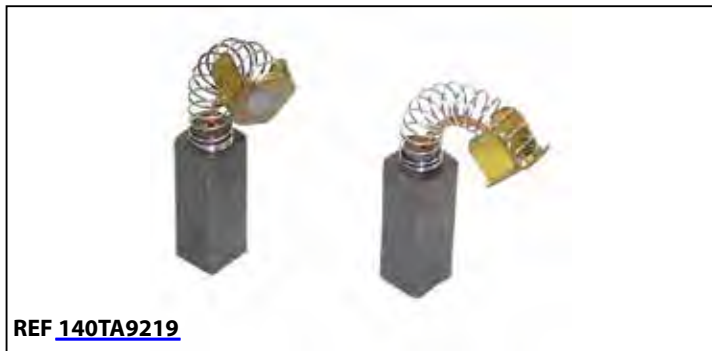


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **BT**

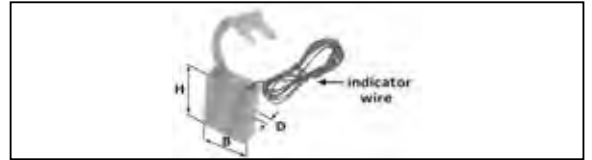


Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
2	8,0	22,0	32,0		141TA3666
	8,0	22,0	32,0		141TA3668
4	6,0	12,0	11,5		141TA3671
	6,0	12,5	22,0		141TA3672
	6,0	22,0	25,0		141TA3669
	6,0	27,5	30,5		141TA3670
	6,0	28,0	30,5		140TA9251
	6,5	12,5	22,0		140TA9231

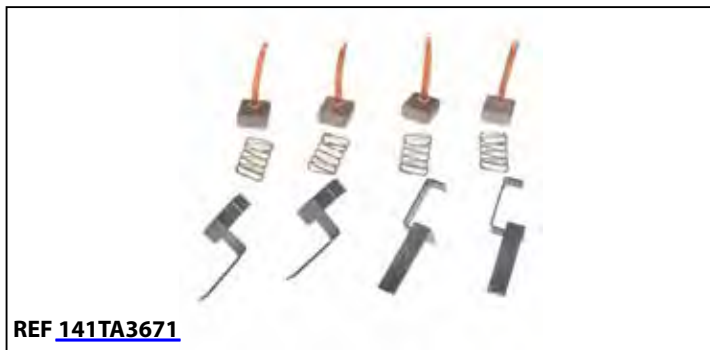

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **BT**

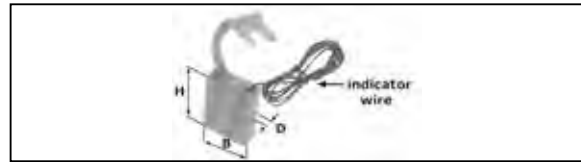

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	6,5	19,0	16,0		141TA3673
	7,0	10,0	12,5		121TA2224
	7,0	12,5	19,0		116TA5029
	7,0	12,5	20,5		121TA2225
	7,0	19,0	16,5		141TA3674
	8,0	10,0	20,0	yes	141TA3677
	8,0	12,5	22,0		141TA3675
	8,0	12,5	22,0		141TA3678



REF [141TA3673](#)



REF [121TA2224](#)



REF [116TA5029](#)



REF [121TA2225](#)




REF [141TA3674](#)



REF [141TA3677](#)



REF [141TA3675](#)

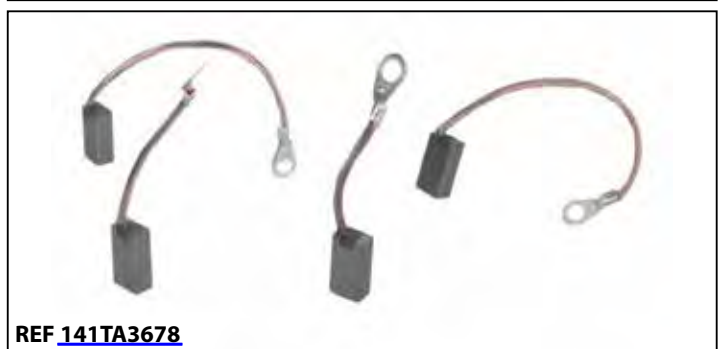


REF [141TA3678](#)

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **BT**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	8,0	16,0	25,0		140TA9236
	8,0	19,0	19,0		141TA3690
	8,0	19,0	22,0		141TA3679
	8,0	19,0	22,5		141TA3676
	8,0	20,0	25,0		141TA3680
	8,0	20,0	25,0		141TA3687
	8,0	20,0	25,0		141TA3688
	8,0	20,0	25,0		141TA3689

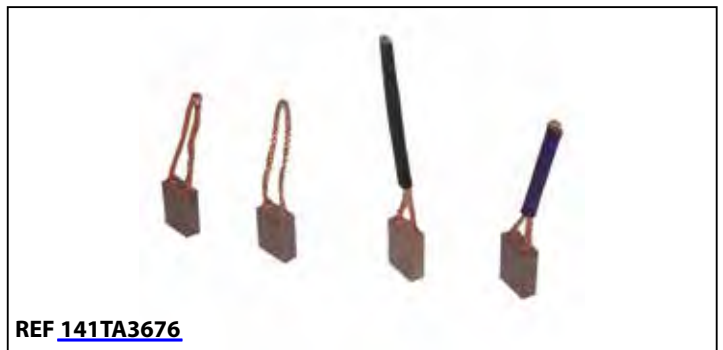


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **BT**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	8,0	20,0	25,5		141TA3681
	8,0	20,0	26,0		140TA9242
	8,0	20,0	27,0		141TA3682
	8,0	28,0	30,5		140TA9250
	8,0	28,0	32,0		141TA3683
	8,0	32,0	30,0		141TA3686
	8,0	32,0	32,0		141TA3684
	8,0	32,0	32,0		141TA3685

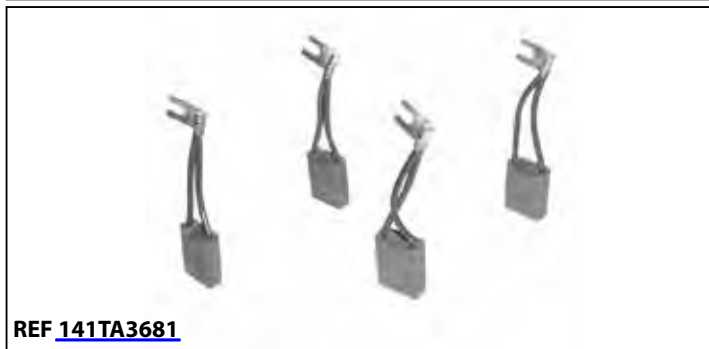


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **BT**




Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	8,5	11,5	16,0		141TA3691
	8,5	19,0	14,0		141TA3692
	8,5	19,0	16,5		141TA3693
	8,5	19,0	16,5		141TA3694
	9,0	13,0	25,5		141TA3695
	9,0	13,0	25,5		141TA3700
	9,0	13,0	25,5		141TA3701
	9,0	13,0	26,0		141TA3702


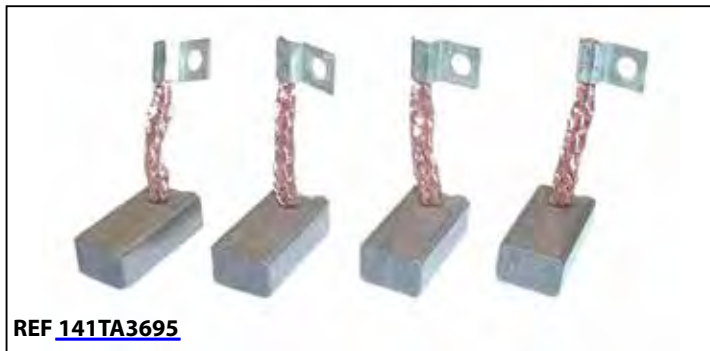


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **BT**

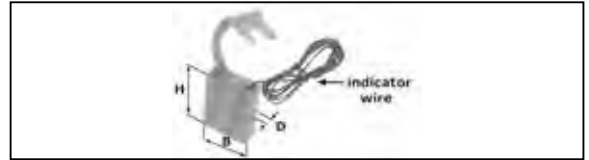


Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	9,0	16,0	17,0		141TA3703
	9,0	16,0	18,0		121TA2236
	9,0	17,5	16,0		141TA3696
	9,0	17,5	25,5		141TA3697
	9,0	19,0	14,0		141TA3698
	9,0	19,5	13,0		141TA3699
	9,0	19,5	16,0		141TA3704
	9,0	25,5	25,5		141TA3705


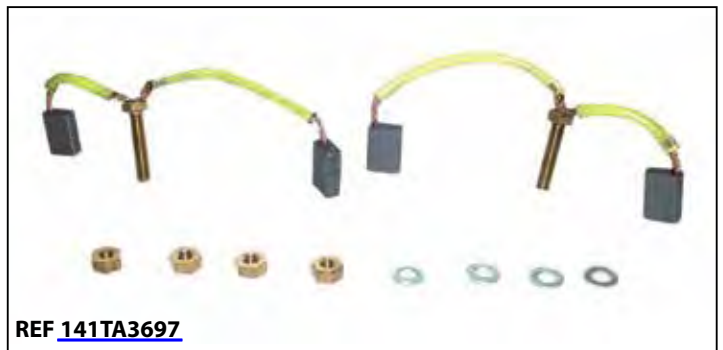
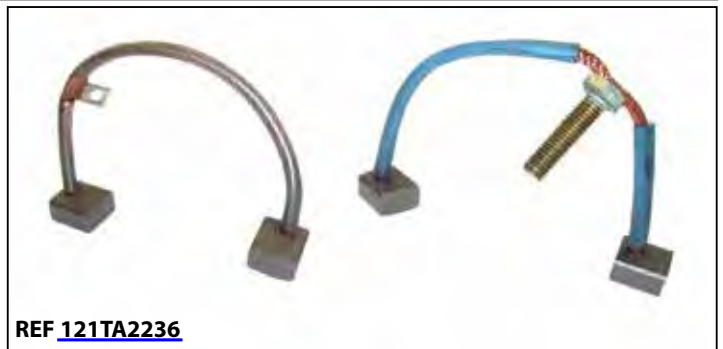


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **BT**

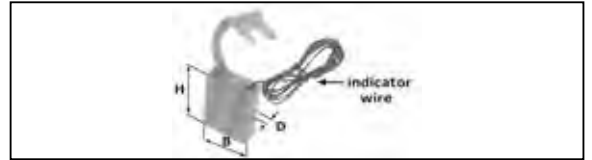


Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	9,0	26,0	25,5		141TA3706
	9,0	26,0	26,0		140TA9248
	9,0	30,0	28,0		140TA9254
	9,5	31,5	27,0		141TA3707
	9,5	32,0	27,0		141TA3708
	10,0	16,0	20,0		141TA3713
	10,0	19,5	26,0		141TA3709
	10,0	20,0	20,5		106TA7525

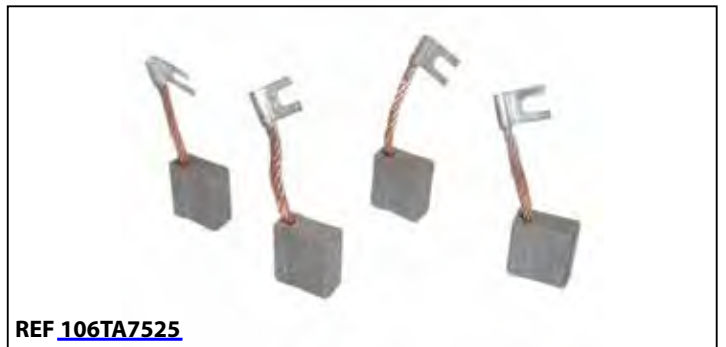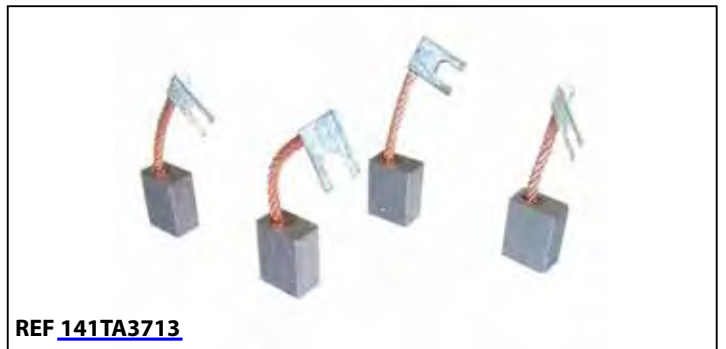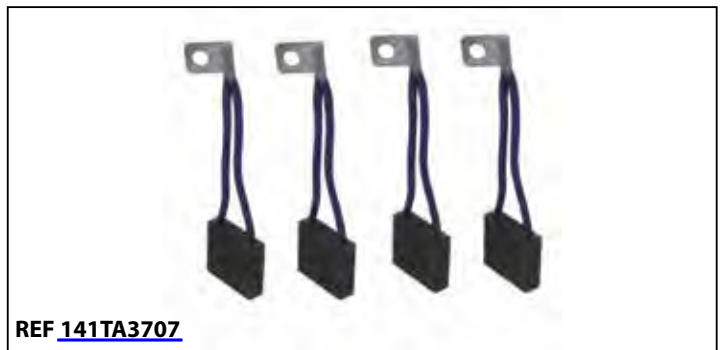

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **BT**

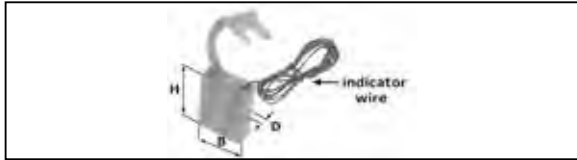

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	10,0	20,0	26,0		141TA3710
	10,0	20,0	26,0		141TA3714
	10,0	24,5	20,5		140TA9244
	10,0	25,0	22,0		141TA3717
	10,0	25,0	23,0		140TA9245
	10,0	25,0	23,0		141TA3716
	10,0	25,0	23,0		141TA3718
	10,0	25,0	23,5		141TA3711




Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **BT**




Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	10,0	25,5	35,0		141TA3723
	10,0	28,0	30,0	yes	141TA3712
	10,0	28,0	30,0		140TA9249
	10,0	28,0	30,5		140TA9252
	10,0	28,0	30,5		141TA3719
	10,0	33,0	23,0		140TA9258
	10,0	39,5	35,0		140TA9259
	10,0	40,0	30,0		141TA3720

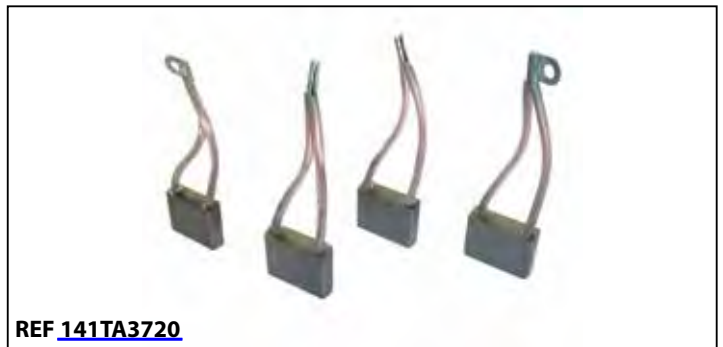

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **BT**

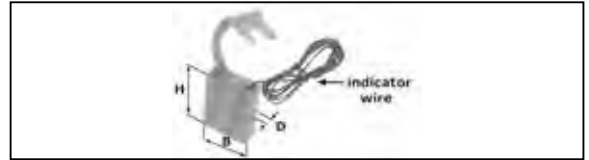


Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	10,0	40,0	30,0		141TA3721
	10,0	50,0	30,0	yes	141TA3722
	11,0	20,0	24,5		141TA3724
	11,0	20,0	25,0		140TA9241
	12,0	32,0	32,0		141TA3726
	12,0	36,0	26,5		141TA3725
	12,5	19,5	25,5		141TA3727
	12,5	31,5	32,0		141TA3728




Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **BT**

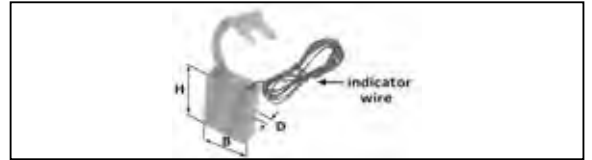

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	12,5	31,5	32,0		141TA3729
	12,5	32,0	30,0		141TA3731
	12,5	32,0	35,5		141TA3732
	12,5	32,0	35,5		141TA3733
	12,5	32,0	40,0	yes	141TA3730
	16,0	24,5	33,0		141TA3735
	16,0	31,5	33,0		140TA9256
	16,0	31,5	33,0		141TA3736

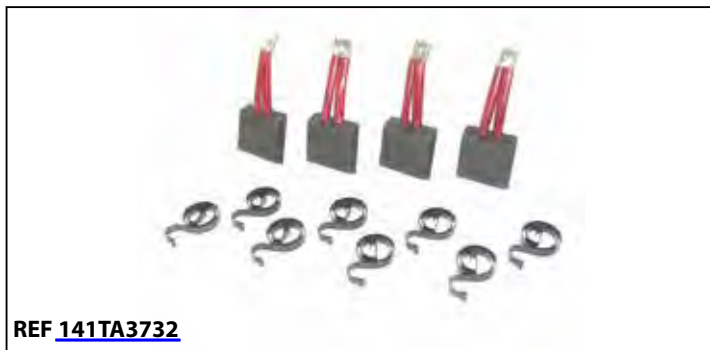

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **BT**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	16,0	32,0	32,0		141TA3734
	17,0	35,0	30,0		141TA3737
6	9,0	19,0	24,0		140TA9261
	9,0	19,0	24,0		140TA9260
8	7,0	22,0	19,5		141TA3738
	7,0	22,0	19,5		141TA3739
	9,0	13,0	25,5		140TA9262
	9,5	19,0	22,5		140TA9265



REF [141TA3734](#)



REF [141TA3737](#)



REF [140TA9261](#)



REF [140TA9260](#)



REF [141TA3738](#)



REF [141TA3739](#)




REF [140TA9262](#)







REF [140TA9265](#)

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **BT**

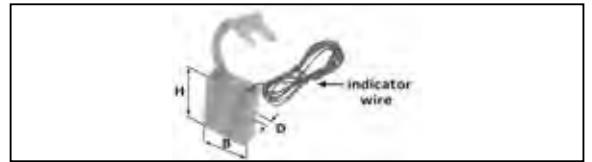

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	9,5	27,5	30,5		141TA3740
	10,0	19,5	25,0		140TA9267
	10,0	20,0	20,5		121TA2246
	10,0	20,0	21,0		140TA9266
	10,0	20,0	25,5		141TA3741
	10,0	20,0	25,5		141TA3742
	10,0	20,0	26,0		141TA3743
	10,0	20,0	29,0		140TA9270

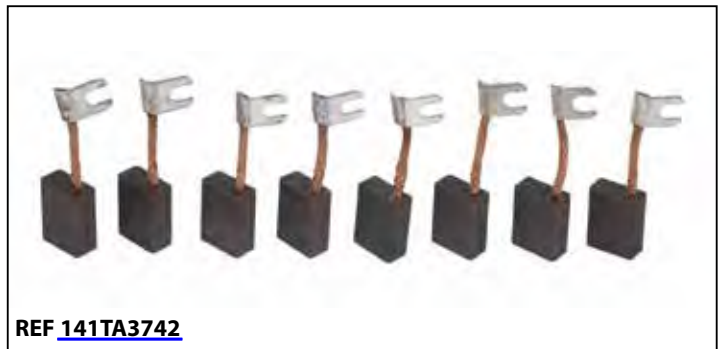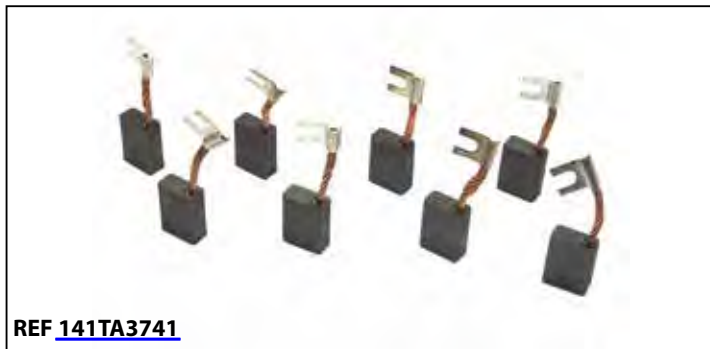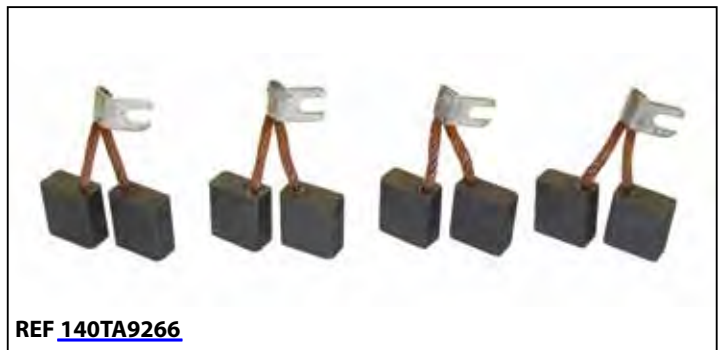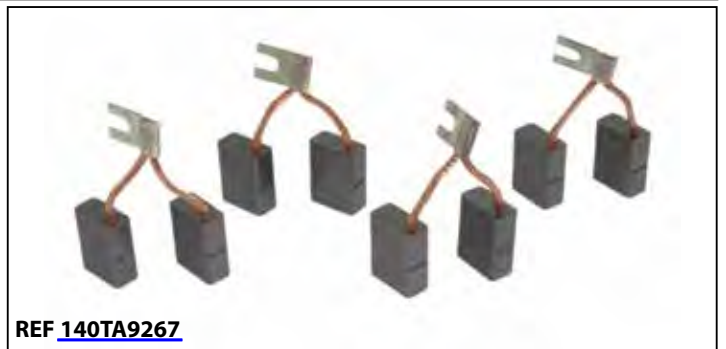


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **BT**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	10,0	24,0	32,0	yes	141TA3744
	10,0	26,0	30,5		141TA3746
	10,0	32,0	32,5	yes	141TA3747
	10,5	25,5	35,0		141TA3748
	12,0	20,0	30,0		141TA3749
	12,0	32,0	32,0		140TA9282
	12,5	20,0	28,0		140TA9268
	12,5	20,0	28,0	yes	140TA9269


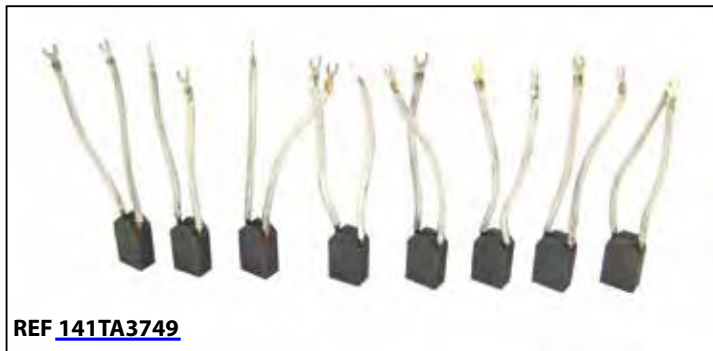


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **BT**




Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	12,5	25,0	32,0	yes	141TA3750
	12,5	25,0	32,0		121TA2248
	12,5	25,0	40,0		141TA3751
	12,5	32,0	32,0	yes	141TA3753
	12,5	32,0	32,0	yes	141TA3754
	12,5	32,0	40,0	yes	141TA3752
	14,0	25,0	35,5		141TA3756
	14,0	25,5	39,0		141TA3755

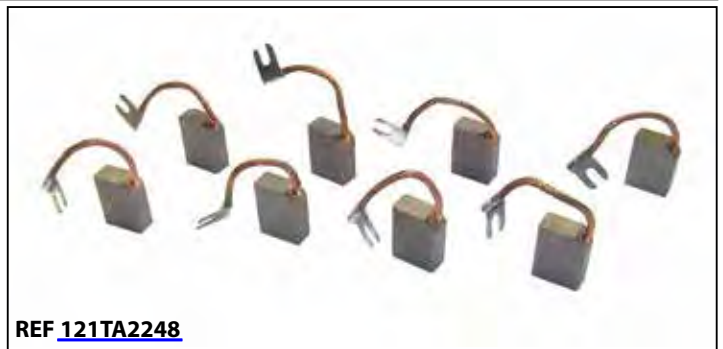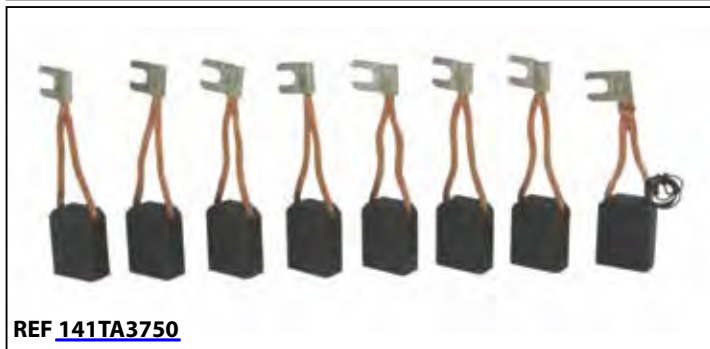

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.


used for: **BT**

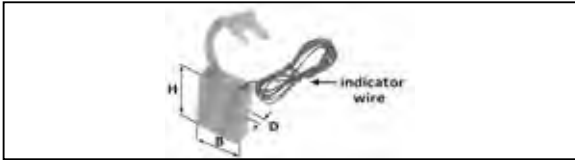

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	16,0	24,5	33,5		141TA3758
	16,0	31,5	45,0		141TA3757
	20,0	20,0	32,0		141TA3759




used for: **BULLI KAHL**

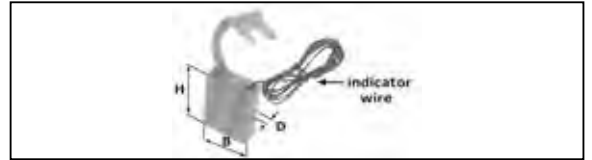

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	10,0	12,5	22,5		140TA4577



used for: **CHARLATTE**

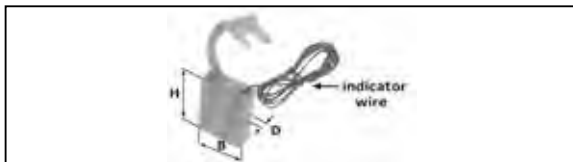


Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	8,0	20,0	25,0		140TA4578
E4	12,0	20,0	32,0		140TA4579
	12,5	20,0	32,0		140TA4580




used for: **CHARLATTE**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	6,0	22,0	25,0		141TA3760
	9,0	13,0	25,5		140TA9284
	10,0	12,5	22,5		141TA3761
	10,0	20,0	25,0		141TA3762
	10,0	20,0	26,0		140TA9286
8	12,5	20,0	32,0		141TA3763

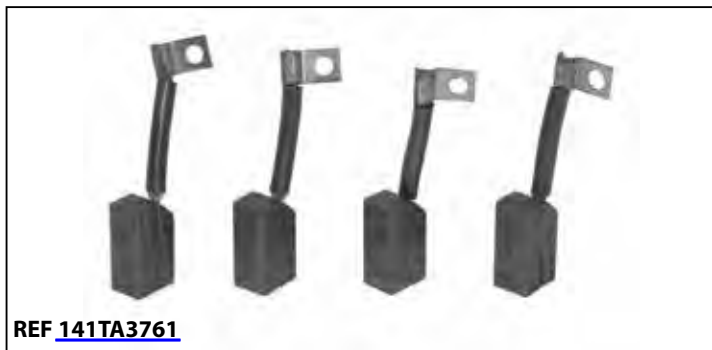


used for: **CLAAS-UNITRAC**

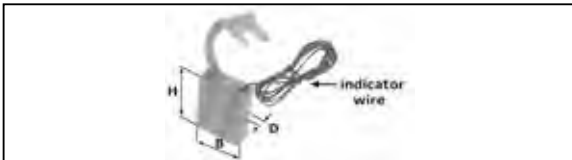

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	5,0	7,0	15,5		122TA4021



used for: **CLARK-SAMSUNG**

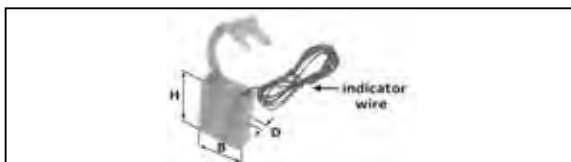


Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E1	6,0	19,0	16,0		122TA4022
	6,0	19,0	16,0		122TA4023
	6,5	12,0	17,0		140TA4582
	6,5	19,0	12,5		122TA4024
	6,5	19,0	16,0		140TA4583
	8,0	19,0	19,0		122TA7413
	10,0	19,0	19,0		122TA4027
	10,0	19,0	19,0		122TA4028
E2	5,0	8,0	18,0		122TA7414
	5,0	8,0	19,0		140TA4584
	5,0	8,0	20,0		122TA4031
	5,0	8,0	23,0		122TA4030



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **CLARK-SAMSUNG**

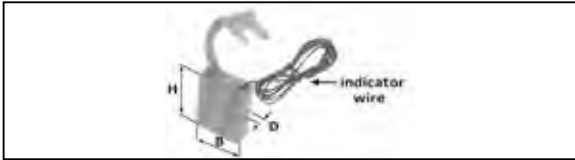


Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	5,5	19,0	19,0		140TA4581
	6,0	6,0	18,0		140TA4585
	6,0	7,0	20,0		122TA4033
	6,0	7,0	23,5		122TA4032
	6,0	12,5	22,0		122TA4034
	6,0	12,5	22,0		122TA4035
	6,0	22,0	24,0		140TA4586
	6,5	12,0	17,0		122TA7417
	6,5	12,0	18,0		122TA4036
	6,5	12,0	18,0		140TA4587
	7,0	10,0	17,0		140TA4588
	7,0	10,0	18,0		122TA4039



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **CLARK-SAMSUNG**

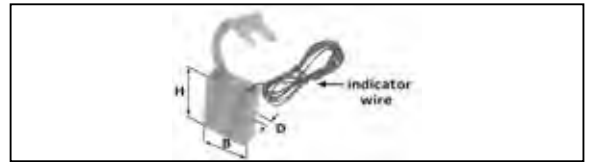


Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	7,0	12,0	17,0		122TA4041
	7,0	12,0	17,5		122TA7418
	7,0	18,0	18,0		122TA4038
	7,0	18,0	18,0		122TA4040
	7,0	19,0	15,5		140TA4589
	7,5	15,0	24,0		122TA4043
	8,0	12,5	22,0		122TA4049
	8,0	12,5	22,0	yes	140TA4590
	8,0	14,0	19,0		140TA4591
	8,0	22,0	25,5		140TA4592
	8,0	22,0	32,0		122TA4044
	8,0	25,0	20,0		122TA7424



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **CLARK-SAMSUNG**

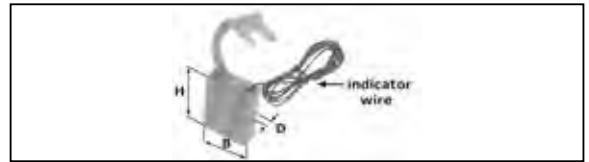

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	8,0	25,0	20,0		122TA4046
	8,0	32,0	30,0		122TA4048
	9,0	13,0	25,0		140TA4593
	9,0	13,0	26,0		140TA4594
	9,0	13,0	26,0		140TA4595
	9,0	17,0	30,0		122TA4051
	9,0	25,0	19,5		140TA4596
	9,0	25,0	22,5		140TA4597
	9,0	25,0	23,0		122TA4052
	9,0	25,0	25,0		122TA4050
	9,5	20,5	30,0		122TA4054
	9,5	31,5	32,0		122TA4053



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **CLARK-SAMSUNG**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	10,0	12,5	22,0		140TA4598
	10,0	20,0	25,0		140TA4599
	11,0	16,0	32,0		140TA4601
	12,5	16,0	36,5		122TA4055
	12,5	19,0	32,0		140TA4602
	12,5	22,0	38,0		122TA4056
	12,5	25,0	33,0		140TA4603
	13,0	16,0	36,0		140TA4604
	13,0	16,0	38,5	yes	140TA4605
E3	16,0	31,5	37,0		140TA4606
	10,0	20,0	22,5		140TA4607
	10,0	20,0	23,0		140TA4608



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **CLARK-SAMSUNG**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E3	12,0	20,0	30,5		140TA4609
	15,0	40,0	32,0		140TA4610
E4	6,0	28,0	30,0		140TA4611
	6,0	28,0	30,0		140TA4612
	6,5	32,0	27,0		140TA4613
	8,0	28,0	30,0		140TA4614
	8,0	28,0	30,0		140TA4615
	8,0	28,0	30,5		140TA4616
	8,0	28,0	30,5		140TA4617
	8,0	32,0	30,0		122TA4059
	8,0	32,0	32,0		140TA4618
	8,0	32,0	32,0		105TA4746



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **CLARK-SAMSUNG**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	9,0	16,0	20,0		140TA4619
	9,0	26,0	25,5		140TA4620
	9,5	19,0	20,0		140TA4621
	9,5	19,0	26,0		122TA4060
	9,5	20,5	26,0		140TA4622
	9,5	20,5	28,0		140TA4623
	9,5	25,0	28,5		122TA4062
	10,0	20,0	22,0		140TA4624
	10,0	20,0	26,0		140TA4625
	10,0	24,0	32,0		140TA4626
	10,0	24,0	32,0	yes	122TA4064
	10,0	26,0	30,0		140TA4627



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **CLARK-SAMSUNG**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	10,0	26,0	30,0		140TA4600
	10,0	26,0	31,0		140TA4628
	10,0	28,0	30,5		140TA4629
	10,0	28,0	30,5		140TA4630
	10,0	28,0	31,0		140TA4631
	10,0	32,0	31,0		122TA4066
	10,0	32,0	32,0		122TA4063
	10,0	32,0	32,0	yes	122TA4065
	10,0	32,0	33,0		122TA4067
	10,0	32,0	33,0	yes	140TA4632
	10,5	19,5	33,5		140TA4633
	11,0	32,0	32,0		140TA4634



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **CLARK-SAMSUNG**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	11,0	39,5	32,0		122TA4068
	12,0	20,0	32,0		122TA4069
	12,0	32,0	32,0		122TA4071
	12,0	32,0	32,0		122TA4070
	12,0	32,0	32,0	yes	140TA4635
	12,0	32,0	32,0	yes	140TA4636
	12,5	16,0	36,0		140TA4637
	12,5	25,0	32,0		122TA4085
	12,5	25,0	32,0		122TA4072
	12,5	25,0	32,0	yes	122TA4073
	12,5	31,5	24,0		122TA4088
	12,5	31,5	41,0		122TA4087



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **CLARK-SAMSUNG**

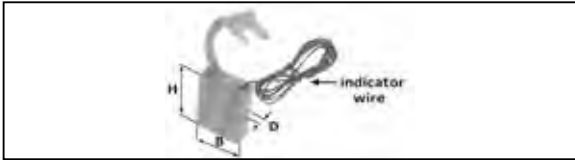


Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	12,5	31,5	42,0		140TA4638
	12,5	31,5	42,0	yes	140TA4639
	12,5	32,0	25,0		122TA4075
	12,5	32,0	28,5		140TA4640
	12,5	32,0	32,0		122TA4081
	12,5	32,0	32,0		122TA4084
	12,5	32,0	32,0		122TA4083
	12,5	32,0	32,0	yes	122TA4076
	12,5	32,0	32,0	yes	122TA4082
	12,5	32,0	32,5		122TA4074
	12,5	32,0	40,0		122TA4078
	12,5	32,0	40,0		140TA4641



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **CLARK-SAMSUNG**

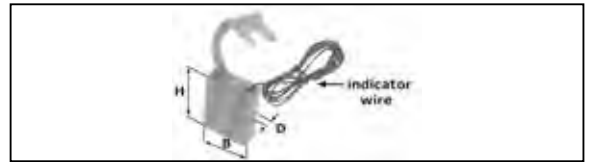

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	12,5	32,0	40,0	yes	122TA4080
	12,5	32,0	40,0	yes	122TA4079
	12,5	32,0	43,5		140TA4642
	12,5	32,0	43,5		122TA4086
	12,5	36,0	35,0		140TA4643
	12,5	40,0	27,0		140TA4644
	12,5	47,0	41,0		122TA4090
	12,5	47,0	42,0	yes	122TA4089
	13,0	32,0	29,0		140TA4645
	13,0	32,0	31,0		140TA4646
	14,0	25,5	35,0		140TA4647
	14,0	51,0	36,0		140TA4648



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **CLARK-SAMSUNG**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	15,5	37,5	37,5		122TA4091
	16,0	20,0	38,0		122TA4092
	16,0	24,5	33,0		122TA4096
	16,0	24,5	33,0		140TA4649
	16,0	24,5	33,5		122TA4097
	16,0	31,5	32,0		122TA4093
	16,0	31,5	33,0		122TA4094
	16,0	32,0	32,0		140TA4650
	16,0	32,0	32,0		140TA4651
	16,0	64,0	44,5		122TA4099
	16,0	64,0	44,5		122TA4095
	16,0	64,0	44,5	yes	122TA4098



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **CLARK-SAMSUNG**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
M2	4,0	12,0	16,5		122TA4100
	4,5	12,0	17,5		122TA6023
	11,0	25,0	35,0		122TA4102
	12,5	28,0	36,0		140TA4652
	12,5	28,5	36,0		140TA4653
	12,5	28,5	38,0	yes	140TA4654
	12,5	32,0	33,0		122TA4103
	13,0	28,5	38,0		140TA4655
	13,0	32,0	29,0	yes	140TA4656
	13,0	32,0	34,0		140TA4657
	13,0	32,0	38,0		140TA4658
	16,0	31,5	38,5		122TA4105



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.


used for: **CLARK-SAMSUNG**

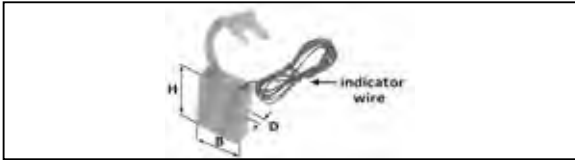

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
M2	16,0	31,5	45,0		122TA4106
	16,0	31,5	45,0	yes	122TA4104
	16,0	44,5	38,0		122TA4107
M4	9,0	15,0	19,0		140TA4659



used for: **CLARK-SAMSUNG**

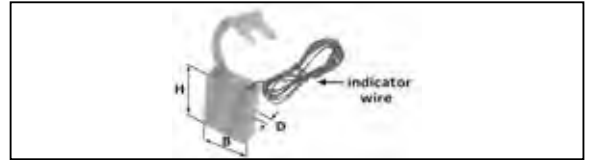


Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
2	5,0	6,0	22,0		140TA9289
	5,0	8,0	19,5		121TA2287
	5,0	8,0	19,5		141TA3764
	5,5	19,0	19,0		121TA2289
	6,0	22,5	22,5		141TA3765
	6,5	22,0	24,0		141TA3766
	8,0	22,0	32,0		121TA2291
	8,0	22,0	32,0		141TA3767




Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **CLARK-SAMSUNG**

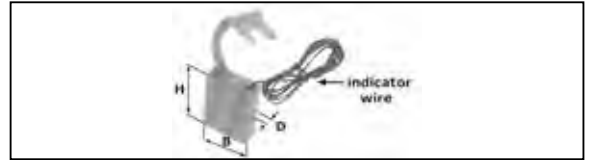


Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
2	8,5	19,0	22,5		140TA9290
	9,0	17,5	17,0		140TA9300
	12,5	17,5	38,0		141TA3814
3	6,5	20,5	22,0		141TA3769
4	6,0	12,5	22,0		141TA3770
	6,5	19,0	16,0		141TA3771
	6,5	19,0	16,0		141TA3772
	7,0	10,0	17,0		140TA9292

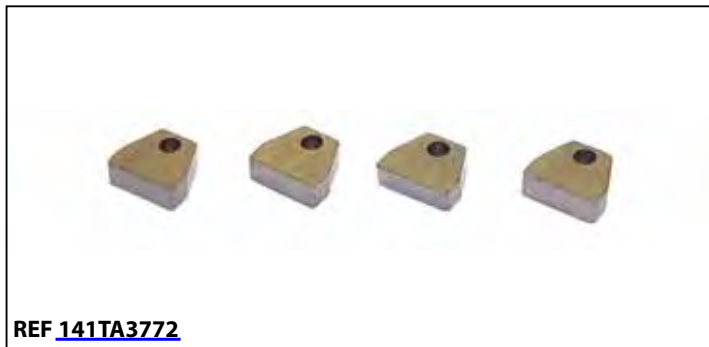


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **CLARK-SAMSUNG**

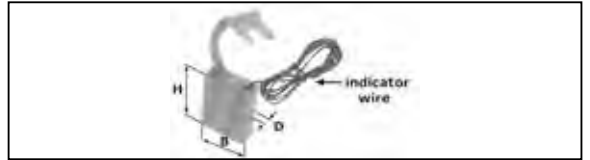


Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	7,0	18,0	18,5		121TA2295
	7,0	19,0	16,5		141TA3774
	7,0	25,5	28,5		141TA3773
	8,0	12,5	22,0		141TA3775
	8,0	19,0	14,5		140TA9301
	8,0	19,0	19,0		141TA3778
	8,0	19,0	22,0		140TA9305
	8,0	20,0	25,5		141TA3776

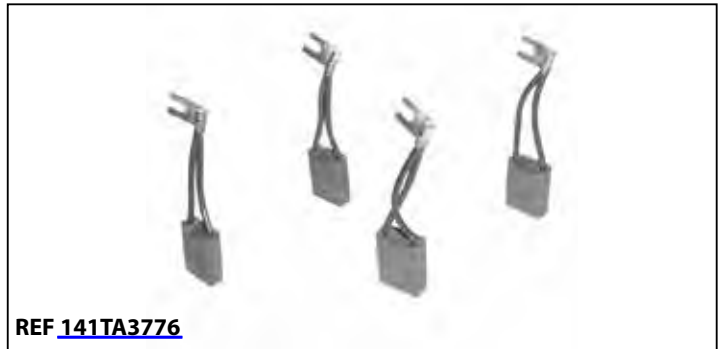

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **CLARK-SAMSUNG**

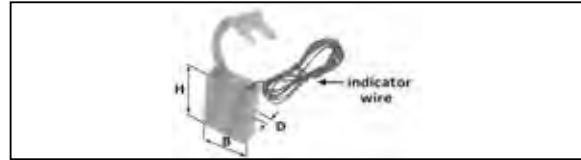

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	8,0	25,0	20,0		140TA9309
	8,0	31,5	30,0		121TA2297
	8,0	32,0	32,0		141TA3777
	8,5	17,5	25,5	yes	141TA3779
	8,5	19,0	16,5		121TA2300
	8,5	19,0	16,5		141TA3780
	8,5	19,0	16,5		121TA2303
	8,5	19,0	16,5		121TA2302



REF [140TA9309](#)




REF [121TA2297](#)




REF [141TA3777](#)



REF [141TA3779](#)

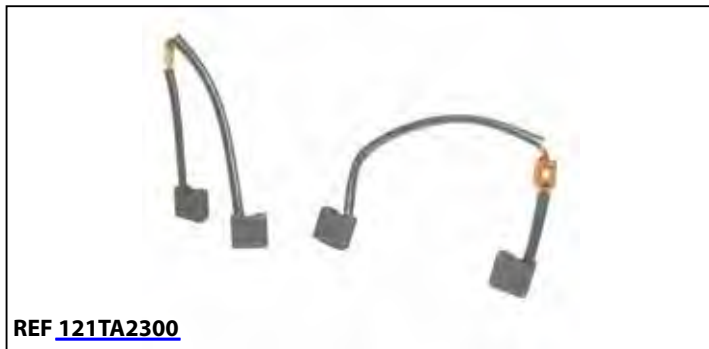

REF [121TA2300](#)

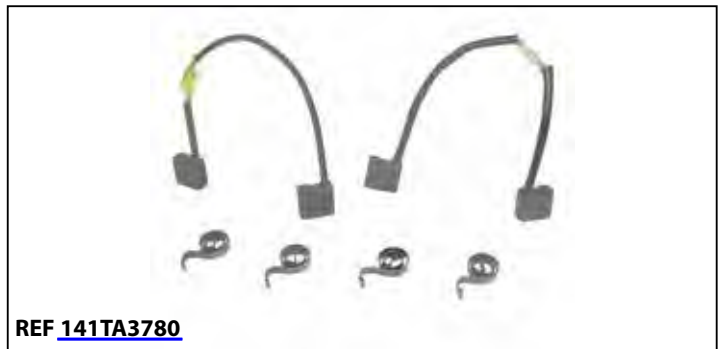

REF [141TA3780](#)




REF [121TA2303](#)




REF [121TA2302](#)

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **CLARK-SAMSUNG**

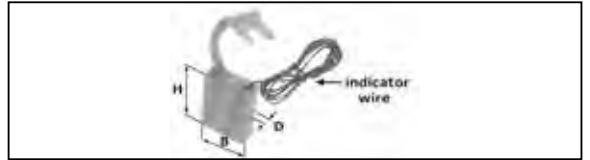


Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	8,5	19,0	17,0		141TA3781
	8,5	19,0	19,0		141TA3782
	9,0	13,0	25,5		121TA2305
	9,0	13,0	25,5		141TA3788
	9,0	16,0	17,0		141TA3783
	9,0	16,0	17,0		141TA3789
	9,0	16,0	17,0		140TA9296
	9,0	17,5	13,0		121TA2307

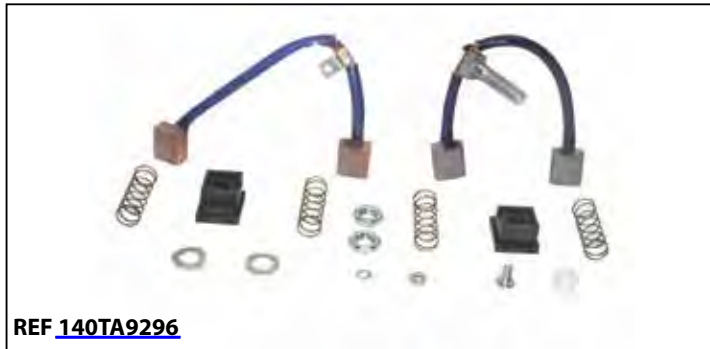

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **CLARK-SAMSUNG**

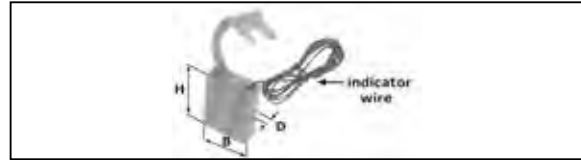

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	9,0	17,5	13,0		140TA9298
	9,0	17,5	15,5		140TA9299
	9,0	17,5	16,0		141TA3784
	9,0	17,5	16,0		141TA3785
	9,0	17,5	20,0		141TA3786
	9,0	17,5	25,5		141TA3787
	9,0	19,0	22,0		140TA9306
	9,0	20,0	26,0		140TA9307



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **CLARK-SAMSUNG**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	9,0	25,5	27,0		121TA2310
	9,0	26,0	25,5		121TA2311
	9,0	26,0	25,5		140TA4620
	9,5	16,0	28,5	yes	141TA3791
	9,5	16,0	28,5		141TA3792
	9,5	19,0	19,0		140TA9302
	9,5	19,0	19,0		140TA9304
	9,5	20,5	25,5		121TA2312



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **CLARK-SAMSUNG**




Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	9,5	20,5	25,5		141TA3793
	9,5	20,5	29,0		121TA2313
	9,5	22,0	25,0		141TA3790
	9,5	44,0	25,5		141TA3794
	10,0	19,0	19,0		140TA9303
	10,0	21,5	36,5		141TA3799
	10,0	25,0	16,5		140TA9308
	10,0	25,0	23,0		140TA9311




Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **CLARK-SAMSUNG**

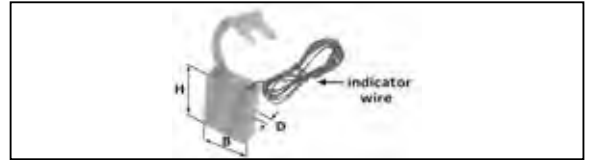

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	10,0	25,0	23,5		140TA9310
	10,0	25,5	35,0		141TA3800
	10,0	25,5	35,0		141TA3801
	10,0	25,5	35,0		141TA3802
	10,0	28,0	30,5		141TA3795
	10,0	28,0	30,5		121TA2315
	10,0	28,0	30,5		121TA2319
	10,0	28,0	30,5		121TA2320

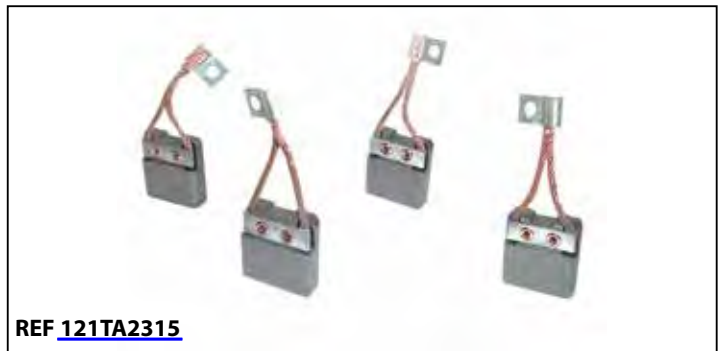


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **CLARK-SAMSUNG**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	10,0	28,0	30,5		141TA3797
	10,0	28,0	30,5		141TA3798
	10,0	32,0	32,0	yes	141TA3796
	10,0	32,0	32,5	yes	121TA2316
	12,0	32,0	32,0		121TA2324
	12,0	36,0	26,5		121TA2323
	12,5	16,0	36,5		141TA3809
	12,5	21,5	36,0		141TA1093


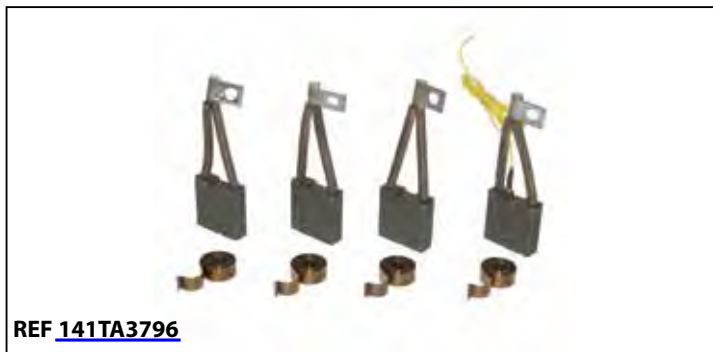


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **CLARK-SAMSUNG**




Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	12,5	25,5	39,0		141TA3810
	12,5	31,5	32,5		141TA3803
	12,5	32,0	30,0		141TA3806
	12,5	32,0	30,0		121TA2328
	12,5	32,0	35,5		141TA3811
	12,5	32,0	35,5		141TA3812
	12,5	32,0	38,0		141TA3813
	12,5	32,0	38,0		121TA2331

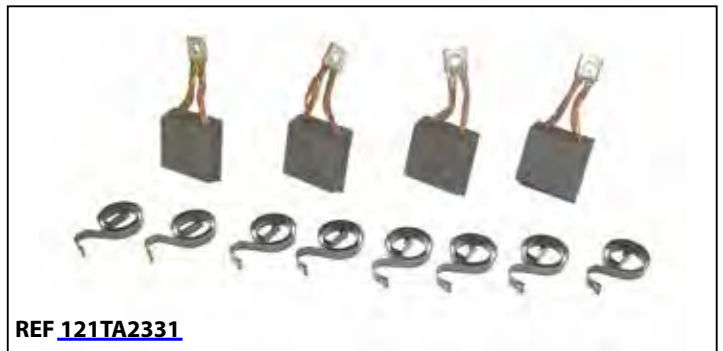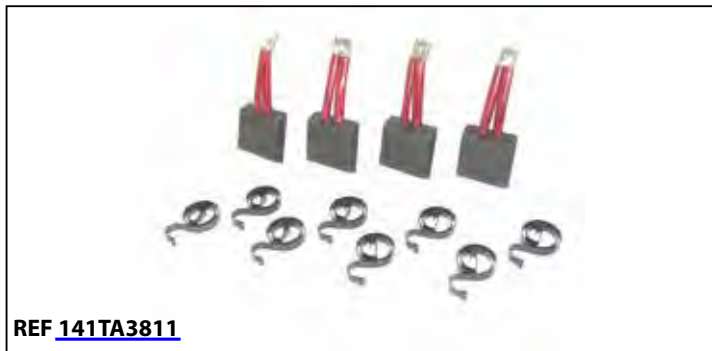

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **CLARK-SAMSUNG**

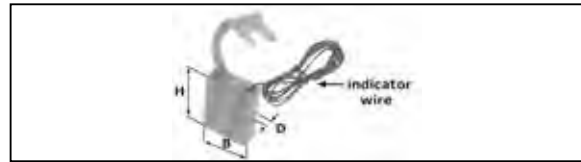

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	12,5	32,0	38,0		121TA2333
	12,5	32,0	38,0		141TA3815
	12,5	32,0	40,0		121TA2326
	12,5	32,0	40,0	yes	141TA3805
	12,5	32,0	43,0	yes	141TA3804
	12,5	40,0	42,5	yes	141TA3808
	12,5	40,0	45,5		141TA3807
	12,5	47,5	41,5		121TA2334






Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **CLARK-SAMSUNG**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	12,5	47,5	43,0		140TA9318
	15,5	63,5	45,0	yes	121TA2335
	16,0	24,5	33,0		141TA3816
	16,0	31,5	33,0		141TA3817
	16,0	31,5	33,0		141TA3819
	16,0	38,0	37,0		140TA9317
	16,0	65,0	45,5		141TA3818
8	7,0	22,0	19,5		121TA2339

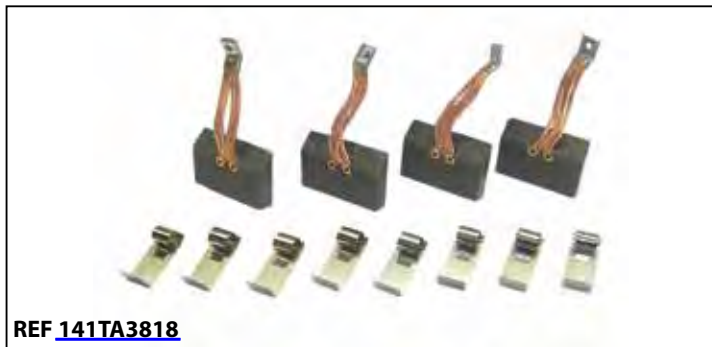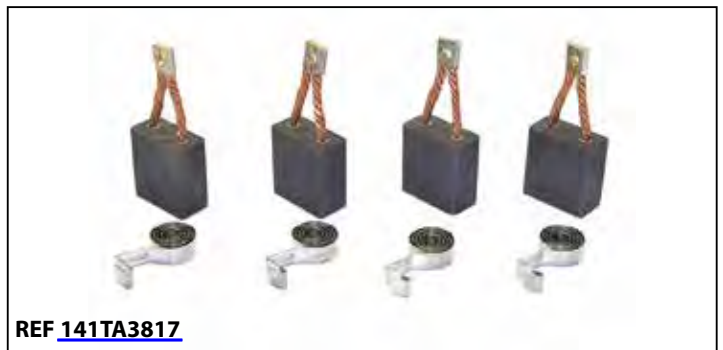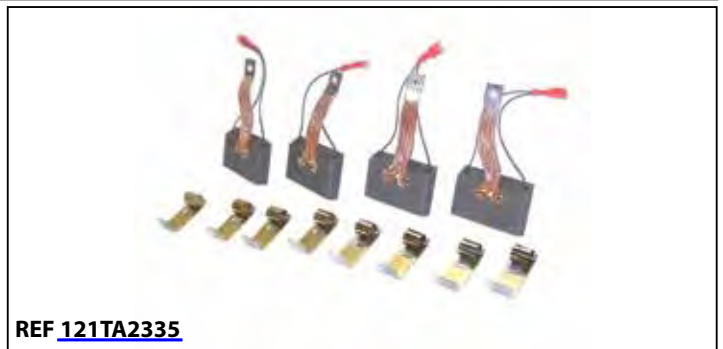

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **CLARK-SAMSUNG**




Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	7,0	22,0	19,5		121TA2338
	7,0	22,0	20,0		141TA3820
	7,0	22,0	20,0		121TA2341
	8,5	16,0	24,0		141TA3821
	8,5	16,0	24,0		141TA3822
	9,0	15,5	19,0		141TA3823
	9,5	19,0	22,0		141TA3824
	10,0	24,0	32,0	yes	121TA2343



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **CLARK-SAMSUNG**

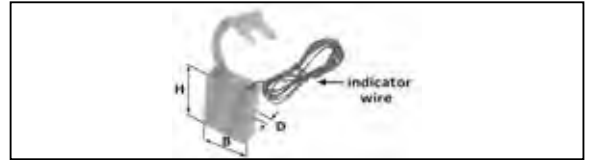


Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	10,0	25,5	35,0		141TA3826
	10,0	32,0	32,5	yes	141TA3825
	10,5	25,5	35,0		141TA3827
	10,5	25,5	35,0		141TA3828
	12,0	20,0	32,0		141TA3829
	12,5	15,5	35,0		121TA2353
	12,5	16,0	28,5		141TA3833
	12,5	16,0	35,0		141TA3834




Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **CLARK-SAMSUNG**

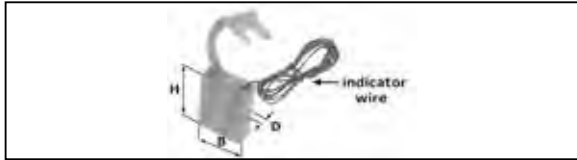

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	12,5	25,0	35,5	yes	141TA3830
	12,5	25,0	45,0	yes	141TA3831
	12,5	31,5	37,5		141TA3835
	12,5	32,0	32,0	yes	140TA9327
	12,5	32,0	32,0	yes	121TA2352
	12,5	32,0	40,0	yes	141TA3832
	12,5	32,0	40,0		121TA2348
	12,5	32,0	40,0		121TA2351

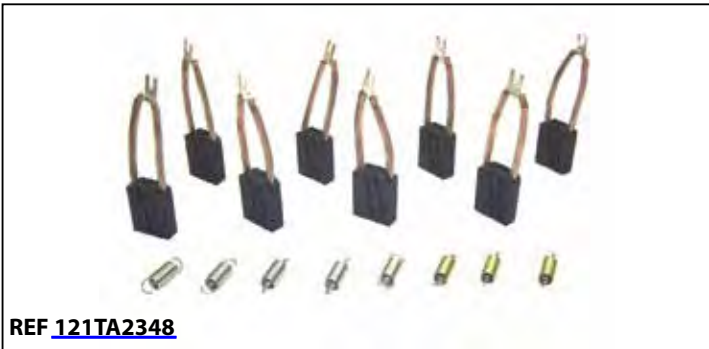


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **CLARK-SAMSUNG**




Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	12,5	32,0	40,0	yes	121TA2350
	12,5	32,0	41,0		141TA3836
	14,0	25,0	35,5		141TA3838
	14,0	25,0	38,0	yes	141TA3842
	14,0	25,5	32,0		141TA3843
	14,0	25,5	35,0	yes	121TA2359
	14,0	25,5	35,0		141TA3841
	14,0	25,5	35,5		140TA9324

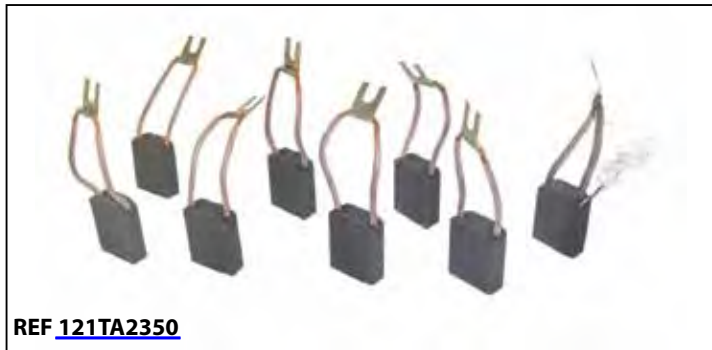

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **CLARK-SAMSUNG**

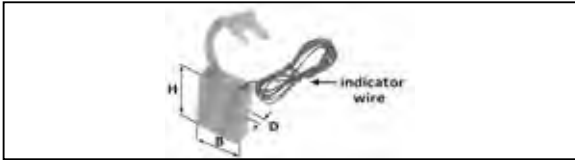

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	14,0	25,5	35,5		121TA2357
	14,0	25,5	37,5		141TA3839
	14,0	25,5	39,0		141TA3837
	14,0	25,5	39,0		141TA3840
	16,0	24,5	33,5		140TA9322
	16,0	31,5	44,0		141TA3845
	16,0	31,5	45,0		141TA3844
	16,0	32,0	36,0		141TA3846




Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **CLARK-SAMSUNG**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	19,0	28,5	51,5		141TA3847
12	14,0	25,0	35,0		140TA9329
	14,0	25,5	45,0		121TA2361
	16,0	31,5	37,0		141TA3848

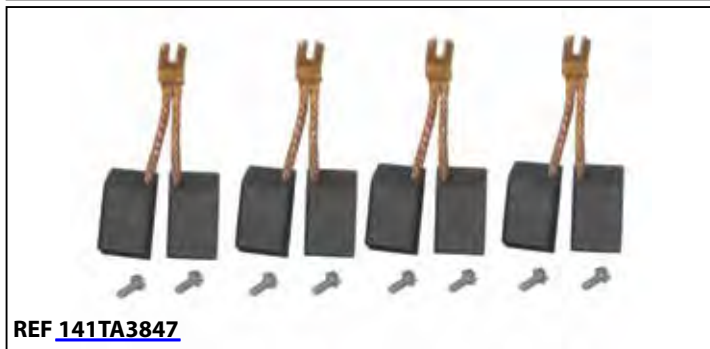

used for: **COVENTRY CLIMAX**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	5,0	7,0	17,0		122TA4109
	6,0	7,0	20,0		122TA4111
	6,0	7,0	23,5		122TA4110
	6,0	12,5	22,0		122TA4112
	6,0	13,0	19,0		122TA4113
	6,5	12,0	16,0		122TA4114
	7,0	10,0	17,0		122TA4108
	7,0	10,0	18,0		122TA4115
	7,0	12,0	17,0		122TA4117
	7,0	16,0	16,0		140TA4660
	8,0	14,0	19,0		122TA4118
	8,0	16,0	19,0		122TA4120



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **COVENTRY CLIMAX**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	8,0	16,0	19,0		122TA4119
	8,0	16,0	25,0		122TA4121
	9,0	13,0	26,0		140TA4661
	9,0	19,0	22,5		122TA4122
	9,0	25,0	23,0		122TA4123
	12,5	25,0	33,0		122TA4124
	12,5	40,0	25,5		122TA4125
	16,0	20,0	26,0		122TA4126
	16,0	25,0	50,0		140TA4662
E3	17,0	35,0	30,0		122TA4127
	6,0	27,0	19,0		122TA4128
	9,5	38,0	19,0		122TA4129



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **COVENTRY CLIMAX**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E3	16,0	31,5	31,5		122TA4130
E4	8,0	16,0	18,5		122TA4131
	8,0	20,0	22,5		122TA4132
	8,0	20,0	22,5		122TA4133
	8,0	30,0	25,0		122TA4134
	9,0	20,0	25,0		140TA4663
	9,5	19,0	25,0		140TA4664
	9,5	32,0	27,0		140TA4665
	9,5	32,0	27,0		122TA4135
	9,5	38,0	22,0		122TA4136
	9,5	38,0	22,0		122TA4137
	9,5	38,0	26,0		122TA4138



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **COVENTRY CLIMAX**

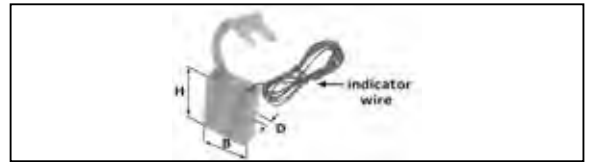


Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	10,0	20,0	32,0		122TA4139
	10,0	40,0	30,0		122TA4140
	11,0	25,0	25,0		122TA4141
	11,0	25,0	25,5		140TA4666
	12,5	25,0	31,0		140TA4667
	12,5	25,0	36,5		140TA4668
	12,5	25,0	40,0		140TA4669
	12,5	25,5	32,5		122TA4146
	12,5	32,0	30,0		122TA4143
	12,5	32,0	40,0		140TA4670
	12,5	32,0	46,0		122TA4142
	12,5	40,0	25,5		122TA4145



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **COVENTRY CLIMAX**

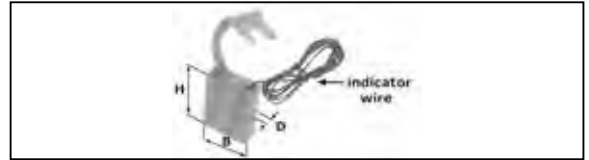


Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	12,5	40,0	40,5		122TA4144
	12,5	50,0	44,5		122TA4147
	13,0	25,0	32,0		122TA4148
	13,0	25,5	32,0		122TA4149
	13,0	32,0	32,0		140TA4671
	16,0	20,0	41,0		140TA4672
	16,0	25,0	32,0		122TA4153
	16,0	25,0	32,0		122TA4152
	16,0	25,5	30,0		140TA4673
	16,0	30,0	33,0		122TA4151



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.


used for: **COVENTRY CLIMAX**

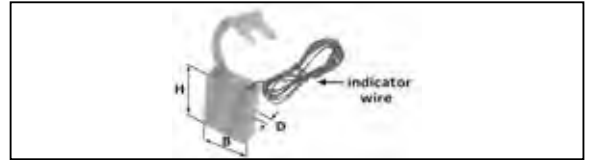

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	8,0	19,0	22,0		140TA9330
	9,0	17,5	25,5		121TA2363
	10,0	25,5	35,0		121TA2364
	16,5	35,0	31,0		141TA3849
	22,0	44,0	38,0		140TA9332
8	14,0	25,5	35,5		121TA2365



used for: **CROWN**

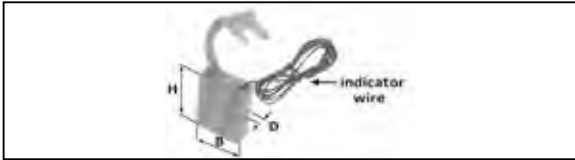


Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	5,0	8,0	11,0		122TA4154
	6,0	8,0	9,5		140TA4674
	7,0	22,0	20,0		140TA4675
	8,0	16,0	17,5		140TA4676
	8,0	19,0	20,0		122TA4155
	9,0	20,5	28,0	yes	122TA4156
	9,5	16,0	19,0		122TA4158
	9,5	19,0	21,0		122TA4159
	9,5	19,0	29,0		122TA4157
	9,5	20,5	30,0		122TA4160
	9,5	31,5	32,0		140TA4677
	10,0	20,0	21,0		140TA4678



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **CROWN**

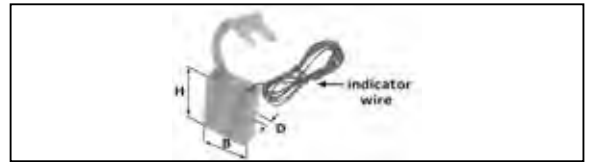

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	12,5	16,0	36,5		122TA4163
	12,5	16,0	44,0		122TA4162
	12,5	20,0	25,5		122TA4161
E4	9,0	26,0	25,0		140TA4679
	9,5	20,5	28,0		140TA4680
	10,0	25,0	30,0		122TA4165
	10,0	32,0	32,0		122TA4164
	10,0	40,0	36,0		140TA4681
	10,0	48,0	32,0	yes	122TA4166
	10,0	48,0	32,5		122TA4167
	12,0	20,0	32,0		122TA4168
	12,5	25,0	45,5	yes	122TA4170



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **CROWN**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	12,5	25,0	46,0		122TA4171
	12,5	31,5	33,0		140TA4682
	12,5	31,5	33,5		122TA4172
	12,5	31,5	42,0		122TA4174
	12,5	31,5	44,5		122TA4175
	12,5	40,0	45,0		122TA4173
	16,0	24,5	33,5		140TA4683
	16,0	25,0	33,0		140TA4684
	16,0	31,5	33,0		140TA4685
	16,0	31,5	33,0		140TA4686
M2	12,5	28,0	36,0		140TA4687
					122TA4177



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.


used for: **CROWN**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
M2	12,5	32,0	31,0	yes	140TA4688
	13,0	28,5	36,0	yes	140TA4689
	16,0	28,5	44,5	yes	122TA4178



used for: **CROWN**

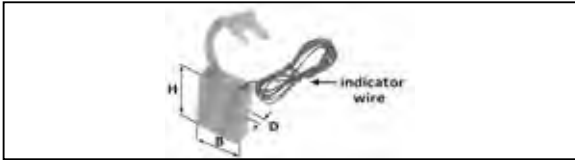


Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
2	9,5	19,0	29,0		121TA2366
	9,5	19,5	21,0		140TA9334
4	6,5	12,5	14,0		140TA9335
	7,0	12,5	20,5		121TA2367
	7,0	19,0	16,5		141TA3850
	8,5	19,0	16,5		121TA2369
	8,5	19,0	19,0		141TA3851
	8,5	19,0	23,0		141TA3852

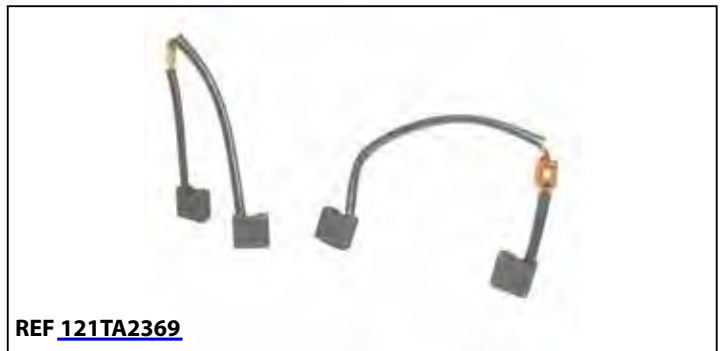


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **CROWN**

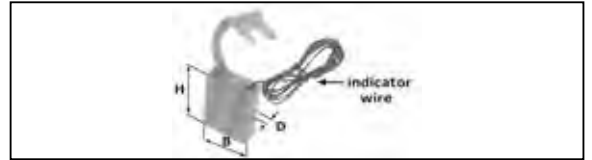


Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	9,0	12,5	25,5		140TA9336
	9,0	13,0	25,5		121TA2377
	9,0	16,0	17,0		141TA3857
	9,0	17,5	16,0		141TA3853
	9,0	17,5	20,0		141TA3854
	9,0	17,5	25,5		141TA3855
	9,0	19,0	22,0		140TA9339
	9,0	26,0	25,5		141TA3856

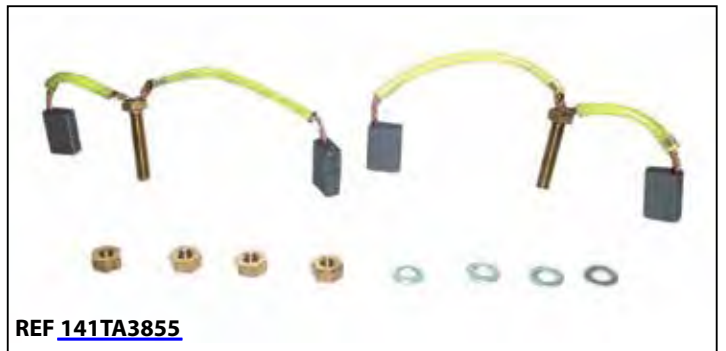

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **CROWN**

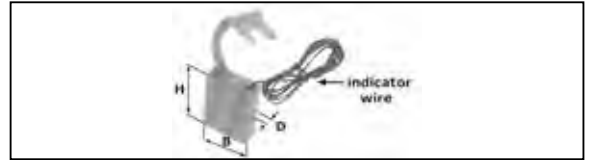


Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	9,5	16,0	28,5	yes	141TA3859
	9,5	16,0	28,5		140TA9337
	9,5	20,5	28,5		121TA2378
	9,5	22,0	25,0		141TA3858
	10,0	21,5	36,5		141TA3860
	10,0	24,5	20,5		140TA9342
	10,0	25,0	23,0		140TA9343
	10,0	25,5	35,0		121TA2380






Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **CROWN**

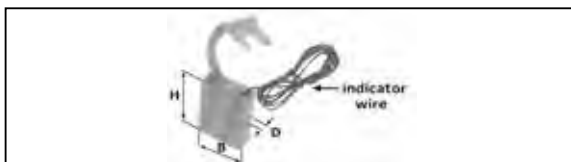

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	10,0	25,5	35,0		121TA2381
	11,0	25,5	25,5		140TA9344
	12,5	20,0	25,5		140TA9341
	12,5	20,0	25,5	yes	140TA9340
	12,5	31,5	27,5		141TA3861
	12,5	31,5	28,0	yes	140TA9346
	12,5	31,5	34,0		121TA2383
	12,5	32,0	35,5		141TA3862

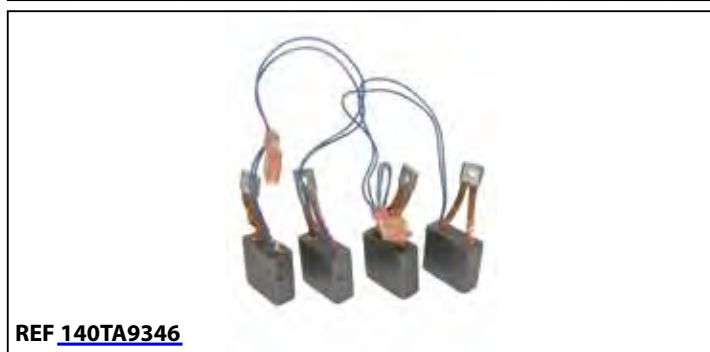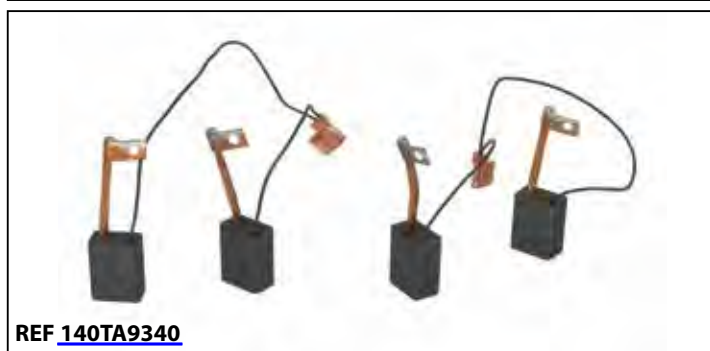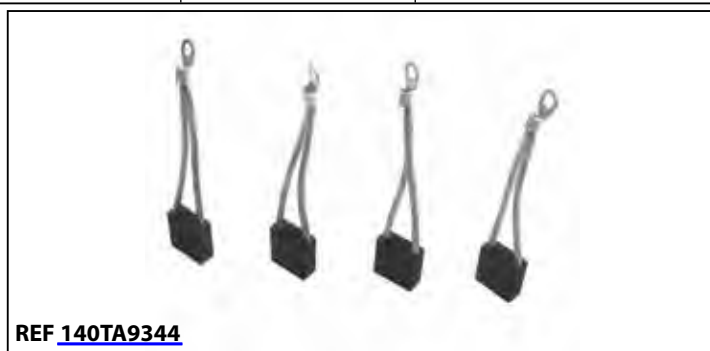

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **CROWN**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	12,5	32,0	35,5		140TA9347
	12,5	32,0	38,0		141TA3863
	16,0	24,5	33,0		141TA3864
	16,0	31,5	33,0		140TA9345
	16,0	31,5	33,0		141TA3865
	16,0	31,5	33,0		141TA1095
	16,0	31,5	33,0		141TA3866
8	7,0	22,0	19,5		121TA2389



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **CROWN**




Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	7,0	22,0	20,0		121TA2390
	10,0	25,5	35,0		141TA3867
	12,5	15,5	35,0		141TA3868
	12,5	24,0	33,0		140TA9349
	12,5	32,0	35,0		141TA3869
	14,0	25,5	37,5		141TA3871
	14,0	25,5	37,5	yes	121TA2394
	14,0	25,5	39,0		141TA3870




Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.


used for: **CROWN**

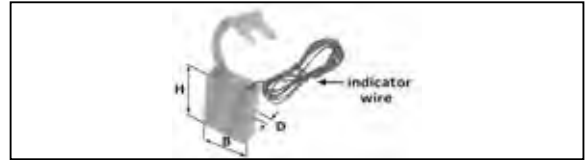

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	16,0	24,5	33,5		141TA3872
	16,0	31,5	38,5		121TA2395
16	16,0	24,5	33,0		140TA9352

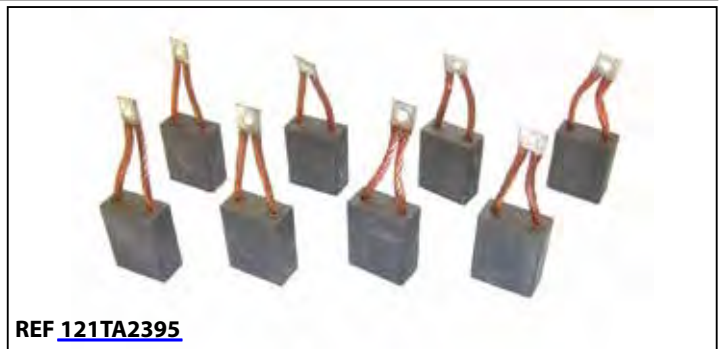


used for: **DAMBACH**

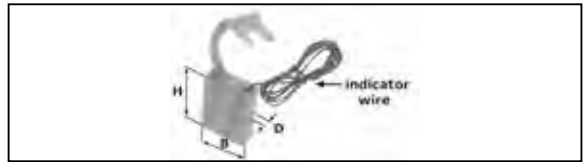


Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	6,0	32,0	32,0		122TA4179
	10,0	32,0	31,0		122TA4181
	10,0	32,0	32,0		122TA4180
	10,0	32,0	32,0	yes	140TA4690
	10,0	40,0	32,0		140TA4691
	10,0	48,0	31,0		122TA4183



used for: **DAMBACH**

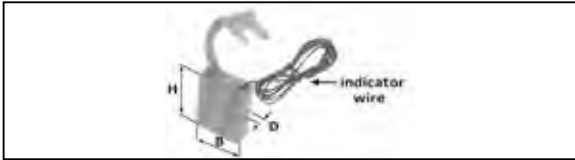

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	10,0	32,0	32,0	yes	140TA9353
8	10,0	32,0	32,5	yes	121TA2397
	12,5	32,0	35,0		141TA3873
	12,5	32,0	40,0		140TA9354

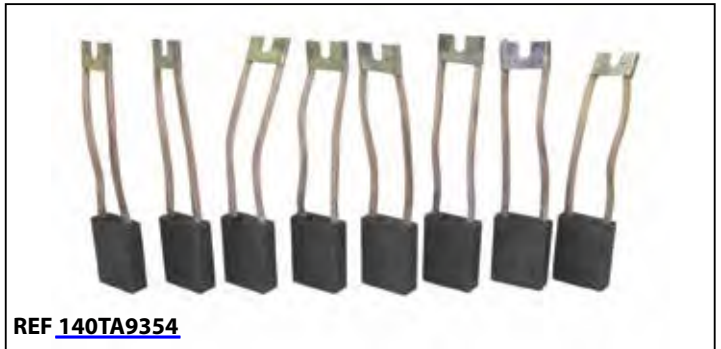

used for: **FENWICK-PEG**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E1	12,5	32,0	67,0		140TA4692
E2	6,0	12,5	21,0		122TA4184
	6,5	14,0	20,0		140TA4693
	7,0	19,5	20,0		140TA4694
	7,0	19,5	20,0		140TA4695
	8,0	20,0	32,0		122TA4185
	10,0	16,0	25,0		140TA4696
	10,0	25,0	40,0		122TA4186
E3	6,0	28,0	30,5		122TA4187
	12,5	38,0	50,5		122TA4188
	14,0	31,5	51,0		140TA4697
E4	6,0	28,0	30,5		122TA4189



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **FENWICK-PEG**

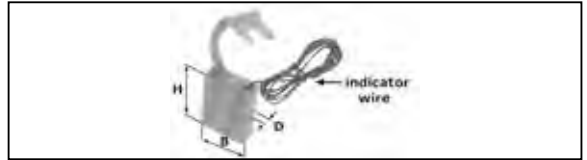

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	7,0	20,0	25,0		140TA4698
	7,5	20,0	19,0		140TA4699
	8,0	20,0	25,0		140TA4700
	8,0	20,0	25,0		122TA4192
	8,0	32,0	30,0		140TA4701
	8,0	32,0	32,0		122TA4191
	10,0	25,0	17,0		140TA4702
	10,0	25,0	20,0		140TA4703
	10,0	25,0	25,0		122TA4193
	10,0	25,0	25,0		122TA4195
	10,0	25,0	25,0		122TA4196
	10,0	25,0	25,5		122TA4197



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **FENWICK-PEG**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	10,0	26,0	31,0		122TA4194
	10,0	32,0	32,0		122TA4198
	10,0	40,0	32,5		122TA4199
	11,0	25,0	30,0		122TA4200
	11,0	28,5	30,5		122TA4201
	12,0	20,0	32,0		122TA4203
	12,0	20,0	32,0		122TA4204
	12,0	20,0	35,0		122TA4205
	12,0	30,0	30,0		122TA4202
	12,0	32,0	32,0		122TA4206
	12,5	20,0	40,0		140TA4704
	12,5	25,0	24,0		140TA4705



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **FENWICK-PEG**

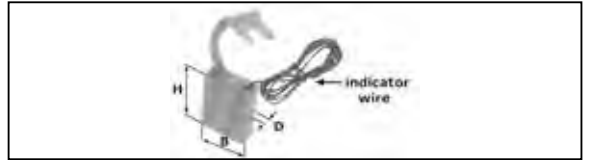



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	12,5	25,0	40,0		140TA4706
	12,5	25,0	40,0		122TA4207
	12,5	32,0	39,5		122TA4211
	12,5	32,0	40,0		140TA4707
	12,5	32,0	40,0		122TA4208
	12,5	40,0	32,0		122TA4209
M2	9,0	19,0	13,5		122TA4212
	9,0	19,0	14,0		140TA4708



used for: **FENWICK-PEG**




Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
2	8,0	20,0	25,0		121TA2399
4	6,0	12,5	22,0		140TA9357
	6,0	20,0	25,0		141TA3874
	6,0	22,0	25,0		121TA2402
	6,0	22,0	25,5		121TA2400
	6,0	28,0	30,5		141TA1096
	6,0	28,0	30,5		121TA2401
	6,5	12,5	21,0		141TA3875

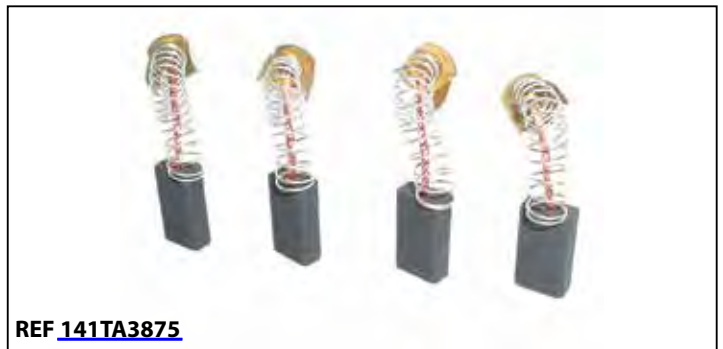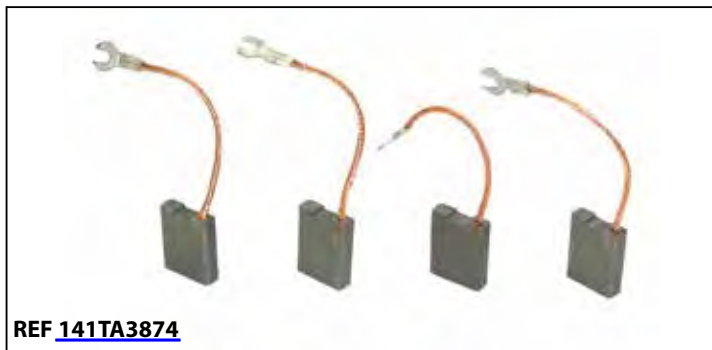


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **FENWICK-PEG**

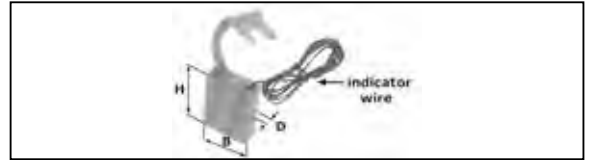


Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	7,0	18,0	14,5		141TA3876
	7,0	19,0	17,0		121TA2406
	7,0	20,0	25,0		121TA2407
	7,5	20,0	23,0		141TA3877
	8,0	19,0	22,0		140TA9361
	8,0	20,0	25,0		106TA7513
	8,0	20,0	25,0		121TA2412
	8,0	20,0	25,0		140TA9363

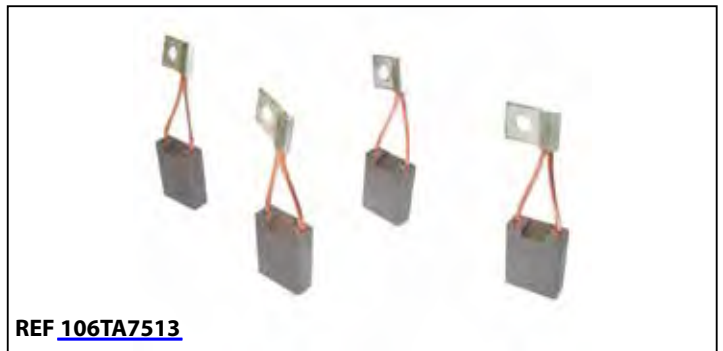


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **FENWICK-PEG**

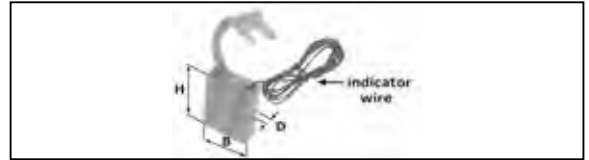


Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	8,0	20,0	25,5		141TA3879
	8,0	28,0	32,0		121TA2410
	8,0	31,5	32,0		141TA3878
	8,0	32,0	31,0		121TA2411
	8,5	17,5	16,0		141TA3882
	8,5	18,0	25,0		140TA9360
	8,5	19,0	13,5		121TA2414
	8,5	19,0	13,5		141TA3881

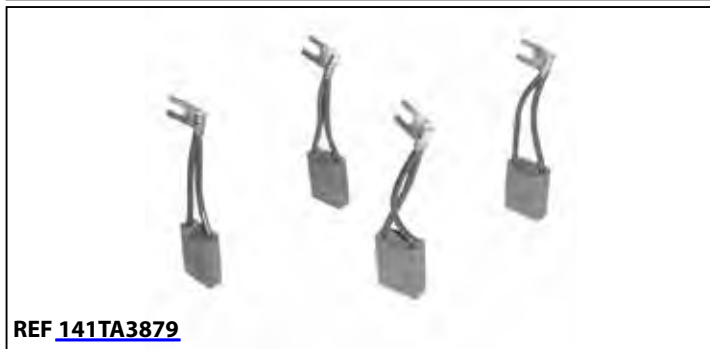

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **FENWICK-PEG**

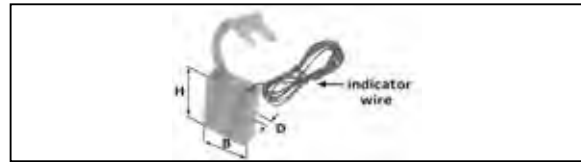

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	8,5	19,0	13,5		121TA2416
	9,0	13,0	25,5		121TA2417
	9,0	19,0	14,0		141TA3883
	10,0	20,0	32,0		141TA3885
	10,0	25,0	20,0		141TA3886
	10,0	25,0	23,0		140TA9364
	10,0	25,0	25,0		141TA3884
	10,0	25,0	25,0		141TA3887



REF [121TA2416](#)




REF [121TA2417](#)



REF [141TA3883](#)



REF [141TA3885](#)

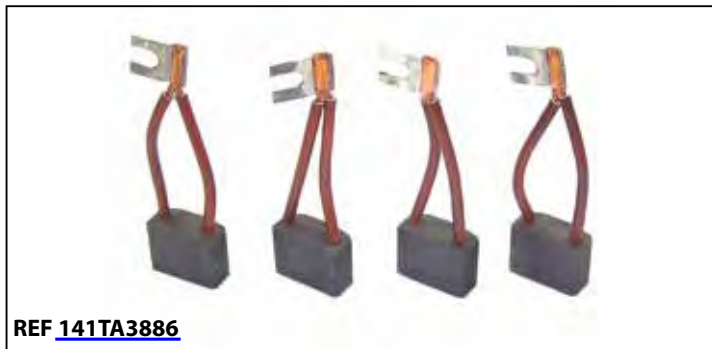

REF [141TA3886](#)



REF [140TA9364](#)



REF [141TA3884](#)




REF [141TA3887](#)

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **FENWICK-PEG**




Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	10,0	25,0	25,0		141TA3888
	10,0	25,5	35,0		121TA2423
	10,0	32,0	32,0		140TA9367
	11,0	20,0	24,5		141TA3889
	11,0	28,5	30,0		140TA9366
	12,0	20,0	32,0		121TA2425
	12,0	32,0	32,0		141TA3890
	12,5	24,5	24,0		141TA3891

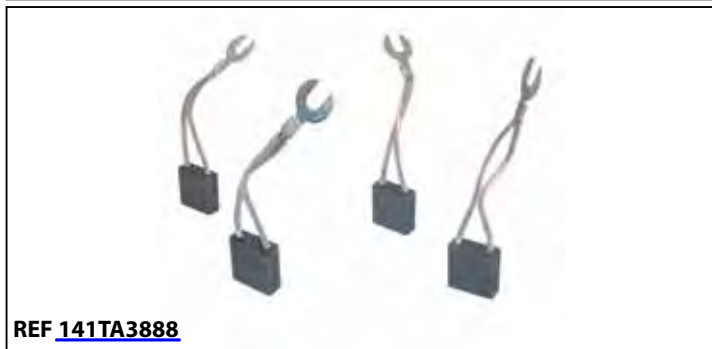

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **FENWICK-PEG**

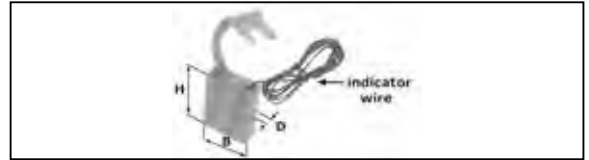


Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	12,5	38,0	50,5		121TA2429
	12,5	40,0	32,0		141TA3892
	14,0	31,5	50,5		121TA2430
8	9,0	13,0	25,0		140TA9368
	10,0	25,0	25,5		121TA2432
	10,0	26,0	31,0		121TA2431
	12,0	19,5	32,0		141TA3893
	12,0	20,0	32,0		141TA3894




Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.


used for: **FENWICK-PEG**

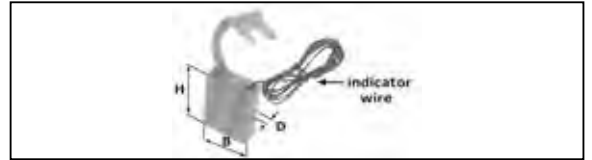

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	12,5	25,0	40,0		141TA3895
	12,5	32,0	40,0		121TA2436
	12,5	32,0	40,0		121TA2437

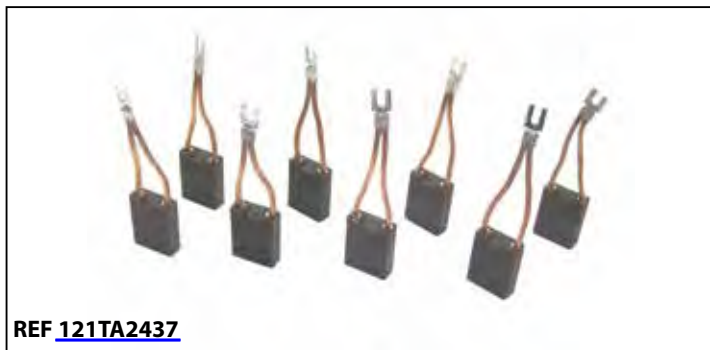

used for: **GENIE**

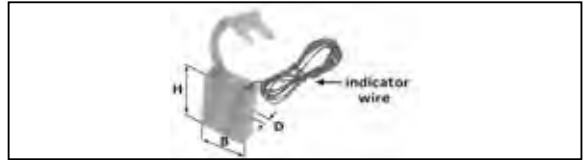

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	9,5	31,5	32,0		140TA4709
	13,0	15,5	36,0		140TA4710
E4	12,5	31,5	28,0		128TA2938
	16,0	24,5	33,0		128TA2937
	16,0	24,5	33,5		128TA2946
	16,0	31,5	33,0		140TA4711
	16,0	31,5	33,0		140TA4712
M4	7,0	22,0	19,0		140TA4713



used for: **GENIE**




Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	9,5	20,5	28,5		128TA2941
	10,0	25,0	23,0		141TA3896
	12,5	31,5	28,5		139TA1848
	12,5	31,5	41,5		141TA1097
	12,5	32,0	38,0		140TA9370
	16,0	31,5	33,0		141TA3897
8	7,0	22,0	19,5		128TA2942



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.


used for: **GROVE**

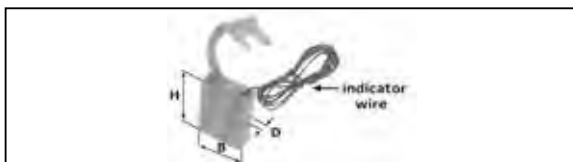

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	7,0	22,0	20,0		140TA4714
E4	9,0	20,5	29,0		140TA4715
	9,5	20,5	29,5		140TA4716
	12,5	25,5	40,0		140TA4717




used for: **GROVE**

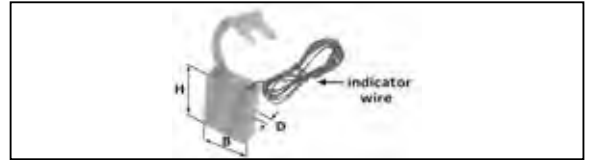

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	8,0	28,0	30,5		140TA9371



used for: **HAKO**

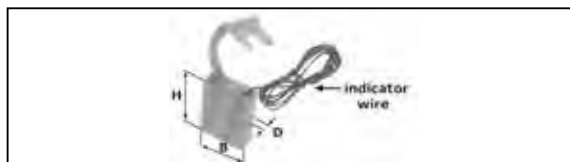

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	8,0	8,0	15,0		140TA4718
	8,0	16,0	22,0		140TA4719
	8,0	16,0	22,0		140TA4720
	8,0	16,0	22,0		140TA4721
	10,0	12,5	22,5		140TA4722
	10,0	12,5	22,5		140TA4723
	10,0	20,0	29,0		140TA4724
E3	8,0	28,0	31,0		140TA4725
E4	8,0	32,0	32,0		140TA4726
	10,0	20,0	22,0		139TA6480
	10,0	25,0	30,0		140TA4727
	10,0	32,0	32,0		140TA4728



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.


used for: **HAKO**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	10,0	48,0	32,5		140TA4729




used for: **HAKO**

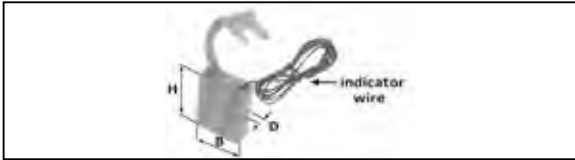

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	7,5	15,5	21,0		127TA3007
	10,0	18,0	19,5		141TA1098



used for: **HAMECH**

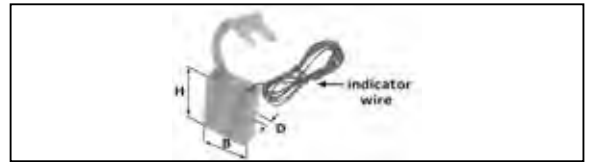

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	17,0	35,0	30,0		140TA4730
E3	6,0	27,0	19,0		140TA4731
E4	6,5	27,0	19,0		140TA4732
	8,0	32,0	32,0		122TA4231
	10,0	25,0	22,0		140TA4733
	10,0	40,0	36,0		140TA4734
	10,0	48,0	32,0	yes	140TA4735
	10,0	48,0	32,5		122TA4232
	12,0	32,0	40,0		122TA4233
	12,5	25,0	42,0		122TA4234
	12,5	32,0	35,0		122TA4235
	15,0	35,0	32,0		122TA4236



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.


used for: **HAMECH**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	20,0	25,0	44,0	yes	140TA4736




used for: **HAMECH**

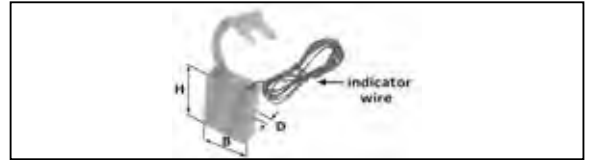

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	9,0	17,5	25,5		121TA2473

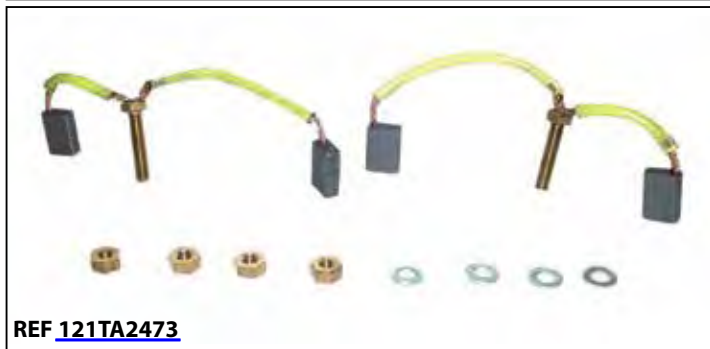


used for: **HANGZHOU-HC-HANGCHA**

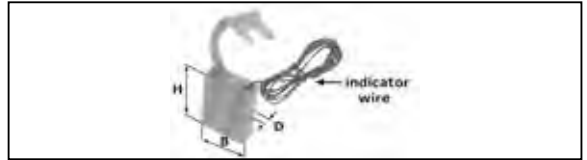

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	7,0	10,0	17,0		140TA4737
	7,0	10,0	18,0		140TA4738
E4	16,0	24,5	29,5		140TA4739
	16,0	25,0	29,5		140TA4740
	16,0	25,0	30,0		140TA4741
	16,0	25,0	30,0		140TA4742



used for: **HELI**

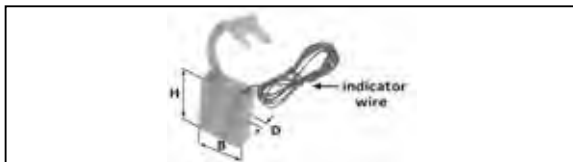

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	5,0	7,0	17,0		140TA4743
	5,0	8,0	23,0		140TA4744
	7,0	10,0	17,0		140TA4745
	7,0	10,0	18,0		140TA4746
	7,0	14,0	16,0		140TA4747
	7,0	14,0	16,0		140TA4748
	7,0	18,0	18,0		140TA4749
	8,0	24,5	21,0		140TA4750
	8,0	25,0	20,0		140TA4751
	8,0	25,0	20,0		140TA4752
E4	16,0	25,0	28,0		140TA4753
	6,5	16,0	25,0		140TA4754



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **HUBTEX**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	8,0	12,5	22,0		122TA4237
	8,0	22,0	28,5		140TA4755
	10,0	12,5	22,5		140TA4756
	10,0	12,5	22,5		122TA4238
	12,5	25,0	33,0		140TA4757
E3	8,0	28,0	30,5		122TA4239
E4	6,0	22,0	28,0		140TA4758
	6,0	32,0	31,5		140TA4759
	8,0	32,0	32,0		122TA4241
	8,0	32,0	32,0		140TA4760
	10,0	25,0	22,0		140TA4761
	10,0	32,0	31,5	yes	140TA4762



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.


used for: **HUBTEX**

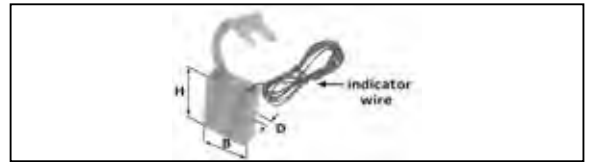

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	10,0	32,0	32,0		140TA4763
	10,0	32,0	32,0		140TA4764
	10,0	32,0	32,0		122TA4242
	10,0	32,0	32,0		122TA4244
	10,0	32,0	33,0		122TA4245
	10,0	32,0	33,0	yes	140TA4765
	10,0	32,0	40,0		140TA4766
	10,0	48,0	31,0		122TA4243



used for: **HYSTER**

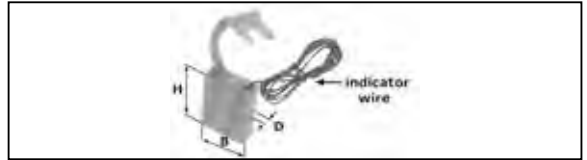

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E1	6,5	10,0	17,0		122TA4246
	6,5	12,0	17,0		140TA4767
	6,5	19,0	16,0		140TA4768
	8,0	19,0	19,0		140TA4769
	9,5	19,0	19,0		140TA4770
	10,0	19,0	19,0		140TA4771
E2	4,5	6,0	20,0		140TA4772
	5,0	6,0	22,0		122TA4249
	5,0	7,0	17,0		122TA4248
	5,0	8,0	18,5		140TA4773
	5,0	8,0	23,0		122TA4247
	6,0	7,0	20,0		140TA4774



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **HYSTER**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	6,0	9,5	19,0		140TA4775
	6,0	22,0	24,0		140TA4776
	6,5	12,0	16,0		122TA4250
	7,0	10,0	18,0		122TA4252
	7,0	14,0	18,5		140TA4777
	7,0	18,0	18,0		122TA4251
	7,0	19,0	15,5		140TA4778
	7,5	20,0	22,5		140TA4779
	7,5	22,0	22,5		140TA4780
	8,0	12,0	23,0		140TA4781
	8,0	12,5	22,0		140TA4782
	8,0	25,0	15,0		140TA4783



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **HYSTER**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	8,0	25,0	17,0		122TA4253
	8,0	25,0	19,5		140TA4784
	8,0	25,0	20,0		122TA4254
	8,0	25,0	21,5		140TA4785
	9,0	17,5	16,0		140TA4786
	9,0	25,0	22,5		122TA4255
	9,5	16,0	28,5		122TA4258
	9,5	16,0	28,5	yes	122TA4257
	9,5	16,0	28,5	yes	122TA4256
	9,5	16,0	28,5	yes	140TA4787
	9,5	16,0	29,0	yes	140TA4788
	9,5	20,5	30,0		140TA4789



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **HYSTER**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	9,5	22,0	35,0		140TA4790
	10,0	12,0	23,0		140TA4791
	10,0	16,0	25,0		140TA4792
	10,0	25,0	20,0		122TA4260
	10,0	25,0	35,0		140TA4793
	10,0	26,0	20,5		140TA4794
	12,5	16,0	22,5	yes	140TA4795
	12,5	16,0	23,0		140TA4796
	12,5	16,0	36,0		122TA4262
	12,5	16,0	36,0	yes	122TA4261
	12,5	16,0	36,5		140TA4797
	12,5	16,0	44,0		140TA4798



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **HYSTER**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	13,0	16,0	38,5		122TA4264
	13,0	16,0	38,5	yes	122TA4263
	14,0	40,0	32,5		140TA4799
E3	10,0	20,0	22,0		140TA4800
	10,0	20,0	23,0		140TA4801
	11,0	40,0	33,5		122TA4265
	12,0	20,0	30,0		122TA4266
	12,0	20,0	30,0	yes	140TA4802
	12,0	20,0	30,5		140TA4803
	16,0	56,0	33,0		122TA4267
E4	6,0	22,0	25,5		140TA4804
	7,0	25,0	29,0		140TA4805



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **HYSTER**

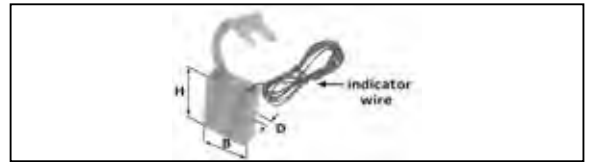

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	7,5	22,0	22,5		140TA4806
	8,0	20,0	25,0		122TA4269
	8,0	22,0	22,0		140TA4807
	8,0	28,0	30,0		140TA4808
	8,0	28,0	30,5		140TA4809
	8,0	28,0	31,0		140TA4810
	8,0	28,0	31,0		140TA4811
	8,0	28,0	31,0	yes	140TA4812
	8,0	32,0	30,0		122TA4270
	8,0	32,0	32,0		122TA4268
	9,0	16,0	20,0		122TA4271
	9,0	16,0	20,0		140TA4813



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **HYSTER**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	9,5	19,0	20,0		140TA4814
	9,5	20,5	21,0		140TA4815
	9,5	20,5	28,0		140TA4816
	9,5	20,5	28,0		122TA4272
	9,5	38,0	21,0		140TA4817
	10,0	20,0	22,0		140TA4818
	10,0	20,0	27,0		122TA4280
	10,0	25,0	25,0		122TA4275
	10,0	25,5	35,0		140TA4819
	10,0	26,0	30,0	yes	140TA4820
	10,0	26,0	30,5		122TA4276
	10,0	26,0	31,0		140TA4821



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **HYSTER**

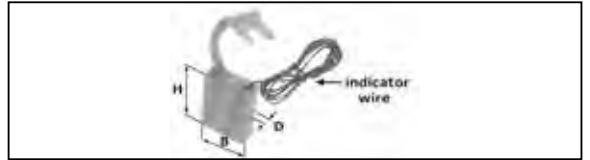


Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	10,0	28,0	30,0		122TA4278
	10,0	28,0	30,5	yes	140TA4822
	10,0	28,0	30,5	yes	140TA4823
	10,0	28,0	31,0		140TA4824
	10,0	28,0	31,0		122TA4277
	10,0	28,0	31,0		140TA4825
	10,0	31,5	32,5	yes	122TA4273
	10,0	32,0	32,0		122TA4281
	10,0	32,0	32,0		140TA4826
	10,0	32,0	32,0		122TA4279
	10,0	32,0	32,0		122TA4274
	10,0	32,0	40,0		140TA4827



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **HYSTER**

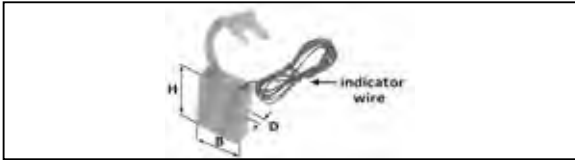


Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	10,0	40,0	46,0		122TA4282
	12,0	32,0	32,0		140TA4828
	12,0	32,0	32,0		140TA4829
	12,0	32,0	32,0		140TA4830
	12,0	48,0	32,0		122TA4283
	12,5	16,0	29,0		122TA4292
	12,5	16,0	36,0		140TA4831
	12,5	22,0	32,0		140TA4832
	12,5	25,0	39,0		140TA4833
	12,5	25,0	39,5		140TA4834
	12,5	25,0	40,0		140TA4835
		12,5	25,0	43,0	yes



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **HYSTER**

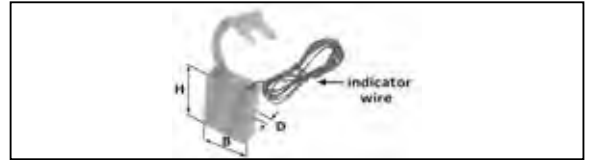


Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	12,5	25,0	45,0		140TA4836
	12,5	31,5	28,0		122TA4285
	12,5	31,5	32,5		140TA4837
	12,5	31,5	33,0		122TA4290
	12,5	31,5	33,0	yes	122TA4295
	12,5	31,5	41,0		140TA4838
	12,5	31,5	42,0		122TA4294
	12,5	31,5	42,0		140TA4839
	12,5	31,5	42,0	yes	122TA4293
	12,5	32,0	25,0		140TA4840
	12,5	32,0	34,0		140TA4841
	12,5	32,0	34,0	yes	140TA4842



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **HYSTER**

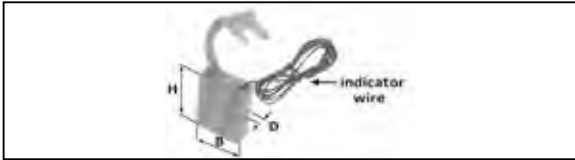


Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	12,5	32,0	34,5	yes	140TA4843
	12,5	32,0	35,0		140TA4844
	12,5	32,0	43,5		122TA4297
	12,5	32,0	43,5		122TA4296
	12,5	32,0	46,0	yes	140TA4845
	12,5	40,0	34,0		140TA4846
	12,5	40,0	45,0		140TA4847
	12,5	40,0	45,0	yes	122TA4286
	12,5	40,0	45,5	yes	140TA4848
	12,5	40,0	46,0		122TA4291
	12,5	47,0	41,0		140TA4849
	12,5	47,0	42,0	yes	122TA4298



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **HYSTER**

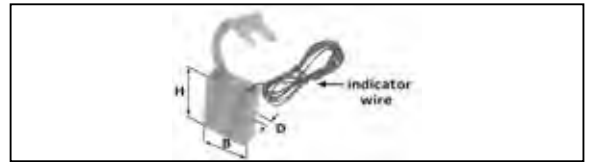

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	12,5	47,5	43,0		122TA4299
	12,5	48,0	32,0		122TA4287
	12,5	48,0	32,0	yes	140TA4850
	12,5	48,0	33,0		122TA4288
	13,0	32,0	29,0		140TA4851
	13,0	32,0	29,0		122TA4300
	13,0	32,0	32,0		140TA4852
	13,0	32,0	33,0		122TA4289
	13,0	64,0	29,0		140TA4853
	14,0	25,5	37,5		122TA4302
	15,0	35,0	32,0		140TA4854
	16,0	25,0	32,5		140TA4855



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **HYSTER**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	16,0	31,5	37,0		140TA4856
	16,0	40,0	34,0		140TA4857
	16,0	40,0	46,5	yes	140TA4858
	16,0	64,0	44,5		122TA4304
	20,0	25,0	46,0		140TA4859
M2	4,5	12,0	17,5		122TA4305
	9,0	19,0	17,0		140TA4860
	9,5	19,0	19,0		122TA4306
	11,0	25,0	35,0		122TA4307
	12,5	28,0	35,5		140TA4861
	12,5	28,0	36,0		140TA4862
	12,5	28,5	36,0		140TA4863



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **HYSTER**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
M2	12,5	28,5	38,0	yes	140TA4864
	12,5	28,5	40,0	yes	140TA4865
	12,5	32,0	31,0	yes	140TA4866
	13,0	28,5	36,0	yes	122TA4308
	13,0	28,5	36,0	yes	122TA4309
	13,0	28,5	38,0		140TA4867
	13,0	32,0	29,0	yes	122TA4310
	13,0	32,0	38,0		140TA4868
	15,0	30,0	36,0		140TA4869
	16,0	28,5	44,5	yes	122TA4314
	16,0	28,5	44,5	yes	140TA4870
	16,0	28,5	45,0	yes	122TA4311



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **HYSTER**

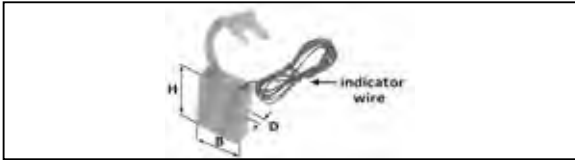

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
M2	16,0	31,5	45,0		140TA4871
	16,0	31,5	45,5	yes	122TA4313
	16,0	32,0	40,0		140TA4872
	17,0	31,0	35,5		140TA4873
	19,0	25,0	41,0		122TA4315
	19,0	28,5	51,0		140TA4874
	19,0	28,5	51,0	yes	122TA4316
	19,0	28,5	51,0	yes	140TA4875
	19,0	32,0	44,0		140TA4876
M3	12,5	16,0	32,0		140TA4877




Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **HYSTER**




Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
2	4,5	8,0	17,0		140TA9375
	5,0	7,0	21,5		121TA2474
	5,0	8,0	19,5		141TA3898
	5,0	8,0	19,5		141TA3899
	6,0	22,5	22,5		141TA3900
	8,0	22,0	32,0		141TA3902
	8,0	25,0	20,0		121TA2475
	8,5	19,0	22,5		141TA3904

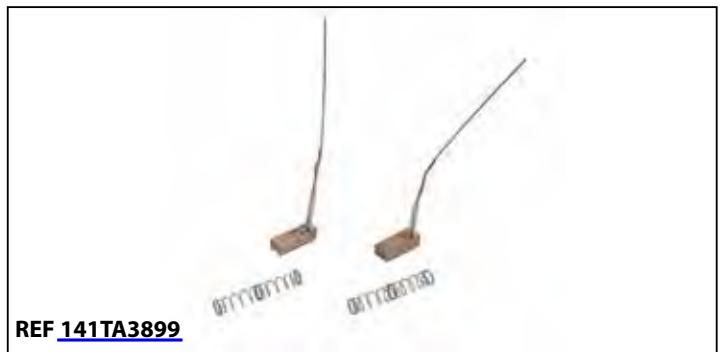

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **HYSTER**

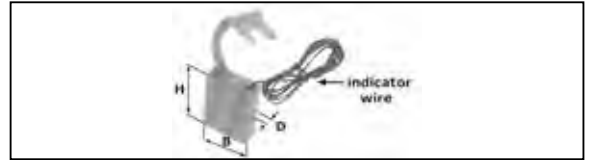


Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
2	9,0	17,5	17,0		141TA3954
4	6,0	12,5	22,0		141TA3906
	6,0	22,0	25,5		141TA3905
	6,0	27,0	19,0		141TA3907
	6,5	12,0	17,0		141TA3912
	6,5	12,5	14,0		141TA3910
	6,5	12,5	16,5		141TA3909
	6,5	19,0	16,0		141TA3911



REF [141TA3954](#)



REF [141TA3906](#)

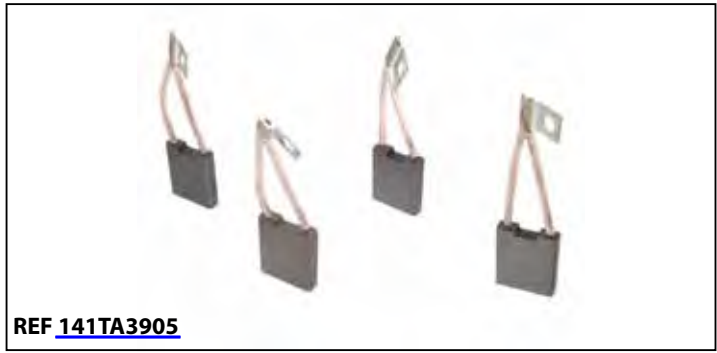

REF [141TA3905](#)



REF [141TA3907](#)



REF [141TA3912](#)



REF [141TA3910](#)




REF [141TA3909](#)



REF [141TA3911](#)

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **HYSTER**

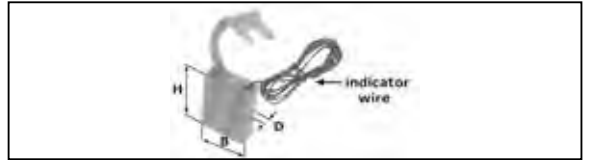

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	7,0	10,0	12,5		141TA3913
	7,0	10,0	17,0		141TA3916
	7,0	18,0	18,5		141TA3915
	7,0	19,0	16,5		141TA3920
	7,0	25,5	28,5		141TA3918
	8,0	12,5	22,0		141TA3921
	8,0	16,0	31,5		141TA3922
	8,0	19,0	19,0		141TA3931





Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **HYSTER**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	8,0	20,0	25,0		121TA2478
	8,0	20,0	25,5		141TA3923
	8,0	22,0	23,0		140TA9391
	8,0	25,0	20,0		141TA3924
	8,0	25,0	22,0		141TA3929
	8,0	28,0	30,5		141TA3925
	8,0	31,5	30,0		141TA3926
	8,0	32,0	32,0		141TA3928

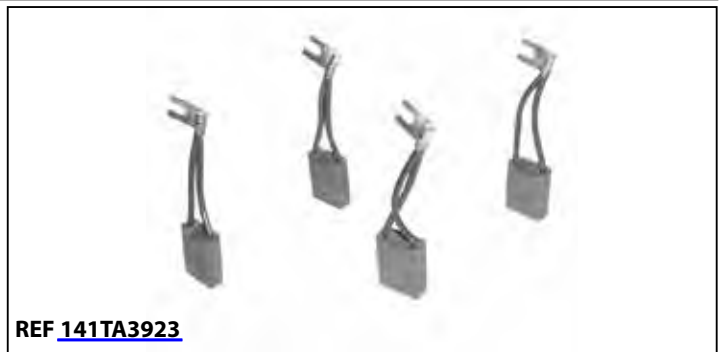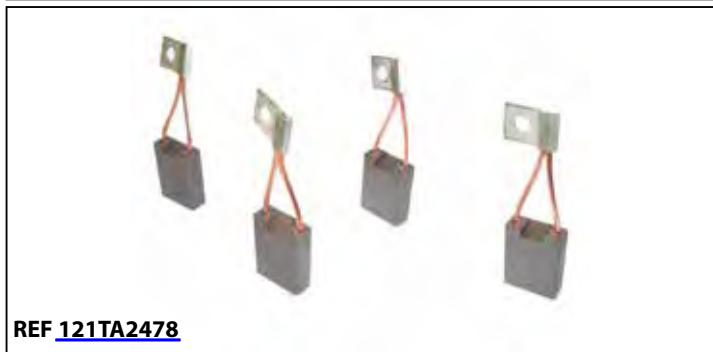


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **HYSTER**




Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	8,5	17,5	20,0		141TA3933
	8,5	17,5	25,5	yes	141TA3932
	8,5	19,0	16,5		141TA3935
	8,5	19,0	16,5		141TA3936
	8,5	19,0	16,5		141TA3938
	8,5	19,0	16,5		121TA2481
	8,5	19,0	17,0		141TA3940
	8,5	19,0	19,0		141TA3942

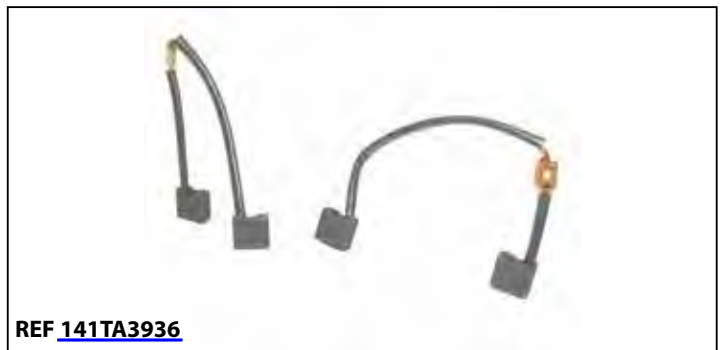


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **HYSTER**

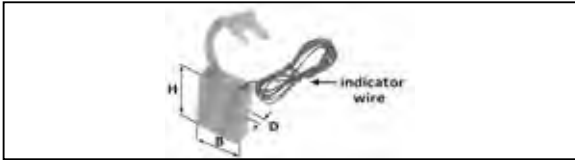


Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	8,5	19,0	23,0		141TA1099
	8,5	19,0	25,5		141TA3943
	9,0	12,5	25,5		140TA9377
	9,0	13,0	25,5		141TA3944
	9,0	13,0	25,5		141TA3963
	9,0	13,0	26,0		140TA9378
	9,0	16,0	17,0		141TA3945
	9,0	16,0	17,0		140TA9379

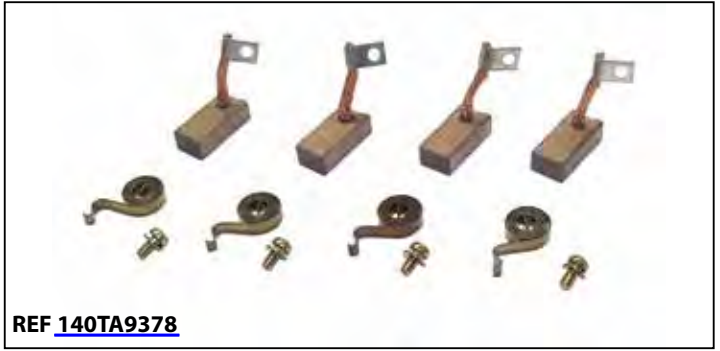

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **HYSTER**

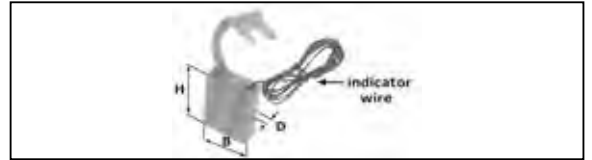


Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	9,0	17,5	13,0		140TA9384
	9,0	17,5	13,0		141TA3947
	9,0	17,5	15,5		141TA3948
	9,0	17,5	16,0		141TA3949
	9,0	17,5	16,0		141TA3950
	9,0	17,5	16,0		141TA3951
	9,0	17,5	16,0		141TA3952
	9,0	17,5	20,0		141TA3953




Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **HYSTER**

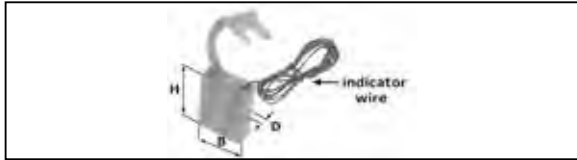

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	9,0	17,5	25,5		141TA3955
	9,0	17,5	25,5		141TA3957
	9,0	19,0	16,5		141TA3958
	9,0	19,0	22,0		141TA3959
	9,0	20,0	22,0		140TA9389
	9,0	25,5	27,0		141TA3960
	9,0	26,0	25,5		126TA6209
	9,0	29,5	25,5		141TA3962

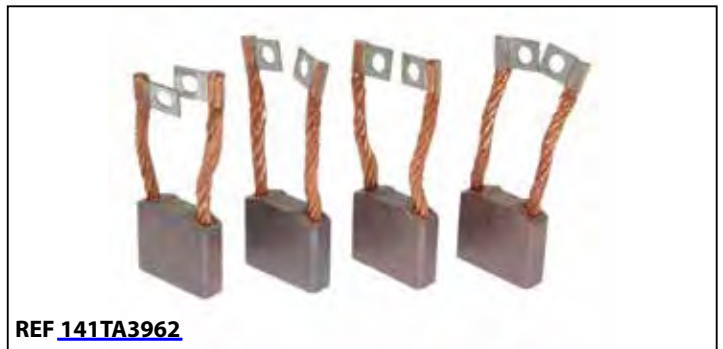

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **HYSTER**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	9,0	30,0	28,0		140TA9397
	9,5	16,0	28,5	yes	121TA2488
	9,5	16,0	28,5		141TA3973
	9,5	19,0	19,0		141TA3980
	9,5	20,5	29,0		141TA3967
	9,5	22,0	25,0		141TA3969
	9,5	32,0	27,0		141TA3974
	9,5	38,0	22,0		141TA3970





Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **HYSTER**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	9,5	38,0	22,5		141TA3975
	9,5	44,0	25,5		141TA3977
	9,5	44,5	25,0		141TA3979
	10,0	21,5	36,5		141TA3991
	10,0	25,0	16,5		140TA9394
	10,0	25,0	31,0		141TA3985
	10,0	25,5	35,0		141TA3992
	10,0	25,5	35,0		141TA3993

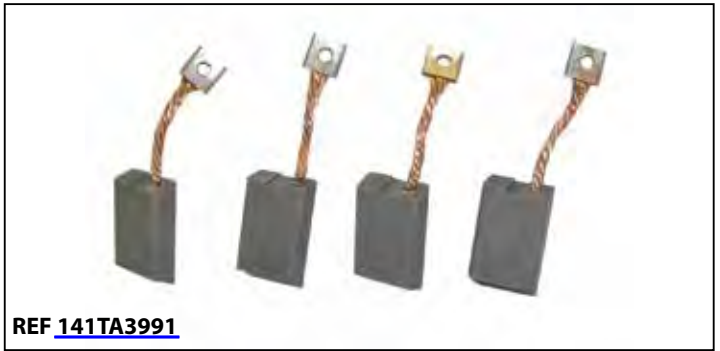
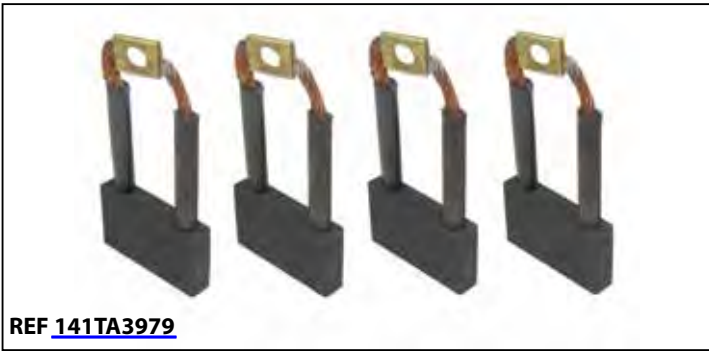


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **HYSTER**




Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	10,0	25,5	35,0		141TA3994
	10,0	25,5	35,0		141TA3995
	10,0	25,5	35,0		141TA3997
	10,0	28,0	28,0		140TA9396
	10,0	28,0	30,5		141TA3981
	10,0	28,0	30,5		141TA3982
	10,0	28,0	30,5		141TA3986
	10,0	28,0	30,5		141TA3987

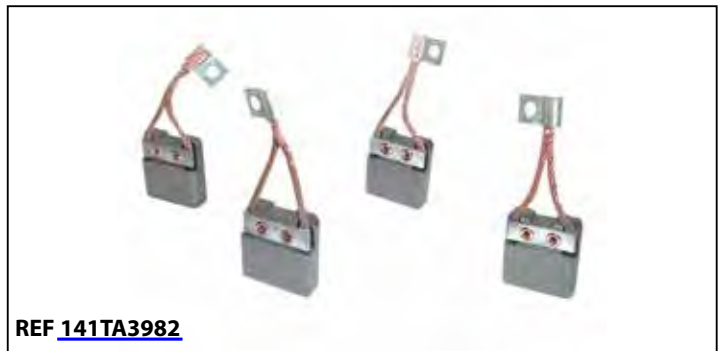
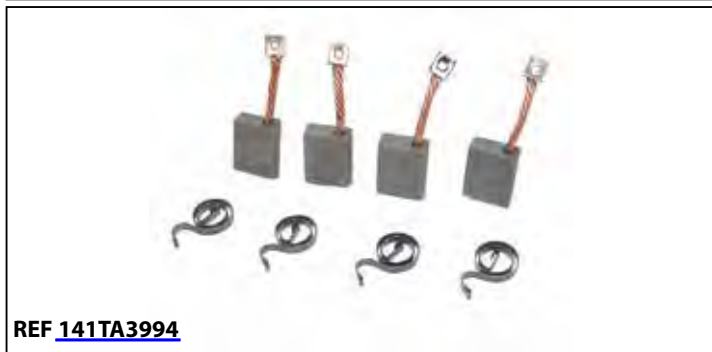


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **HYSTER**

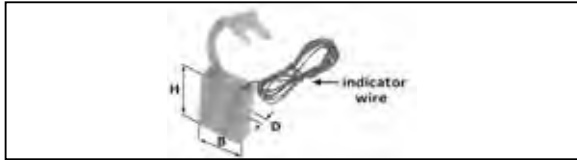

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	10,0	28,0	30,5		141TA3988
	10,0	32,0	32,0	yes	141TA3983
	10,0	32,0	32,5	yes	141TA3984
	10,0	40,0	45,5	yes	141TA3989
	10,0	40,0	46,0	yes	141TA3990
	10,5	25,5	35,5		141TA3998
	11,0	25,5	25,5		141TA3999
	11,0	25,5	25,5		141TA4000

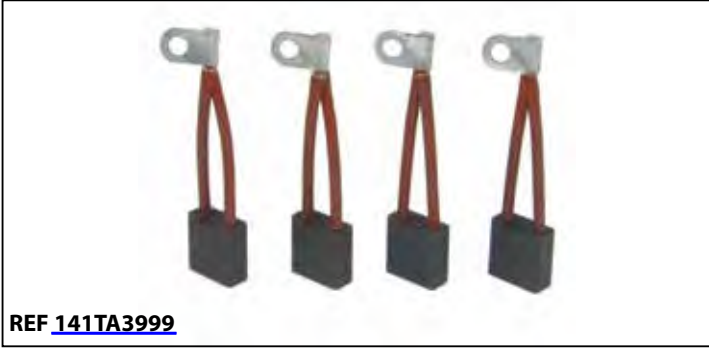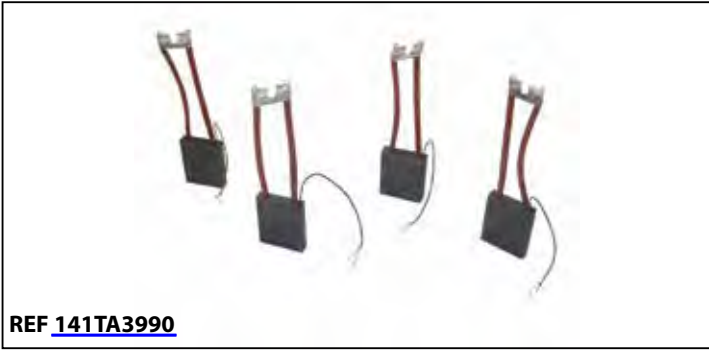


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **HYSTER**




Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	12,0	32,0	32,0		141TA4002
	12,0	36,0	26,5		141TA4001
	12,5	16,0	35,0		141TA4012
	12,5	16,0	36,5		141TA4021
	12,5	20,0	25,5	yes	141TA4013
	12,5	31,5	27,5		141TA4003
	12,5	31,5	31,5	yes	121TA2493
	12,5	31,5	32,5		141TA4005


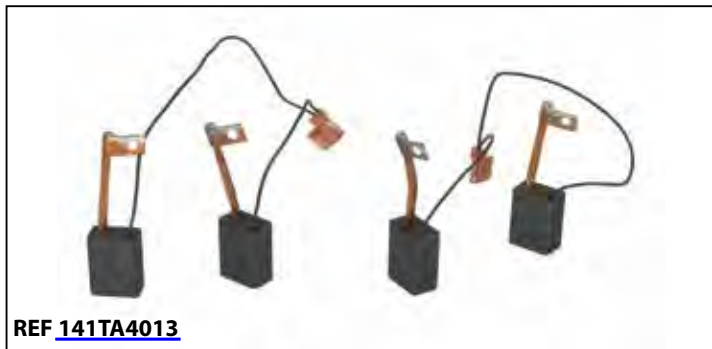


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **HYSTER**

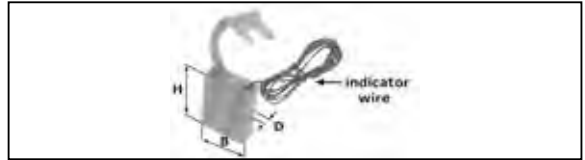

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	12,5	31,5	32,5		141TA4015
	12,5	31,5	34,0		141TA4004
	12,5	31,5	42,0		140TA9400
	12,5	32,0	30,0		141TA4008
	12,5	32,0	30,0		141TA4009
	12,5	32,0	35,0		141TA4016
	12,5	32,0	35,5		141TA4023
	12,5	32,0	35,5		141TA4024

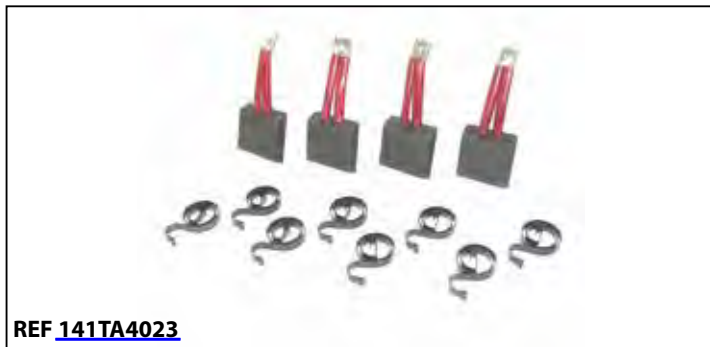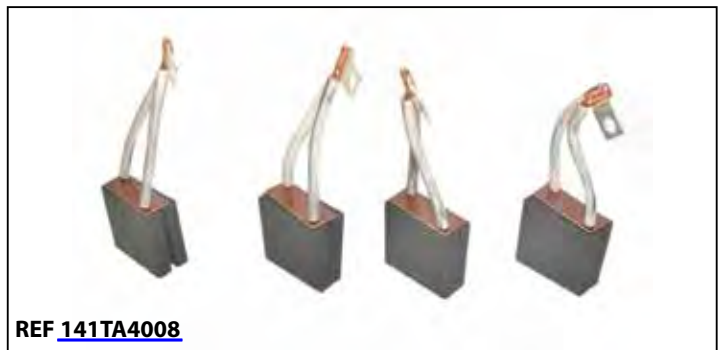


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **HYSTER**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	12,5	32,0	35,5		141TA4025
	12,5	32,0	35,5		141TA4026
	12,5	32,0	38,0		141TA4027
	12,5	32,0	38,0		141TA4028
	12,5	32,0	38,0		141TA4029
	12,5	32,0	38,0		141TA4030
	12,5	32,0	40,0		141TA4031
	12,5	32,0			141TA4006

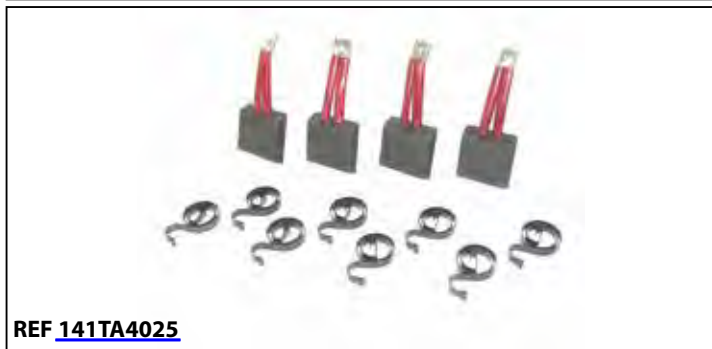


REF [141TA4025](#)



REF [141TA4026](#)




REF [141TA4027](#)

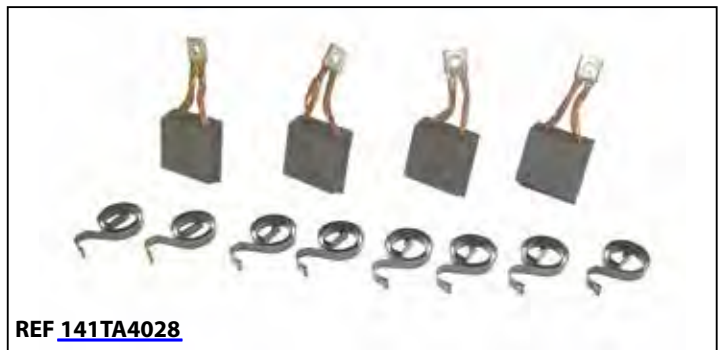

REF [141TA4028](#)



REF [141TA4029](#)

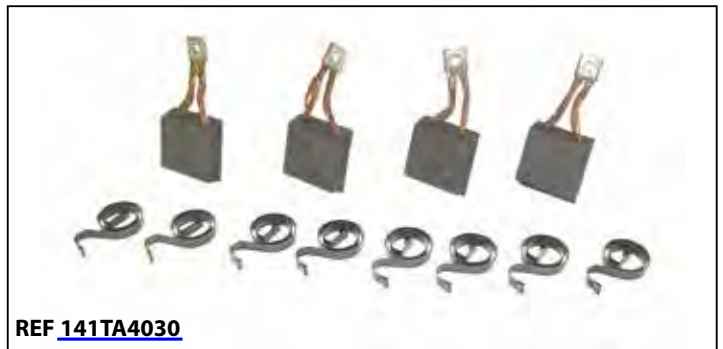

REF [141TA4030](#)



REF [141TA4031](#)




REF [141TA4006](#)

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **HYSTER**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	12,5	32,0	40,0	yes	141TA4007
	12,5	40,0	42,5	yes	141TA4017
	12,5	40,0	45,0	yes	141TA4018
	12,5	40,0	45,5		141TA4010
	12,5	40,0	45,5	yes	141TA4011
	12,5	40,0	46,0		141TA4019
	12,5	47,5	41,5		141TA4032
	12,5	47,5	43,0		141TA4033


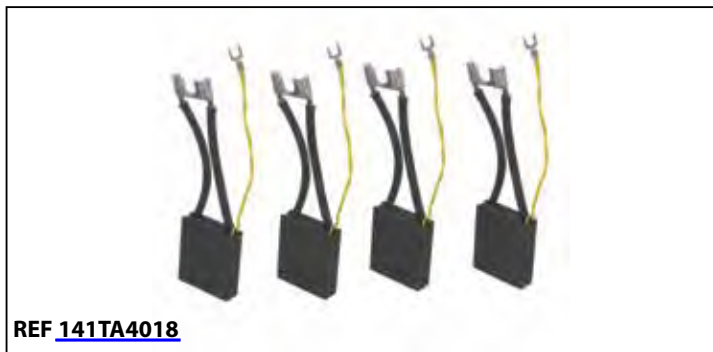


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **HYSTER**




Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	12,5	53,5	44,5		141TA4035
	12,5	53,5	45,0	yes	140TA9404
	12,5	64,0	29,0		140TA9406
	15,5	63,5	45,0	yes	141TA4036
	16,0	24,5	33,0		141TA4039
	16,0	31,5	33,0		141TA4041
	16,0	31,5	33,0		141TA4042
	16,0	31,5	33,0		141TA4045

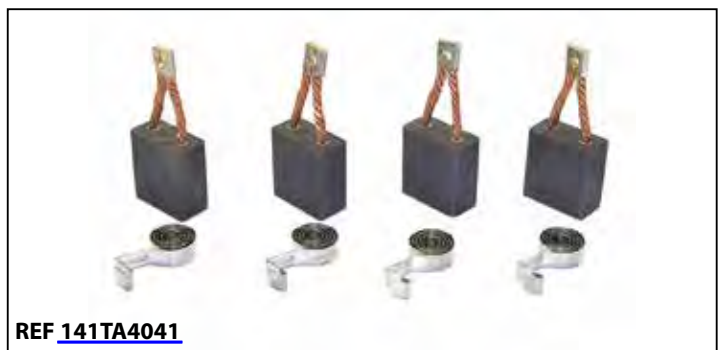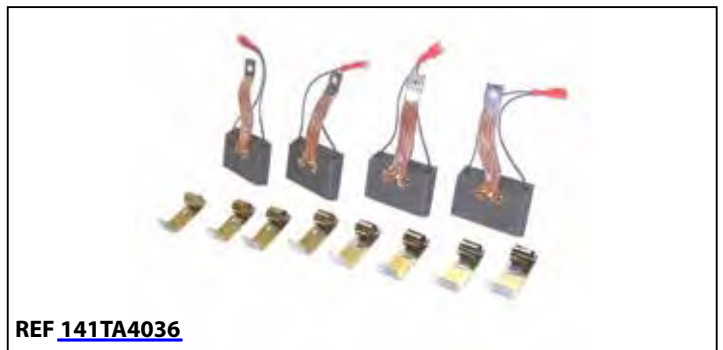


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **HYSTER**

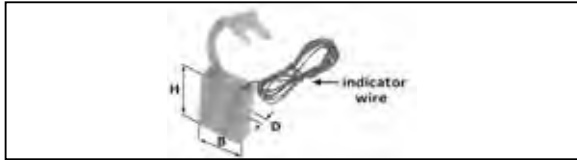

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	16,0	31,5	33,0		141TA4047
	16,0	38,0	51,0		141TA4037
	16,0	65,0	45,5		141TA4044
	17,0	35,0	30,0		141TA4048
	17,0	53,5	44,5	yes	140TA9403
	23,0	24,5	10,0		140TA9393
8	6,5	12,5	22,0		141TA4050
	7,0	22,0	19,5		141TA4051

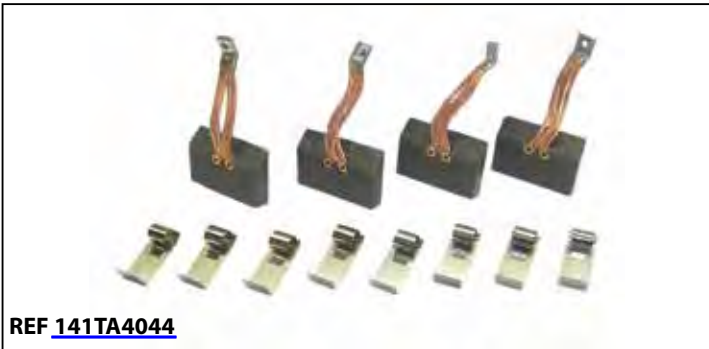


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **HYSTER**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	7,0	22,0	19,5		141TA4052
	7,0	22,0	19,5		141TA4053
	7,0	22,0	20,0		141TA4055
	8,5	16,0	24,0		141TA4056
	8,5	16,0	24,0		141TA4057
	9,0	13,0	25,5		121TA2496
	9,5	19,0	22,0		141TA4059
	10,0	25,0	32,5		140TA9412

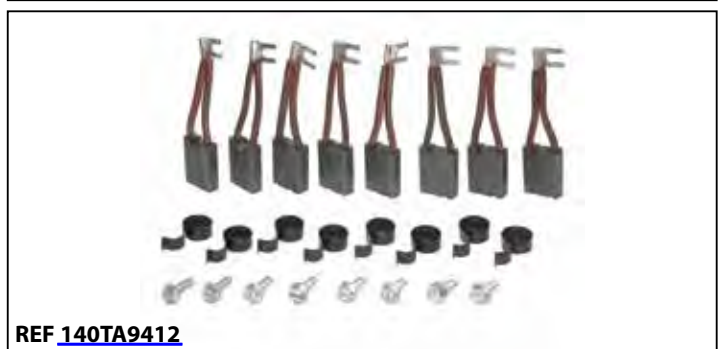

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **HYSTER**




Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	10,0	25,5	35,0		121TA2497
	10,0	26,0	31,0		141TA4060
	10,5	25,5	35,0		141TA4062
	10,5	25,5	35,0		140TA9418
	12,0	19,5	32,0		121TA2498
	12,5	15,5	35,0		141TA4075
	12,5	16,0	28,5		141TA4077
	12,5	16,0	35,0		141TA4078




Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **HYSTER**

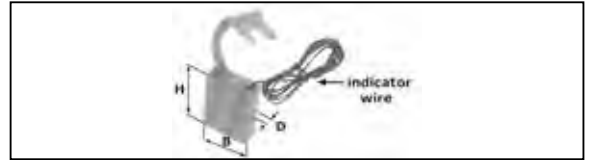

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	12,5	25,0	35,5	yes	141TA4065
	12,5	25,0	44,5		141TA4063
	12,5	25,0	45,0	yes	141TA4067
	12,5	25,0	45,5	yes	141TA4068
	12,5	25,0	46,0	yes	141TA4066
	12,5	28,5	38,5	yes	121TA2500
	12,5	31,5	37,5		141TA4079
	12,5	32,0	32,0	yes	141TA4071

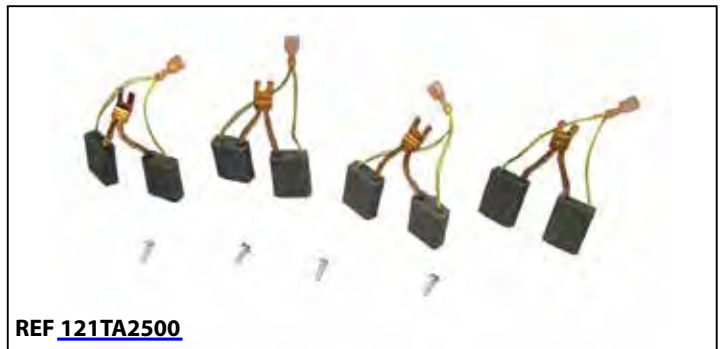


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **HYSTER**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	12,5	32,0	40,0	yes	141TA4069
	12,5	32,0	40,0		141TA4070
	12,5	32,0	41,0		140TA9422
	12,5	32,0	45,5	yes	141TA4073
	12,5	32,0	46,0		141TA4072
	14,0	25,0	35,5		141TA4088
	14,0	25,0	38,0	yes	141TA4092
	14,0	25,5	32,0		141TA4094

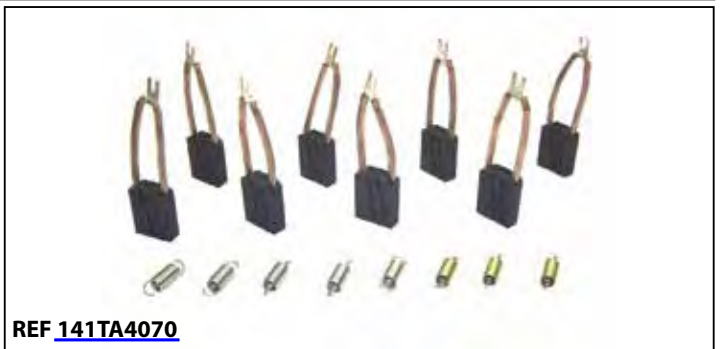

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **HYSTER**




Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	14,0	25,5	35,0	yes	140TA9419
	14,0	25,5	35,0		141TA4091
	14,0	25,5	35,5		141TA4082
	14,0	25,5	35,5		141TA4086
	14,0	25,5	37,5		141TA4090
	14,0	25,5	38,0		121TA2502
	14,0	25,5	39,0		141TA4083
	14,0	25,5	47,0		141TA4084






Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **HYSTER**

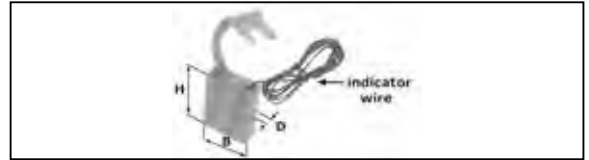

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	16,0	24,5	33,5		141TA4100
	16,0	28,5	44,5		121TA2503
	16,0	28,5	44,5	yes	140TA9420
	16,0	28,5	45,0		121TA2504
	16,0	28,5	45,0	yes	141TA4096
	16,0	31,5	38,5		141TA4099
	16,0	31,5	44,0		141TA4102
	16,0	31,5	45,0		141TA4098

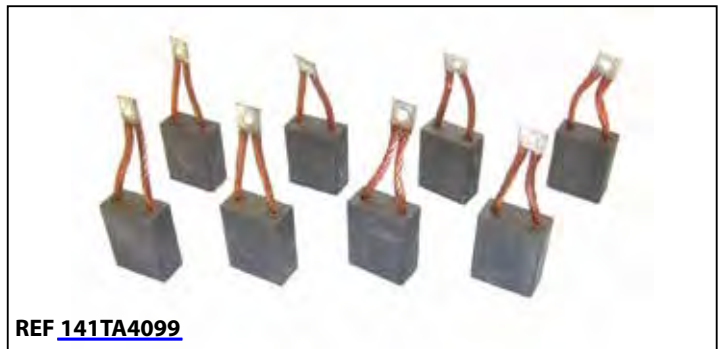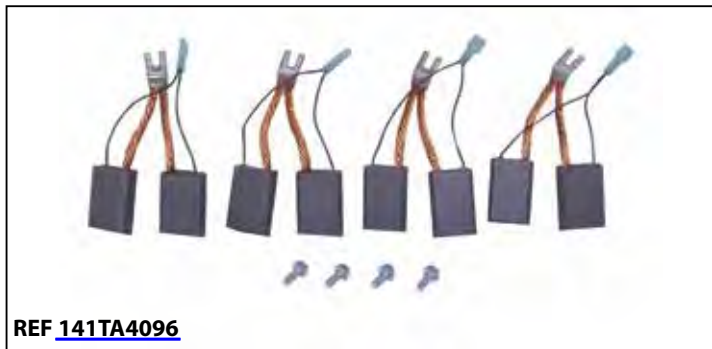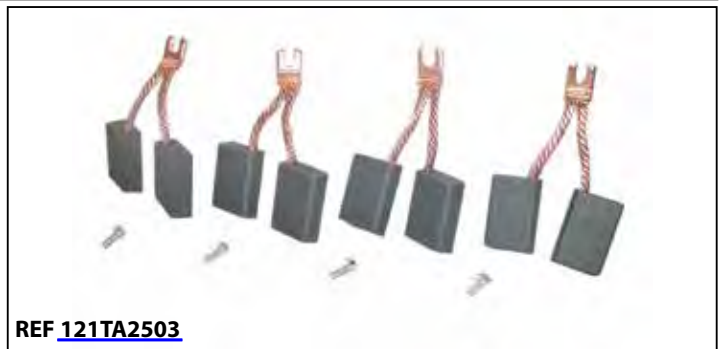

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.


used for: **HYSTER**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	16,0	32,0	42,0		141TA4103
	19,0	28,5	51,5		140TA9421
	19,0	31,5	41,5		141TA4106
12	14,0	25,5	45,0		141TA4108



used for: **HYUNDAI**

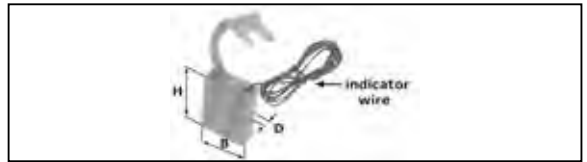


Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	5,0	7,0	17,0		140TA4878
	5,0	8,0	20,0		140TA4879
	5,0	8,0	23,0		140TA4880
	7,0	10,0	17,0		140TA4881
	7,0	10,0	18,0		140TA4882
	7,0	19,0	15,5		140TA4883
	7,5	15,0	24,0		122TA4317
	8,0	18,0	24,0		140TA4884
	8,0	22,5	25,0		140TA4885
	8,0	25,0	17,0		140TA4886
	12,5	20,0	32,0		122TA4319
	12,5	31,5	32,0		140TA4887



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **HYUNDAI**

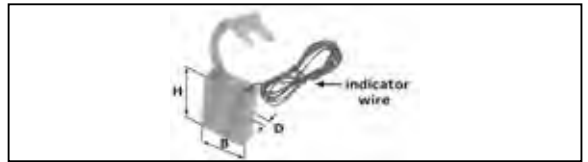

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	12,5	32,0	32,0		122TA4320
	12,5	32,0	32,0	yes	140TA4888
	12,5	32,0	32,5		122TA4318
	16,0	25,0	32,0		122TA4321
E3	15,0	40,0	32,0		140TA4889
	15,0	40,0	35,0		140TA4890
	16,0	55,5	33,0	yes	140TA4891
	16,0	56,0	33,0		140TA4892
E4	9,5	38,0	22,0		140TA4893
	10,0	20,0	20,0		122TA4322
	12,5	20,0	32,0		140TA4894
	12,5	32,0	35,5	yes	140TA4895



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **HYUNDAI**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	12,5	40,0	43,0		140TA4896
	14,0	25,0	38,0		140TA4897
	14,0	25,0	38,0	yes	140TA4898
	14,0	40,0	33,5		122TA4323
	16,0	20,0	26,0		140TA4899
	16,0	25,0	33,0		140TA4900
	16,0	31,5	33,0		140TA4901
M2	4,5	12,0	17,5		140TA4902
	12,5	20,0	32,0		140TA4903




used for: **ICEM**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	9,0	13,0	25,0		122TA4324
	9,0	16,0	17,0		140TA4904
E4	6,0	28,0	31,0		122TA4325
	8,0	28,0	30,5		122TA4326
	10,0	25,0	23,0		140TA4905
	10,0	26,0	30,5		122TA4327
	10,0	28,0	30,5		140TA4906
	10,0	28,0	31,0		140TA4907
	10,0	32,0	30,0		140TA4908




used for: **ICEM**

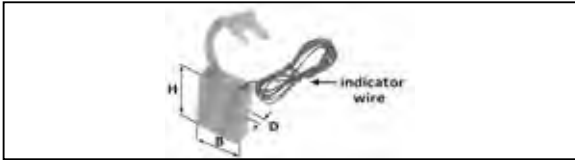

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	9,0	16,0	17,0		121TA2506




used for: **JCB**

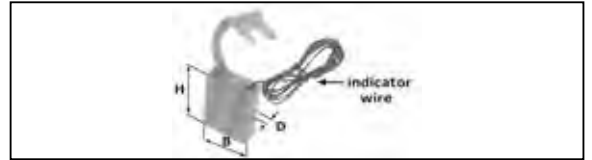

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	8,0	25,0	20,0		140TA4909
	8,0	25,0	20,0		140TA4910




used for: **JCB**

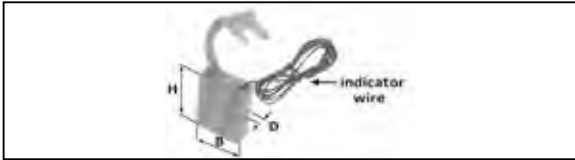

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
2	5,0	8,0	19,5		141TA4109
4	8,0	25,0	19,0		140TA9426



used for: **JLG**

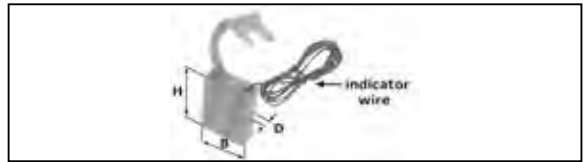

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	6,0	9,5	19,0		140TA4911
	12,5	16,0	36,5		140TA4912
E4	12,5	31,5	28,0		140TA4913
	16,0	24,5	33,0		140TA4914
	16,0	24,5	33,5		140TA4915
	16,0	31,5	33,0		140TA4916




used for: **JLG**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
2	6,0	9,5	21,5		126TA5257
	9,5	31,5	31,5		126TA5258
4	8,0	28,0	30,5		140TA9432
	9,0	19,0	16,5		140TA9428
	9,5	20,5	28,0		140TA9430
	9,5	20,5	28,5		140TA9431
	10,0	19,0	25,5	yes	140TA9429
	10,0	25,0	23,0		141TA4110



REF [126TA5257](#)

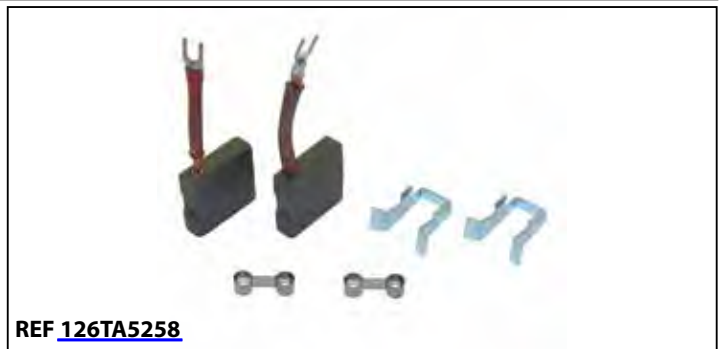

REF [126TA5258](#)



REF [140TA9432](#)



REF [140TA9428](#)



REF [140TA9430](#)



REF [140TA9431](#)




REF [140TA9429](#)



REF [141TA4110](#)

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.


used for: **JLG**

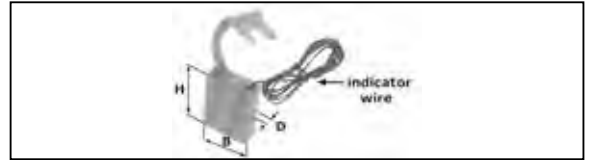

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	10,0	31,5	32,0		126TA5256
8	7,0	22,0	19,5		141TA4111



used for: **JUNGHEINRICH-STEINBOCK**

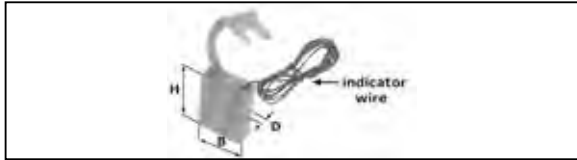

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	5,0	7,0	17,0		122TA4329
	5,0	8,0	20,0		122TA6028
	5,0	8,0	23,0		140TA4917
	6,0	7,0	20,0		122TA4331
	6,0	16,0	22,0		122TA4332
	6,0	16,0	22,5		140TA4918
	6,0	19,0	19,5		122TA4334
	6,5	12,0	18,0		140TA4919
	7,0	10,0	18,0		122TA4336
	7,0	12,0	17,0		122TA4337
	7,0	18,0	18,0		122TA4335
	8,0	10,0	20,0		140TA4920



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **JUNGHEINRICH-STEINBOCK**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	8,0	10,0	20,0	yes	140TA4921
	8,0	10,0	20,0	yes	122TA7189
	8,0	12,5	22,0		140TA4922
	8,0	12,5	22,0		140TA4923
	8,0	12,5	22,0		140TA4924
	8,0	12,5	22,0		140TA4925
	8,0	12,5	22,0	yes	140TA4926
	8,0	12,5	22,0	yes	140TA4927
	8,0	12,5	22,0	yes	140TA4928
	8,0	16,0	22,0		140TA4929
	8,0	16,0	25,0		122TA7190
	8,0	20,0	26,0		122TA4341



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **JUNGHEINRICH-STEINBOCK**

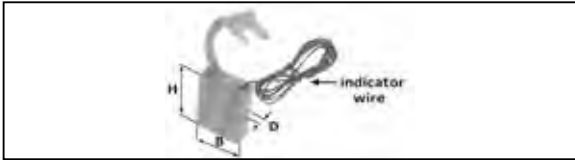


Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	8,0	22,0	28,0		140TA4930
	8,0	22,0	28,5		140TA4931
	8,0	22,0	28,5		122TA4342
	8,0	22,0	28,5	yes	140TA4932
	8,0	24,0	17,0		122TA4343
	8,0	25,0	23,0	yes	140TA4933
	9,0	13,0	25,0		122TA4348
	9,0	13,0	25,0		122TA4350
	9,0	13,0	25,5		140TA4934
	9,0	13,0	25,5		122TA4351
	9,0	13,0	26,0		140TA4935
	9,0	19,0	22,5		122TA4349



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **JUNGHEINRICH-STEINBOCK**

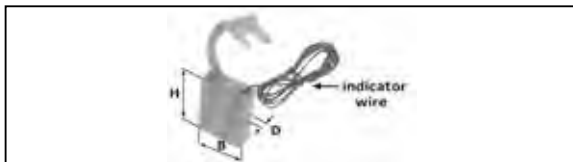


Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	9,0	20,0	29,0		122TA4353
	9,5	16,0	28,5		140TA4936
	10,0	12,0	23,0		122TA4359
	10,0	12,5	21,0		140TA4937
	10,0	12,5	22,5		140TA4938
	10,0	12,5	22,5		122TA4360
	10,0	12,5	22,5	yes	140TA4939
	10,0	16,0	25,0		122TA4361
	10,0	16,0	25,0		140TA4940
	10,0	20,0	20,0		140TA4941
	10,0	20,0	20,0		122TA4363
	10,0	20,0	20,0	yes	140TA4942



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **JUNGHEINRICH-STEINBOCK**

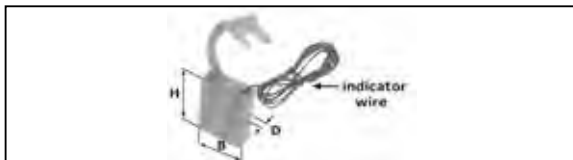

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	10,0	20,0	20,5		122TA4365
	10,0	20,0	20,5		140TA4943
	10,0	20,0	20,5	yes	140TA4944
	10,0	20,0	22,0		140TA4945
	10,0	20,0	25,0		122TA4362
	10,0	20,0	25,0		140TA4946
	10,0	20,0	25,0		140TA4947
	10,0	20,0	25,0		140TA4948
	10,0	20,0	25,0	yes	140TA4960
	10,0	20,0	26,0		122TA7201
	10,0	20,0	26,0		140TA4949
	10,0	25,0	23,0		140TA4950



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **JUNGHEINRICH-STEINBOCK**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	10,0	25,0	23,5		122TA4355
	10,0	25,0	25,0		140TA4951
	10,0	25,0	32,0		140TA4952
	10,0	28,0	20,0		140TA4953
	10,0	28,0	20,0		140TA4954
	10,0	28,0	30,0	yes	140TA4955
	12,0	25,0	28,0		122TA4368
	12,5	16,0	25,0		140TA4956
	12,5	25,0	30,0		122TA4369
	12,5	25,0	32,0		122TA4370
	12,5	25,0	32,0		122TA4371
	20,0	25,0	25,0		140TA4957



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **JUNGHEINRICH-STEINBOCK**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E3	6,0	28,0	30,5		122TA4372
	8,0	28,0	30,0		140TA4958
	8,0	28,0	30,5		140TA4959
	8,0	28,0	30,5		122TA4373
	10,0	32,0	31,0		122TA4376
	10,0	32,0	31,0	yes	122TA4377
E4	6,0	22,0	25,0		122TA4378
	6,0	22,0	25,5		140TA4961
	6,0	28,0	30,5		140TA4962
	6,0	32,0	32,0		122TA4381
	8,0	24,0	32,0		140TA4963
	8,0	25,0	22,0		140TA4964



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **JUNGHEINRICH-STEINBOCK**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	8,0	25,0	22,0		140TA4965
	8,0	25,0	23,0		140TA4966
	8,0	28,0	30,5		122TA4382
	8,0	32,0	30,0		140TA4967
	8,0	32,0	31,0		122TA4386
	8,0	32,0	31,0		140TA4968
	8,0	32,0	31,0		122TA4387
	8,0	32,0	32,0		122TA4383
	8,0	32,0	32,0		140TA4969
	8,0	32,0	32,0		122TA4385
	9,0	20,0	28,0		140TA4970
	9,0	20,0	28,0	yes	140TA4971



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **JUNGHEINRICH-STEINBOCK**

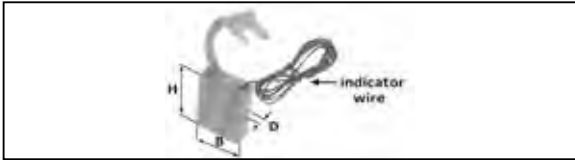

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	9,0	26,0	25,0		140TA4972
	9,5	19,0	19,0		140TA4973
	9,5	38,0	22,0		122TA4390
	10,0	20,0	32,0		140TA4974
	10,0	20,0	33,0		122TA7229
	10,0	25,0	20,0		140TA4975
	10,0	25,0	22,0		122TA4395
	10,0	25,0	22,0		122TA4394
	10,0	25,0	22,0		140TA4976
	10,0	25,0	22,0		122TA4410
	10,0	25,0	22,0		140TA4977
	10,0	25,0	25,0		122TA7223



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **JUNGHEINRICH-STEINBOCK**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	10,0	25,0	25,0		140TA4978
	10,0	25,0	28,0		122TA7224
	10,0	26,0	30,5		140TA4979
	10,0	28,0	30,0		140TA4980
	10,0	28,0	33,0		122TA7230
	10,0	32,0	31,0		122TA4414
	10,0	32,0	31,0		122TA4413
	10,0	32,0	31,0		122TA4404
	10,0	32,0	31,0		122TA4400
	10,0	32,0	32,0		140TA4981
	10,0	32,0	32,0		140TA4982
	10,0	32,0	32,0		122TA4415



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **JUNGHEINRICH-STEINBOCK**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	10,0	32,0	32,0	yes	122TA4402
	10,0	32,0	32,5		140TA4983
	10,0	32,0	33,0		122TA4416
	10,0	32,0	33,0	yes	140TA4984
	10,0	32,0	40,0		140TA4985
	10,0	32,0	40,5		122TA4417
	10,0	40,0	32,0		122TA4405
	10,0	40,0	32,5		122TA4418
	10,0	40,0	46,0		140TA4986
	10,0	48,0	31,0		122TA4408
	10,0	48,0	31,0		122TA4392
	10,0	48,0	32,0	yes	122TA4406



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **JUNGHEINRICH-STEINBOCK**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	10,0	48,0	32,5		122TA7228
	12,0	20,0	32,0		122TA4419
	12,0	20,0	32,0	yes	140TA4987
	12,0	25,0	28,5		122TA4421
	12,0	32,0	32,0		140TA4988
	12,0	32,0	32,0		122TA4422
	12,0	32,0	32,0		122TA4423
	12,0	32,0	32,0	yes	140TA4989
	12,0	32,0	40,0		122TA4425
	12,0	32,0	40,0		122TA4424
	12,0	32,0	41,0		140TA4990
	12,0	40,0	40,0		140TA4991



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **JUNGHEINRICH-STEINBOCK**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	12,0	48,0	32,0		140TA4992
	12,0	48,0	32,0	yes	122TA4426
	12,5	20,0	32,5		140TA4993
	12,5	25,0	32,0		122TA4428
	12,5	25,0	32,5	yes	122TA4429
	12,5	25,0	33,0		140TA4994
	12,5	32,0	32,0		122TA6033
	12,5	32,0	32,0		122TA4432
	12,5	32,0	32,0		122TA6034
	12,5	32,0	32,0	yes	122TA6032
	12,5	32,0	40,5		140TA4995
	12,5	40,0	40,0		122TA4434



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **JUNGHEINRICH-STEINBOCK**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	12,5	40,0	45,5	yes	122TA4437
	12,5	40,0	46,0		122TA4438
	16,0	25,0	32,0		122TA6036
	16,0	25,0	32,0		122TA7246
	16,0	32,0	32,0		140TA4996
	16,0	40,0	45,0		122TA4441
	20,0	32,0	32,0		122TA4443
M2	4,5	12,0	17,5		140TA4997
	10,0	16,0	25,0		122TA6039
	12,0	16,0	25,0		122TA6040
	12,0	20,0	25,0		140TA4998
	12,0	20,0	33,0		122TA4446



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **JUNGHEINRICH-STEINBOCK**

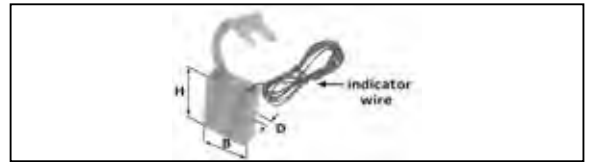


Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
M2	12,5	12,5	25,0		122TA6042
	12,5	16,0	25,0		122TA6043
	12,5	20,0	32,0		122TA4450
	12,5	20,0	33,0		140TA4999
	12,5	20,0	33,0	yes	140TA5000
	12,5	20,0	40,0		140TA5001
	16,0	16,0	25,0		122TA4451
	16,0	20,0	32,0		122TA6045
	16,0	20,0	32,0		122TA4452
	16,0	20,0	32,0		122TA4455
	16,0	28,5	45,0	yes	122TA4454
	20,0	20,0	25,0		140TA5002



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.


used for: **JUNGHEINRICH-STEINBOCK**

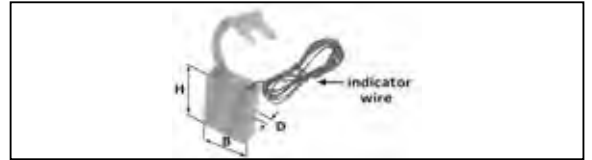



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
M2	20,0	20,0	32,0		122TA6047
	20,0	20,0	32,0		122TA7248
M3	10,0	16,0	31,0		140TA5003



used for: **JUNGHEINRICH-STEINBOCK**

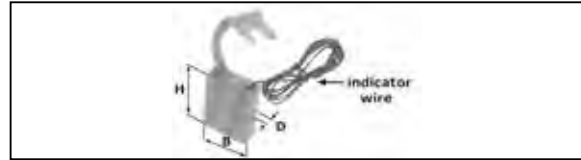


Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
2	4,5	8,0	17,0		140TA9434
	5,0	8,0	12,5		141TA4112
	8,0	12,5	17,5		121TA2507
	8,0	16,0	20,0		141TA4113
4	6,0	12,0	11,5		141TA4114
	6,0	22,0	25,5		141TA4115
	6,0	27,0	19,0		121TA2513
	6,0	28,0	30,5		141TA1102

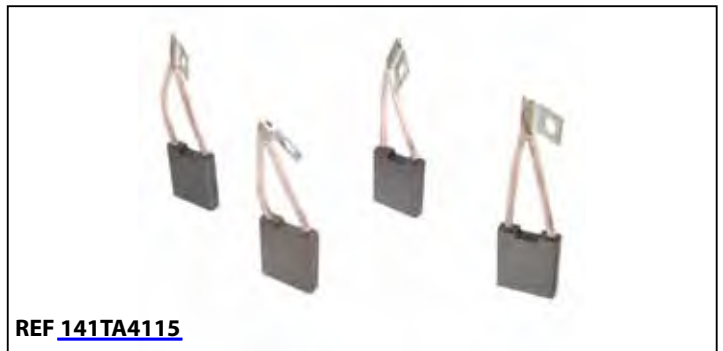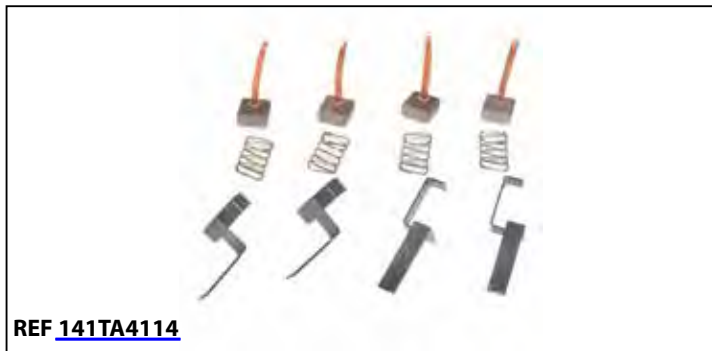


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **JUNGHEINRICH-STEINBOCK**

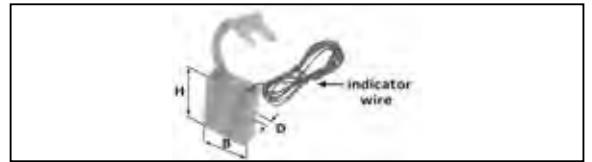


Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	6,0	28,0	30,5		141TA4116
	6,0	28,0	30,5		141TA4117
	6,5	12,0	17,0		141TA4118
	7,0	12,5	20,5		141TA4119
	7,0	18,0	14,0		141TA4120
	7,0	19,0	16,5		121TA2516
	7,0	25,5	28,5		141TA4121
	8,0	10,0	20,0	yes	141TA4124



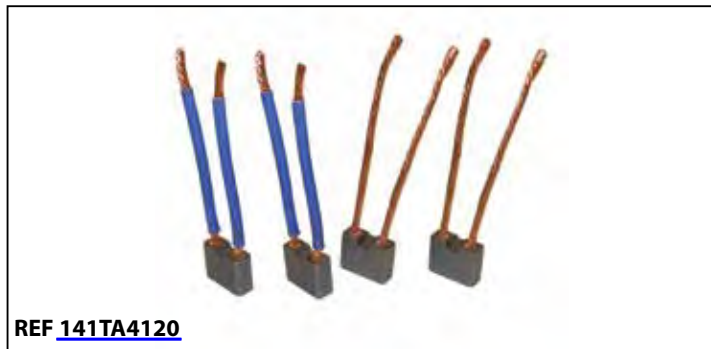


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **JUNGHEINRICH-STEINBOCK**

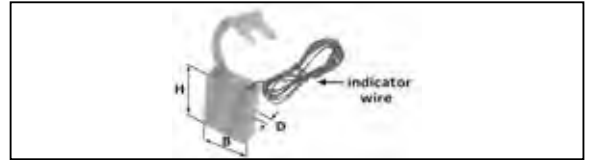

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	8,0	12,5	22,0		141TA4125
	8,0	12,5	22,0		141TA4136
	8,0	19,0	22,5		141TA4122
	8,0	20,0	25,0		141TA4126
	8,0	20,0	25,0		141TA4137
	8,0	20,0	25,0		141TA4138
	8,0	20,0	25,0		141TA4139
	8,0	20,0	25,5		141TA4127

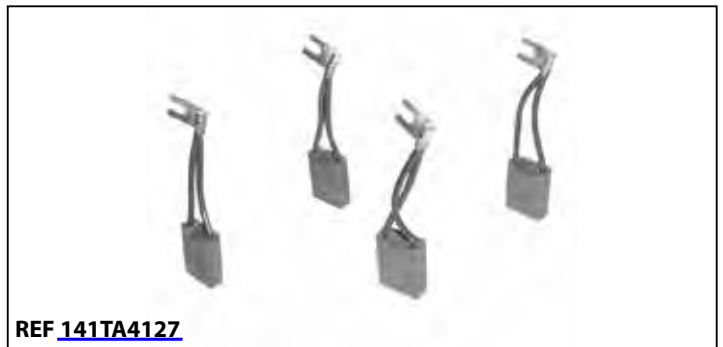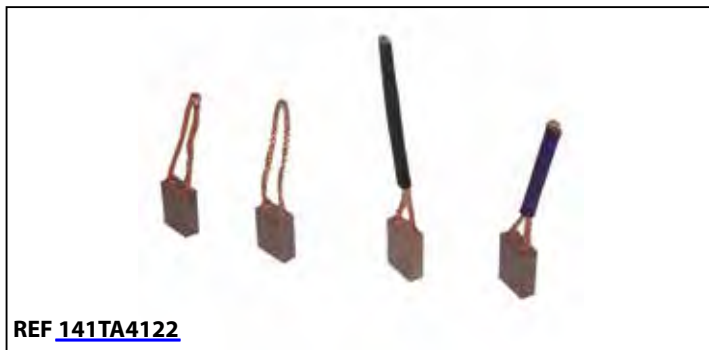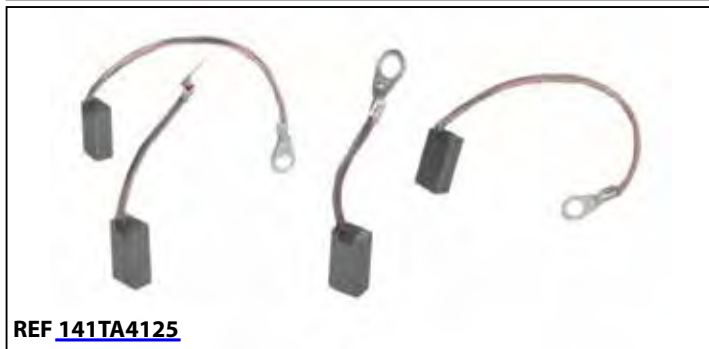


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **JUNGHEINRICH-STEINBOCK**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	8,0	20,0	26,0		141TA4129
	8,0	20,0	27,0		141TA4128
	8,0	22,0	22,0		140TA9457
	8,0	25,0	23,0		140TA9460
	8,0	27,5	30,5		141TA4130
	8,0	27,5	30,5		140TA9466
	8,0	28,0	30,5		141TA4123
	8,0	28,0	30,5		141TA4132

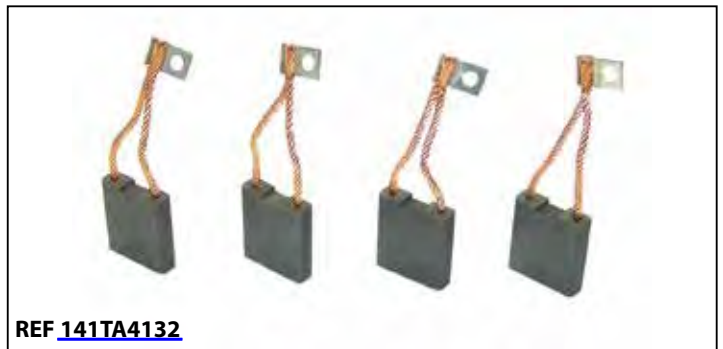

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **JUNGHEINRICH-STEINBOCK**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	8,0	28,0	30,5		140TA9465
	8,0	28,0	32,0		141TA4131
	8,0	32,0	30,0		141TA4134
	8,0	32,0	30,0		141TA4135
	8,0	32,0	32,0		141TA4133
	8,5	11,5	16,0		141TA4140
	8,5	17,5	16,0		141TA4141
	8,5	19,0	14,0		141TA4142




Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **JUNGHEINRICH-STEINBOCK**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	8,5	19,0	16,5		141TA1104
	8,5	19,0	17,0		121TA2536
	9,0	12,0	16,0		141TA4154
	9,0	13,0	25,5		141TA4143
	9,0	13,0	25,5		141TA4144
	9,0	13,0	25,5		141TA4148
	9,0	13,0	25,5		121TA2546
	9,0	13,0	25,5		141TA4155

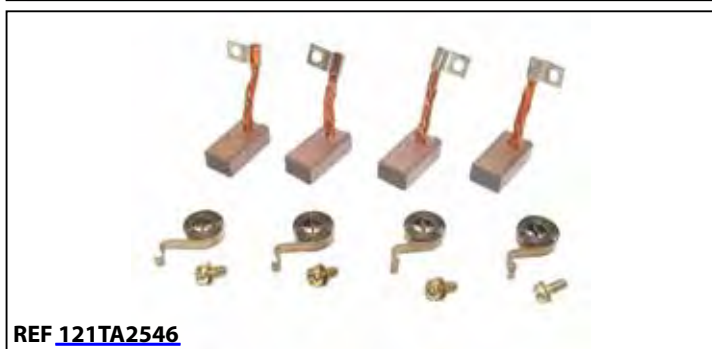


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **JUNGHEINRICH-STEINBOCK**




Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	9,0	13,0	26,0		141TA4149
	9,0	13,0	28,5		141TA4150
	9,0	16,0	17,0		141TA4151
	9,0	17,5	13,0		140TA9445
	9,0	19,0	14,0		141TA4145
	9,0	19,0	22,0		141TA4146
	9,0	19,5	16,0		141TA4152
	9,0	20,0	29,5	yes	121TA2543

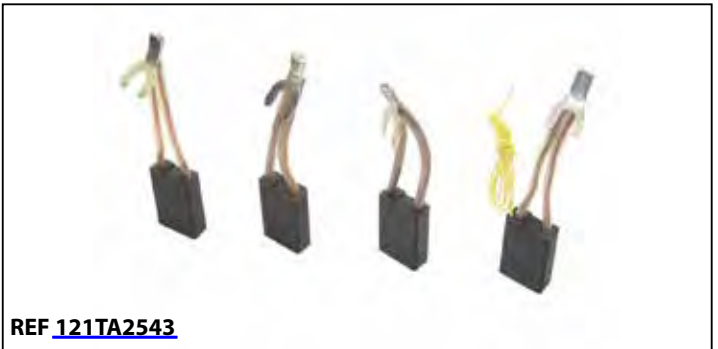


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **JUNGHEINRICH-STEINBOCK**

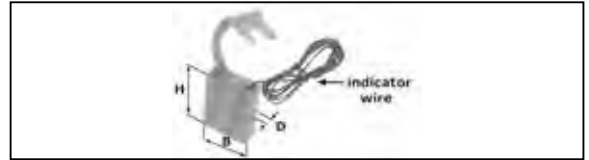


Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	9,0	25,5	25,5		141TA4153
	9,0	26,0	26,0		141TA4147
	9,0	26,0	26,0		140TA9463
	9,5	20,5	28,5		121TA2547
	9,5	38,0	32,0		141TA4156
	9,5	44,0	25,5		121TA2549
	10,0	16,0	20,0		121TA2556
	10,0	16,0	25,0		141TA4164


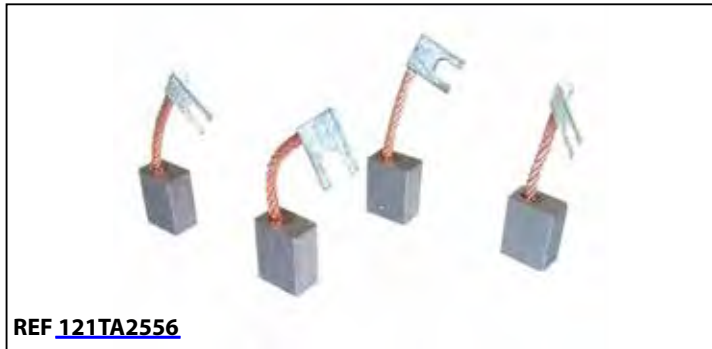


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **JUNGHEINRICH-STEINBOCK**

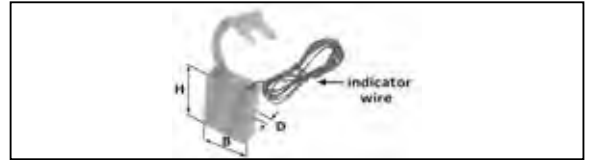

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	10,0	19,5	26,0		141TA4158
	10,0	20,0	20,5		121TA2558
	10,0	20,0	26,0		141TA4159
	10,0	20,0	26,0		121TA2557
	10,0	20,0	26,0		141TA4165
	10,0	25,0	20,5		140TA9459
	10,0	25,0	21,0		121TA2561
	10,0	25,0	22,0		141TA4168

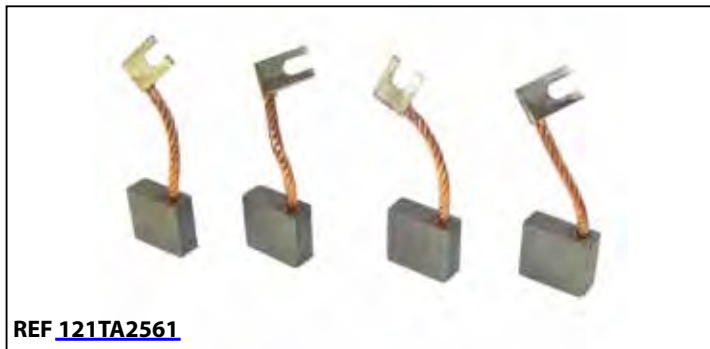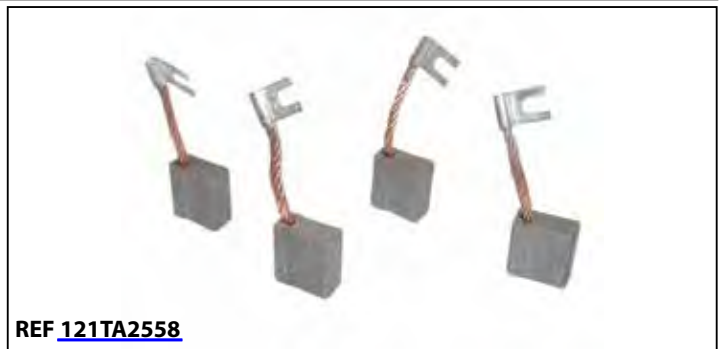


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **JUNGHEINRICH-STEINBOCK**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	10,0	25,0	23,0		141TA4166
	10,0	25,0	23,0		141TA4167
	10,0	25,0	23,0		141TA4169
	10,0	25,0	23,5		141TA4160
	10,0	25,0	25,0		141TA4170
	10,0	25,0	25,0		106TA7526
	10,0	28,0	30,0	yes	141TA4161
	10,0	28,0	30,5		141TA1105

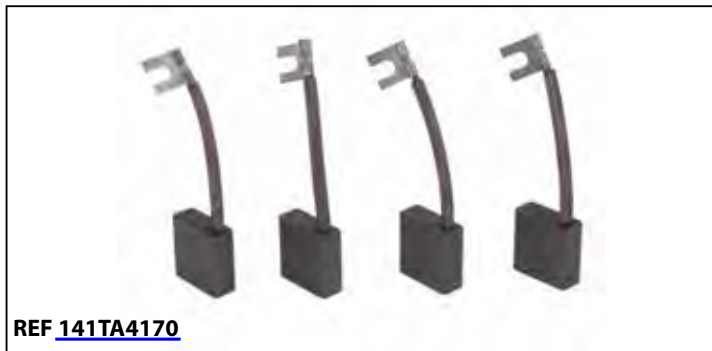


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **JUNGHEINRICH-STEINBOCK**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	10,0	28,0	30,5		122TA7305
	10,0	32,0	32,0	yes	141TA4157
	10,0	40,0	36,0		141TA4162
	10,0	40,0	46,0		141TA4163
	10,0	40,0	46,0		141TA4171
	10,0	50,0	30,0	yes	121TA2567
	11,0	20,0	24,5		141TA4172
	12,5	19,5	25,5		141TA4173

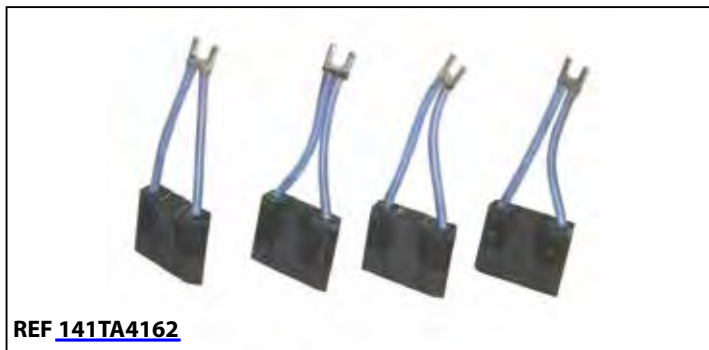


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **JUNGHEINRICH-STEINBOCK**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	12,5	25,0	28,0		141TA4174
	12,5	25,0	28,5		116TA5462
	12,5	31,5	32,0		141TA4175
	12,5	31,5	32,0		141TA4176
	12,5	31,5	32,0		141TA4177
	12,5	31,5	32,0		116TA5512
	12,5	32,0	32,0		116TA5471
	12,5	40,0	46,0		121TA2574

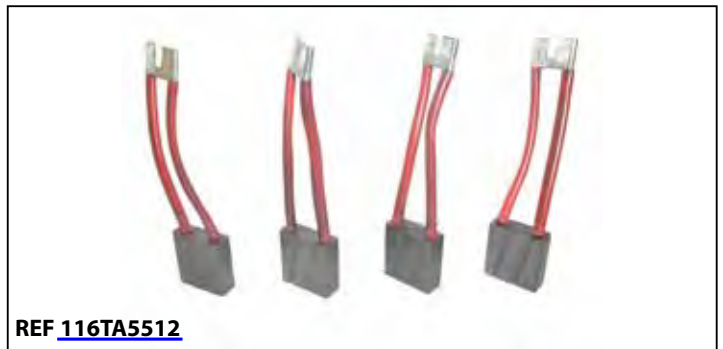


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **JUNGHEINRICH-STEINBOCK**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	12,5	53,5	44,5		121TA2575
	16,0	32,0	32,0		141TA4178
	16,0	32,0	32,5		116TA5509
	16,0	40,0	46,0		141TA4179
	16,0	40,0	53,5		141TA4180
	20,0	32,0	32,0		141TA4181
	60,0	22,0	25,0		141TA4182
8	7,0	22,0	19,5		121TA2579


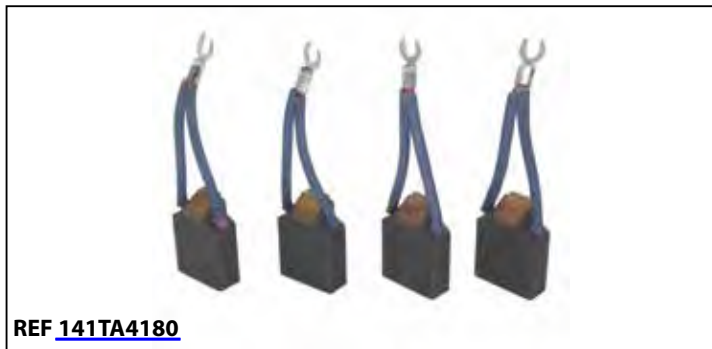


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **JUNGHEINRICH-STEINBOCK**




Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	9,0	13,0	25,5		141TA4183
	9,0	13,0	25,5		121TA2580
	10,0	12,5	25,0		141TA4186
	10,0	20,0	20,5		121TA2586
	10,0	20,0	26,0		141TA4184
	10,0	25,5	35,0		121TA2587
	10,0	26,0	31,0		121TA2583
	10,0	32,0	32,5	yes	141TA4185


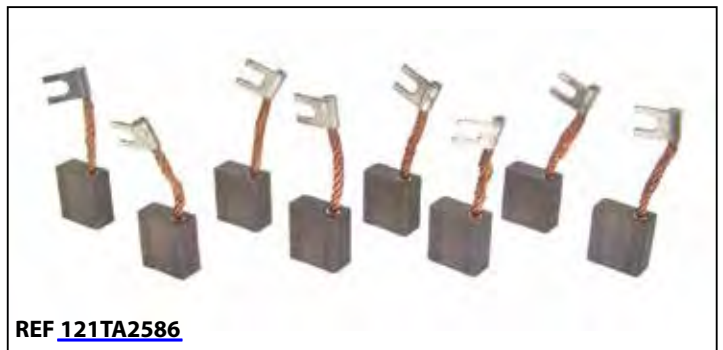
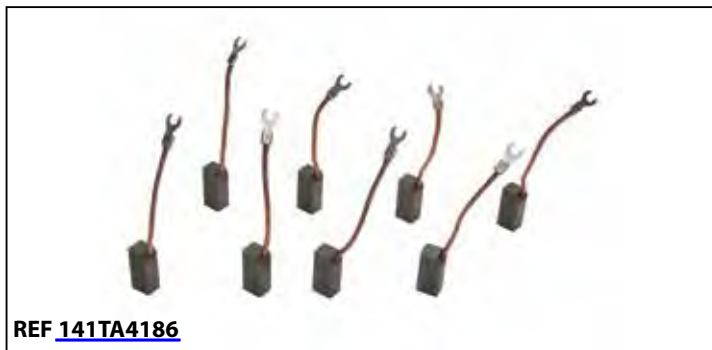


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **JUNGHEINRICH-STEINBOCK**

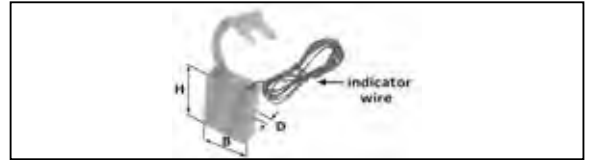

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	12,0	19,5	32,0		122TA5464
	12,5	16,0	25,0		141TA4188
	12,5	20,0	25,0		141TA4187
	12,5	20,0	28,0		140TA9478
	12,5	20,0	32,0		141TA4193
	12,5	20,0	32,0		141TA4194
	12,5	25,0	32,0	yes	141TA4189
	12,5	25,0	42,0		141TA4190

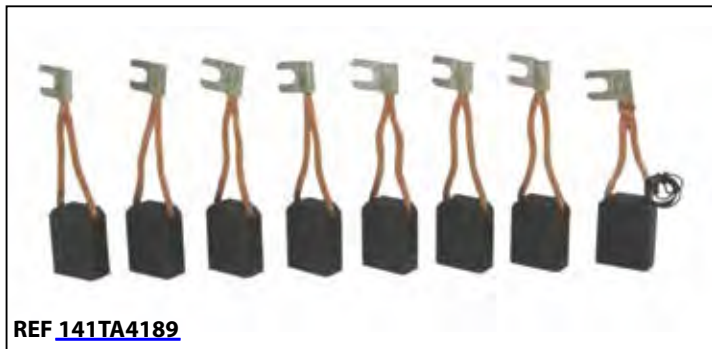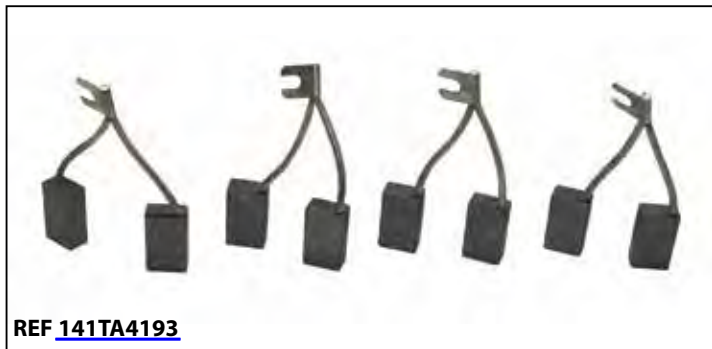
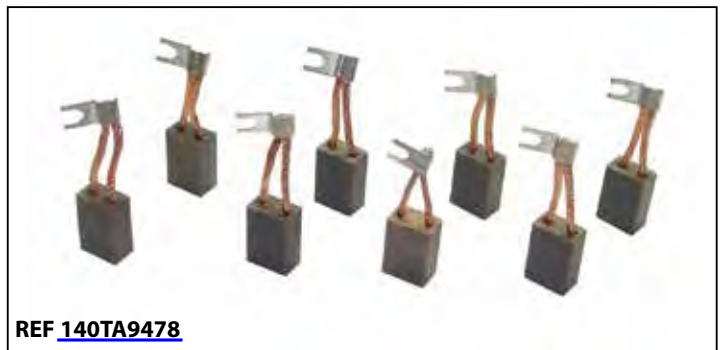


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **JUNGHEINRICH-STEINBOCK**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	12,5	32,0	35,0		141TA4195
	12,5	32,0	40,0		140TA9484
	12,5	32,0	45,0		140TA9485
	12,5	32,0	45,5		141TA4191
	12,5	32,0	46,0		141TA4192
	16,0	16,0	25,5		141TA4196
	16,0	20,0	32,0		141TA4197
	16,0	20,0	32,0		141TA4198

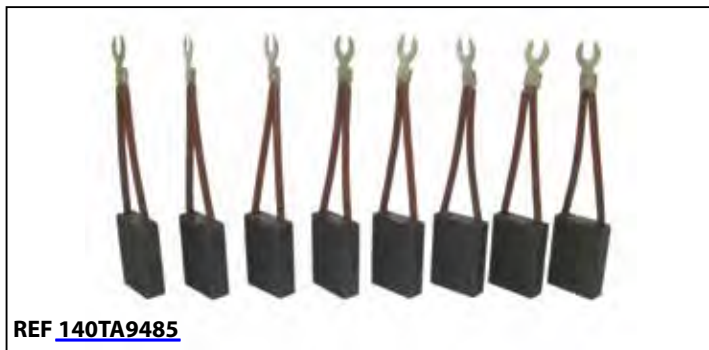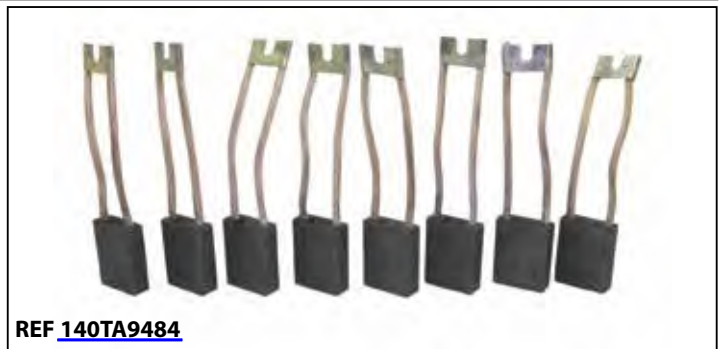

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **JUNGHEINRICH-STEINBOCK**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	16,0	20,0	32,0		141TA4199
	20,0	20,0	32,0		141TA4200
	20,0	25,0	45,5		121TA2599



used for: **KALMAR**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	8,0	12,5	22,0		122TA4459
	8,0	12,5	22,0		140TA5004
	9,5	12,5	25,5		122TA7428
	10,0	12,0	22,0		140TA5005
	10,0	12,5	23,0		122TA7199
E3	10,0	32,0	31,0		122TA4462
E4	10,0	24,0	32,0		122TA4464
	10,0	25,0	22,0		140TA5006
	10,0	32,0	40,0		140TA5007
	10,0	32,0	40,0		140TA5008
	10,0	48,0	31,0		122TA4465
	10,0	48,0	31,0		140TA5009



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **KALMAR**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	12,0	20,0	32,0		140TA5010
	12,0	32,0	32,0		122TA4466
	12,0	32,0	40,0		122TA4467
	12,5	32,0	40,0		140TA5011
	12,5	32,0	40,0		140TA5012
	16,0	25,0	28,0		140TA5013
	16,0	25,0	32,0		140TA5014
	16,0	25,0	32,0		140TA5015
	16,0	25,0	32,0		140TA5016
	16,0	32,0	50,0		122TA4470
M2	8,0	20,0	25,0		140TA5017



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **KALMAR**

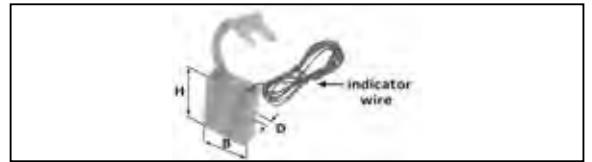


Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
2	5,0	8,0	19,5		141TA4201
	5,0	8,0	19,5		141TA4202
4	7,0	19,0	16,5		141TA4203
	8,0	25,0	17,0		140TA9489
	8,0	25,0	23,0		140TA9490
	8,0	25,0	23,0		140TA9491
	8,0	28,0	32,0		141TA4204
	8,0	28,0	33,5		121TA2601





Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **KALMAR**

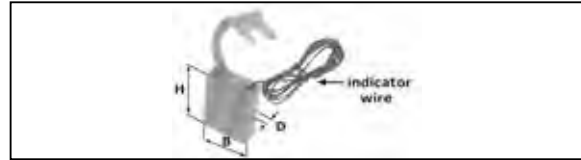

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	8,5	19,0	16,5		141TA4205
	10,0	25,0	16,5		141TA4206
	10,0	25,5	35,0		141TA4207
	10,0	25,5	35,0		141TA4208
	12,0	36,0	26,5		141TA4209
	12,5	32,0	30,0		122TA7306
	12,5	32,0	35,5		141TA4210
8	7,0	22,0	20,0		141TA4211

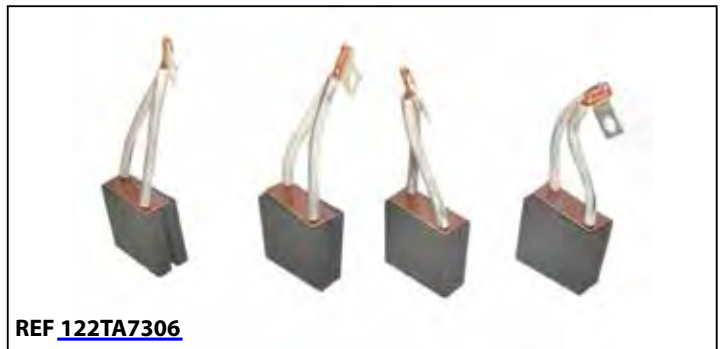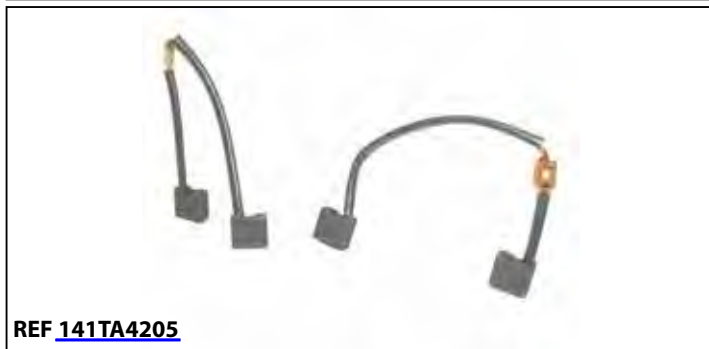


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.


used for: **KALMAR**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	12,5	15,5	35,0		141TA4212
	14,0	25,5	35,5		141TA4213
	14,0	25,5	37,5		141TA4214
	16,0	31,5	44,0		141TA4215
12	16,0	32,0	50,0		140TA9494

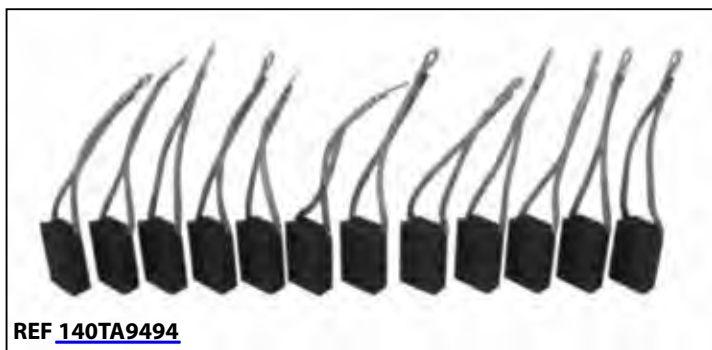

used for: **KENTRUCK-ROBUR**

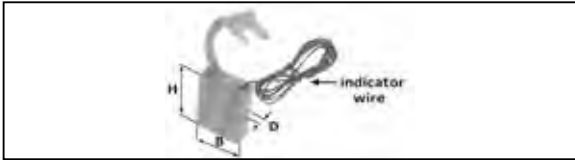


Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	12,0	20,0	32,0		140TA5018



used for: **KENTRUCK-ROBUR**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	7,0	10,0	12,5		140TA9495
	8,0	12,5	22,0		140TA9496
	9,0	16,0	18,0		140TA9497
	10,0	12,5	22,5		141TA1106

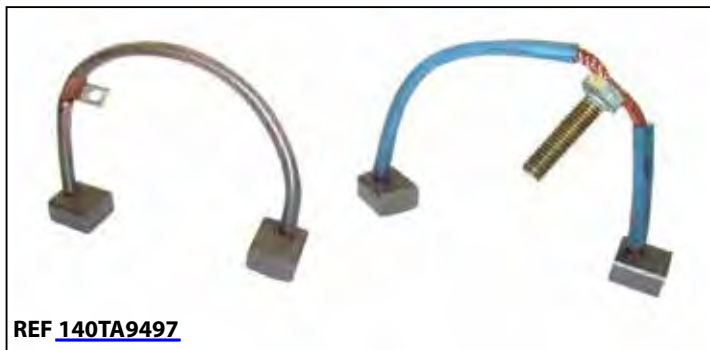

used for: **KOMATSU**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E1	6,5	10,0	17,0		140TA5019
	6,5	19,0	16,0		140TA5020
	6,5	19,0	18,0		140TA5021
E2	5,0	7,0	15,0		140TA5022
	5,0	7,0	15,5		122TA4474
	5,0	7,0	15,5		122TA4475
	5,0	7,0	17,0		122TA4476
	5,0	7,0	17,0		140TA5023
	5,0	7,0	17,0		140TA5024
	5,0	8,0	18,5		122TA4477
	5,0	8,0	19,0		140TA5025
	5,0	8,0	20,0		122TA4478



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **KOMATSU**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	5,0	8,0	23,0		122TA4472
	6,0	7,0	16,0		140TA5026
	6,0	7,0	16,5		140TA5027
	6,0	7,0	19,0		140TA5028
	6,0	7,0	20,0		122TA4481
	6,0	7,0	20,0		122TA4480
	6,0	7,0	20,0		140TA5029
	6,0	7,0	23,5		122TA4479
	6,0	8,0	19,0		140TA5030
	6,0	10,0	22,0		140TA5031
	6,0	13,0	18,0		122TA4483
	6,0	13,0	21,0		140TA5032



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **KOMATSU**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	6,0	16,0	14,5		122TA4485
	6,0	16,0	22,0		122TA4486
	6,0	19,0	19,5		122TA4487
	6,5	12,0	16,0		122TA4488
	6,5	12,0	18,0		140TA5033
	6,5	21,0	25,0		140TA5034
	7,0	10,0	17,0		140TA5035
	7,0	10,0	18,0		122TA4491
	7,0	11,0	19,0		122TA4492
	7,0	11,0	19,0		122TA4495
	7,0	12,0	16,5		122TA4489
	7,0	14,0	15,0		140TA5036



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **KOMATSU**

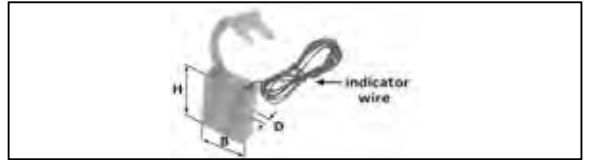


Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	7,0	14,0	16,0		122TA4493
	7,0	14,0	16,0		122TA4494
	7,0	16,0	14,0		140TA5037
	7,0	18,0	18,0		140TA5038
	7,0	19,0	15,5		140TA5039
	7,0	19,0	16,0		122TA4496
	7,0	22,0	20,0		122TA4501
	7,0	25,0	15,5		122TA4498
	7,0	25,0	16,0		122TA4497
	7,0	25,0	16,0		122TA4499
	7,0	25,0	17,0		122TA4502
	7,5	20,0	22,5		140TA5040



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **KOMATSU**

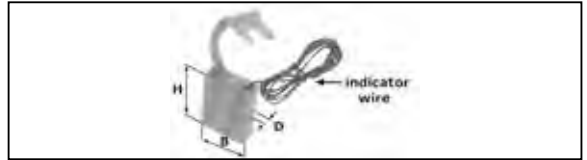


Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	8,0	8,0	20,0		122TA4507
	8,0	9,5	19,5		140TA5041
	8,0	10,0	20,0		122TA4519
	8,0	10,0	20,0		122TA4518
	8,0	10,0	20,0	yes	122TA4508
	8,0	12,0	22,0		140TA5042
	8,0	12,5	22,0		122TA4522
	8,0	12,5	22,0		122TA4521
	8,0	12,5	22,0		122TA4509
	8,0	12,5	22,0	yes	140TA5043
	8,0	12,5	22,0	yes	122TA4520
	8,0	12,5	22,0	yes	140TA5044



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **KOMATSU**

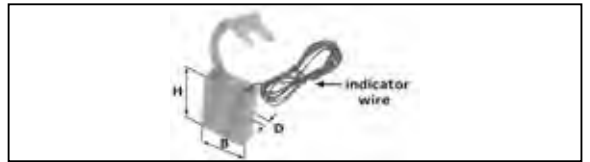

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	8,0	14,0	19,0		122TA4510
	8,0	14,0	19,0		140TA5045
	8,0	14,0	22,0		122TA4503
	8,0	14,0	22,0		122TA4511
	8,0	14,5	20,0		122TA4512
	8,0	14,5	20,0		140TA5046
	8,0	14,5	20,0		140TA5047
	8,0	16,0	22,0		140TA5048
	8,0	16,0	22,5		140TA5049
	8,0	16,0	25,0		140TA5050
	8,0	20,0	26,0		122TA4513
	8,0	22,0	28,0		140TA5051



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **KOMATSU**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	8,0	22,0	28,5		140TA5052
	8,0	24,5	21,0		140TA5053
	8,0	25,0	15,0		122TA4504
	8,0	25,0	17,0		122TA4506
	8,0	25,0	17,0		122TA4505
	8,0	25,0	17,0		140TA5054
	8,0	25,0	19,5		122TA4514
	8,0	25,0	20,0		122TA4517
	8,0	25,0	20,0		122TA4515
	8,0	25,0	20,0		140TA5055
	8,0	25,0	21,5		122TA4516
	9,0	13,0	25,5		140TA5056



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **KOMATSU**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	9,0	18,5	20,0		140TA5057
	9,0	19,0	21,0		140TA5058
	9,0	19,0	22,0		122TA4525
	9,0	19,0	22,0		122TA4529
	9,0	19,0	22,0		140TA5059
	9,0	19,0	22,5		122TA4526
	9,0	19,5	20,0		140TA5060
	9,0	20,0	23,0		122TA4524
	9,0	20,0	29,0		122TA4530
	9,0	25,0	19,5		122TA4527
	9,0	25,0	22,5		122TA4528
	9,0	25,0	23,0		140TA5061



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **KOMATSU**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	9,0	30,0	20,0		140TA5062
	9,0	30,0	23,0		140TA5063
	9,5	20,5	30,0		140TA5064
	9,5	31,5	32,0		140TA5065
	10,0	12,5	21,0		140TA5066
	10,0	12,5	22,5		140TA5067
	10,0	12,5	22,5		122TA4535
	10,0	12,5	22,5	yes	122TA4532
	10,0	16,0	28,0		140TA5068
	10,0	20,0	20,0		122TA4537
	10,0	20,0	20,0		122TA4539
	10,0	20,0	20,0		122TA4538



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **KOMATSU**

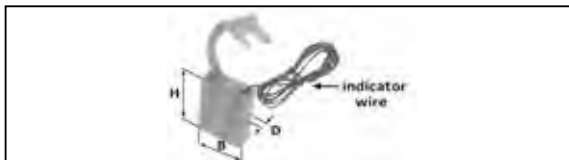


Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	10,0	20,0	20,0	yes	140TA5069
	10,0	20,0	22,0		140TA5070
	10,0	20,0	23,0		140TA5071
	10,0	20,0	24,0		140TA5072
	10,0	20,0	25,0		122TA4536
	10,0	20,0	25,0		122TA4540
	10,0	20,0	25,0		140TA5073
	10,0	20,0	26,0		140TA5074
	10,0	25,0	20,0		140TA5075
	10,0	25,0	20,5	yes	140TA5076
	10,0	25,0	26,5		140TA5077
	10,0	27,0	30,0		122TA4542



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **KOMATSU**

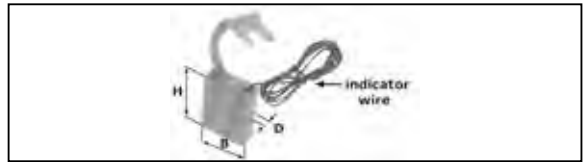

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	10,0	27,0	30,5		122TA4534
	10,0	27,0	31,0		122TA4543
	10,0	30,0	22,0		140TA5078
	11,0	30,0	33,0		122TA4545
	11,0	30,0	33,0		140TA5079
	11,0	30,0	34,0		122TA4544
	12,0	32,0	37,0		140TA5080
	12,0	39,5	25,5		140TA5081
	12,5	16,0	36,5		140TA5082
	12,5	25,0	33,0		140TA5083
	14,0	40,0	40,0		122TA4547
	16,0	20,0	32,0		140TA5084



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **KOMATSU**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E3	6,0	28,0	30,5		122TA4548
	8,0	28,0	30,0		122TA4550
	8,0	28,0	30,5		122TA4551
	8,0	28,0	30,5		122TA4549
	10,0	32,0	31,0		122TA4552
	10,0	32,0	31,0	yes	122TA4554
	10,0	35,0	30,5		122TA4553
	10,0	35,5	30,5		122TA4555
	11,0	40,0	33,0		140TA5085
	11,0	40,0	33,5		140TA5086
	11,0	56,0	33,0		122TA4556
	11,0	56,0	33,0		122TA4560



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **KOMATSU**

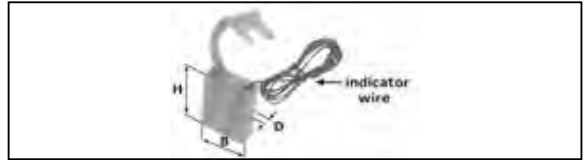


BRUSHES

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E3	11,0	60,0	33,0		122TA4561
	11,0	60,0	33,0		122TA4557
	11,0	60,0	33,0		140TA5087
	12,5	40,0	33,0		122TA4562
	12,5	45,0	35,0		122TA4563
	15,0	40,0	28,0		140TA5088
	16,0	56,0	33,0		122TA4565
	16,0	56,0	33,0		140TA5089
E4	6,5	32,0	25,0		122TA4566
	7,0	16,0	16,0		140TA5090
	7,0	16,0	16,0		122TA4567
	7,0	18,5	18,0		140TA5091



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **KOMATSU**

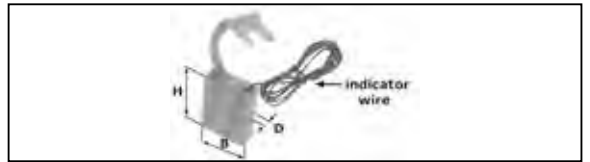


Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	8,0	20,0	22,5		122TA4568
	8,0	22,0	18,0		140TA5092
	8,0	30,0	25,0		122TA4569
	9,0	20,0	25,0		140TA5093
	9,0	20,0	28,0		122TA4570
	9,0	20,0	28,0		140TA5094
	9,0	20,0	28,0	yes	140TA5095
	10,0	16,0	20,5		122TA4572
	10,0	20,0	20,0		140TA5096
	10,0	20,0	20,0		140TA5097
	10,0	25,0	20,0		122TA4575
	10,0	25,0	25,0		122TA4573



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **KOMATSU**

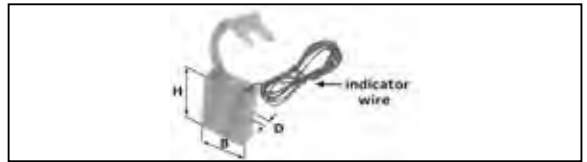

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	10,0	25,0	28,0		140TA5098
	10,0	25,0	33,0		140TA5099
	10,0	28,0	33,0		122TA4581
	10,0	32,0	31,0		122TA4583
	10,0	32,0	31,0		122TA4582
	10,0	32,0	32,0		140TA5100
	10,0	32,0	32,0		122TA4571
	10,0	32,0	32,0		122TA4584
	10,0	32,0	32,0	yes	122TA4576
	10,0	32,0	33,0		122TA4585
	10,0	32,0	40,0		122TA4577
	10,0	40,0	32,5		140TA5101



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **KOMATSU**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	10,0	48,0	32,0		140TA5102
	10,0	48,0	32,0	yes	122TA4578
	10,0	48,0	32,5		122TA4579
	12,0	20,0	32,0		122TA4586
	12,0	20,0	32,0	yes	122TA4587
	12,0	25,0	32,0		122TA4588
	12,0	32,0	32,0		140TA5103
	12,0	32,0	32,0	yes	122TA4589
	12,0	32,0	32,0	yes	140TA5104
	12,0	40,0	25,0		140TA5105
	12,0	40,0	40,0		140TA5106
	12,0	48,0	32,0		122TA4592



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **KOMATSU**

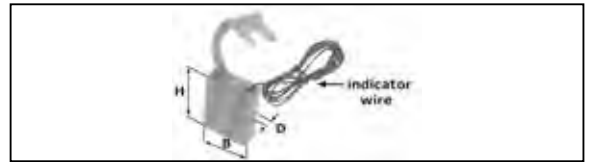

BRUSHES

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	12,0	48,0	32,0	yes	122TA4593
	12,5	16,0	36,0		122TA4601
	12,5	20,0	26,0		140TA5107
	12,5	20,0	32,5		140TA5108
	12,5	25,0	32,0		122TA4594
	12,5	25,0	32,5		122TA4596
	12,5	25,0	32,5	yes	122TA4595
	12,5	25,0	33,0		122TA4597
	12,5	31,5	41,0		140TA5109
	12,5	31,5	41,0		140TA5110
	12,5	32,0	32,0		122TA4599
	12,5	32,0	32,0		140TA5111



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **KOMATSU**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	12,5	32,0	32,0		140TA5112
	12,5	32,0	32,0	yes	122TA4598
	12,5	32,0	32,5		140TA5113
	12,5	32,0	32,5	yes	140TA5114
	12,5	32,0	40,5		122TA4602
	12,5	40,0	25,5		140TA5115
	12,5	40,0	40,0		122TA4600
	14,0	25,5	36,0		140TA5116
	14,0	36,0	27,0		140TA5117
	14,0	40,0	27,0		122TA4606
	14,0	40,0	33,5		140TA5118
	14,0	40,0	33,5		122TA4605



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **KOMATSU**

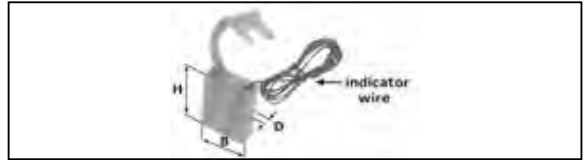

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	14,0	51,0	36,0		140TA5119
	15,0	30,0	26,0		140TA5120
	15,0	40,0	30,5		140TA5121
	15,0	40,0	35,0		140TA5122
	16,0	24,5	33,5		122TA4610
	16,0	25,0	32,0		122TA4608
	16,0	25,0	32,0		122TA4611
	16,0	25,0	32,0		140TA5123
	16,0	25,0	33,0		140TA5124
	16,0	31,5	33,0		140TA5125
	16,0	31,5	33,0		140TA5126
	16,0	32,0	32,0		122TA4607



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **KOMATSU**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	16,0	32,0	40,0		140TA5127
	16,0	40,0	34,0		122TA4615
	16,0	40,0	34,0		122TA4613
	16,0	40,0	34,0		122TA4616
	16,0	40,0	34,0		122TA4614
	16,0	40,0	45,0		122TA4609
M2	6,0	16,0	14,0		140TA5128
	11,0	25,0	33,5		140TA5129
	12,0	20,0	33,0		122TA4617
	12,5	12,5	25,0		122TA4618
	12,5	20,0	33,0	yes	140TA5130
	12,5	28,0	36,0		122TA4619



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **KOMATSU**

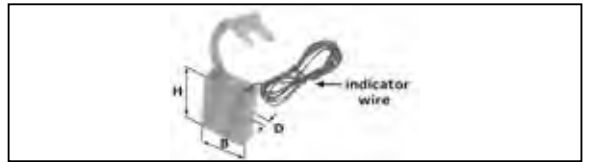


Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
M2	13,0	28,5	38,0		122TA4620
	13,0	28,5	38,0		140TA5131
	13,0	32,0	34,0		140TA5132
	14,0	28,0	33,0		140TA5133
	15,0	30,0	36,0		140TA5134
	16,0	28,0	44,5		122TA4621
	16,0	28,5	44,5	yes	140TA5135
	16,0	28,5	45,0		140TA5136
	16,0	28,5	45,0		140TA5137
	16,0	32,0	40,0		140TA5138
	16,0	44,5	38,0		140TA5139
	17,0	25,0	32,5		140TA5140



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.


used for: **KOMATSU**

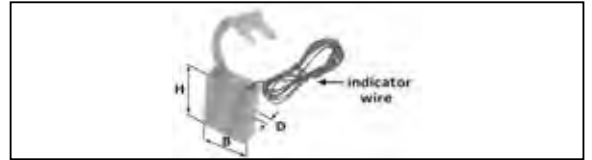




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
M2	17,0	31,0	35,5		140TA5141
	19,0	32,0	44,0		140TA5142
	20,0	20,0	32,0		140TA5143
M3	10,0	16,0	31,0		122TA4623



used for: **KOMATSU**

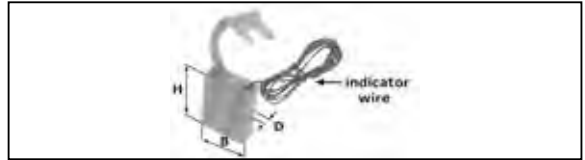


Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
2	5,0	7,0	16,5		141TA4216
	5,0	7,0	21,0		140TA9499
	5,0	7,0	21,5		141TA1107
	10,0	20,0	20,0		140TA9500
4	6,0	12,0	11,5		141TA4218
	6,0	22,0	25,0		121TA2605
	6,0	22,0	25,5		121TA2609
	6,0	27,5	30,0		141TA4217

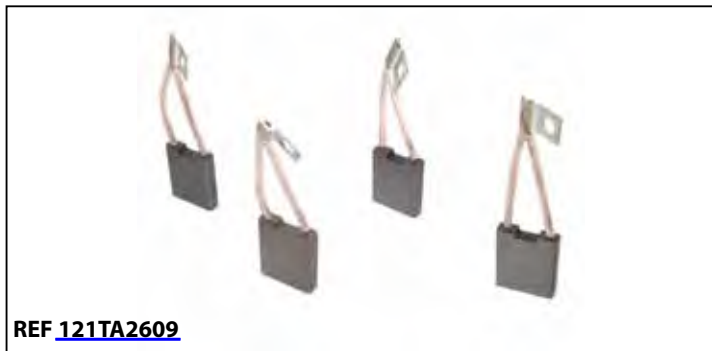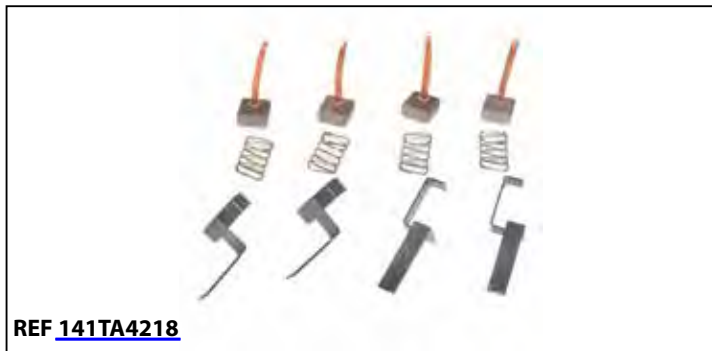
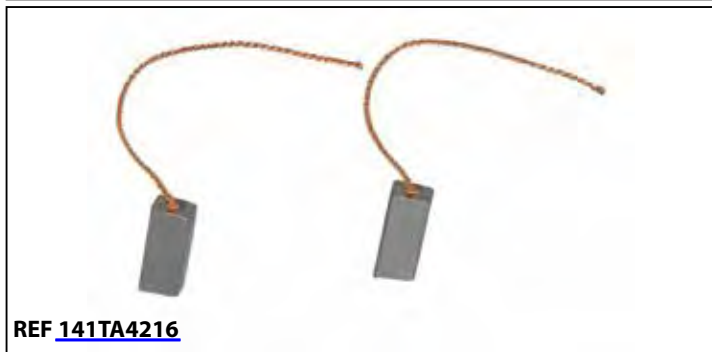


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **KOMATSU**

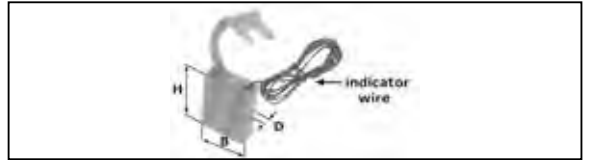

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	6,0	27,5	30,5		121TA2607
	6,0	28,0	30,5		140TA9520
	7,0	12,5	20,5		141TA4219
	7,0	16,0	16,0		140TA9505
	7,0	18,0	14,0		141TA4220
	7,0	19,0	16,5		141TA4221
	8,0	10,0	20,0	yes	141TA4224
	8,0	12,5	22,0		141TA4225

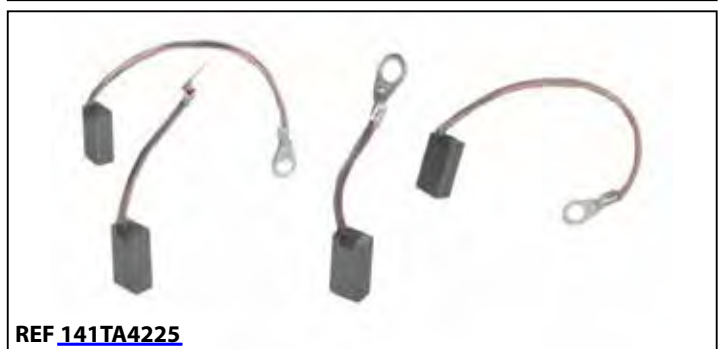
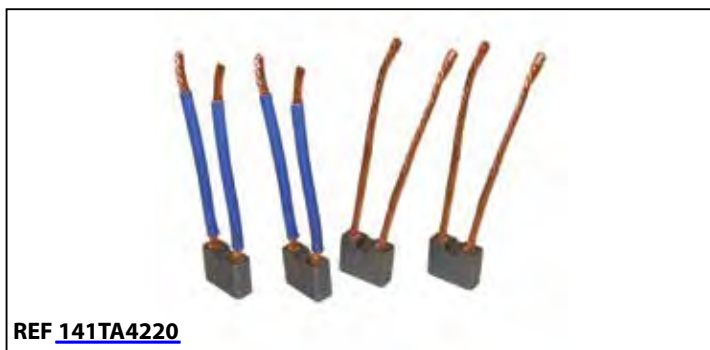


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **KOMATSU**




Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	8,0	19,0	22,5		141TA4222
	8,0	20,0	25,0		121TA2616
	8,0	20,0	25,0		121TA2624
	8,0	20,0	25,0		121TA2625
	8,0	20,0	25,0		141TA4226
	8,0	20,0	25,5		121TA2617
	8,0	20,0	26,0		121TA2618
	8,0	28,0	30,5		121TA2619

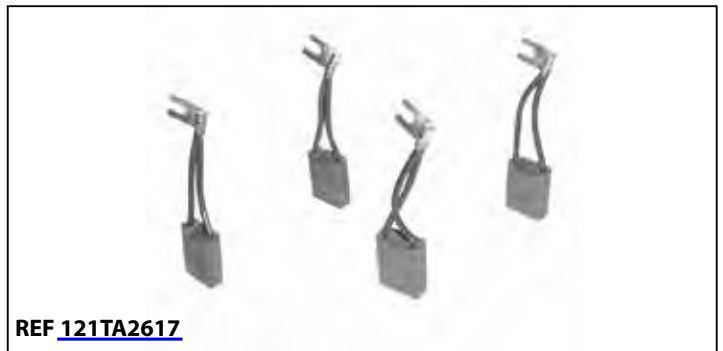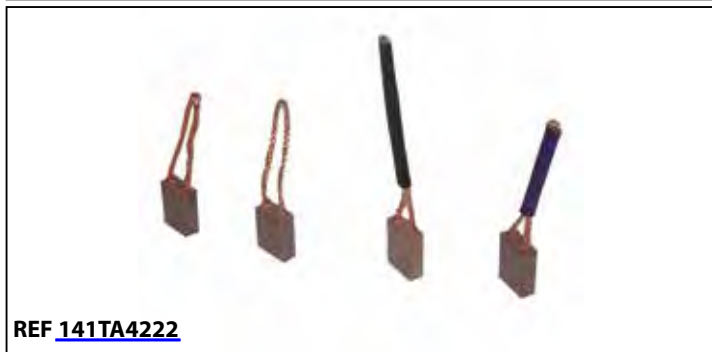

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **KOMATSU**

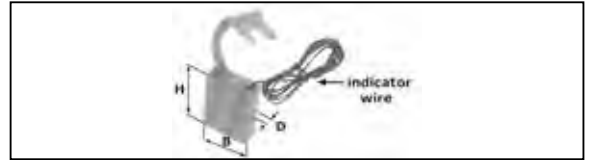


Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	8,0	28,0	31,0		140TA9522
	8,0	28,0	32,0		141TA4223
	8,0	28,0	32,0		121TA2620
	8,0	32,0	30,0		121TA2621
	8,0	32,0	30,0		121TA2622
	8,5	11,5	16,0		121TA2626
	8,5	17,5	16,0		140TA9506
	8,5	19,0	14,0		121TA2627



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **KOMATSU**

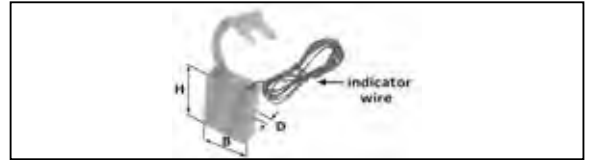


Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	8,5	19,0	16,5		141TA4227
	8,5	19,0	17,0		140TA9510
	9,0	13,0	25,5		140TA9502
	9,0	13,0	25,5		141TA4230
	9,0	13,0	25,5		141TA4231
	9,0	13,0	25,5		121TA2634
	9,0	13,0	25,5		141TA4233
	9,0	13,0	26,0		121TA2630



REF [141TA4227](#)



REF [140TA9510](#)

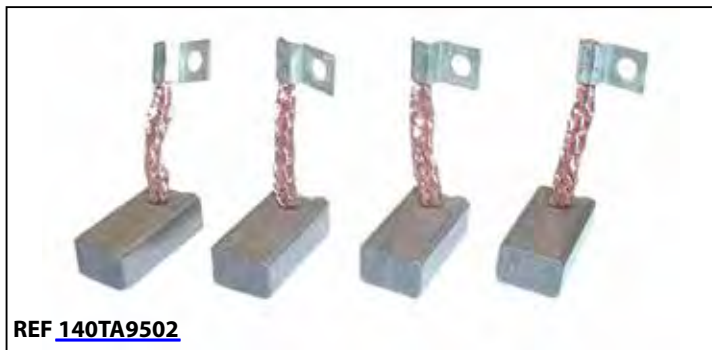


REF [140TA9502](#)



REF [141TA4230](#)



REF [141TA4231](#)

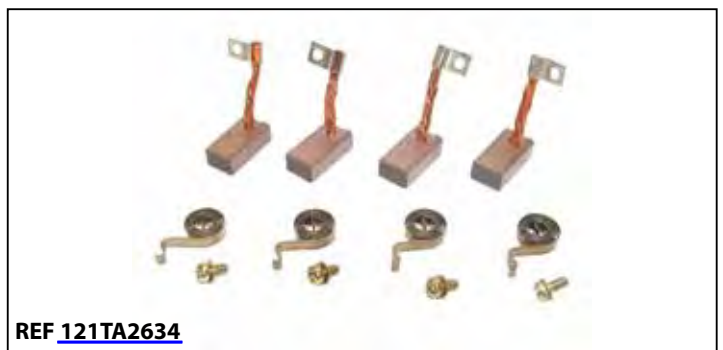

REF [121TA2634](#)



REF [141TA4233](#)





REF [121TA2630](#)

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **KOMATSU**




Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	9,0	17,5	16,0		140TA9507
	9,0	19,0	14,0		141TA4228
	9,0	19,0	22,0		140TA9512
	9,0	19,5	16,0		141TA4232
	9,0	25,5	25,5		121TA2632
	9,0	26,0	25,5		140TA9518
	9,0	26,0	26,0		141TA4229
	10,0	16,0	20,0		121TA2638

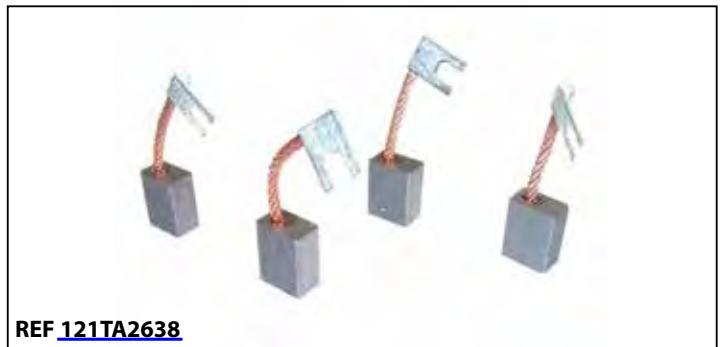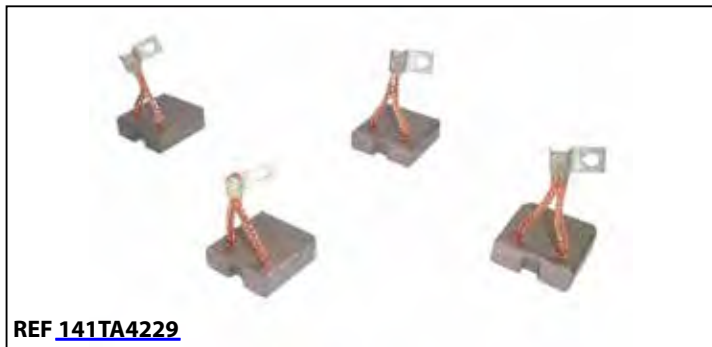


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **KOMATSU**

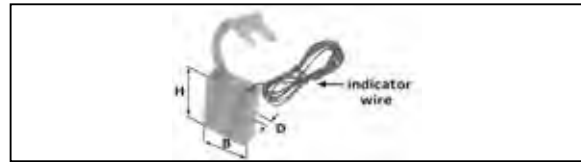


Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	10,0	16,0	25,0		121TA2637
	10,0	19,5	26,0		122TA4533
	10,0	20,0	26,0		121TA2639
	10,0	25,0	15,0		121TA2640
	10,0	25,0	16,5		140TA9514
	10,0	25,0	21,0		121TA2642
	10,0	25,0	22,0		121TA2643
	10,0	25,0	23,0		141TA4235

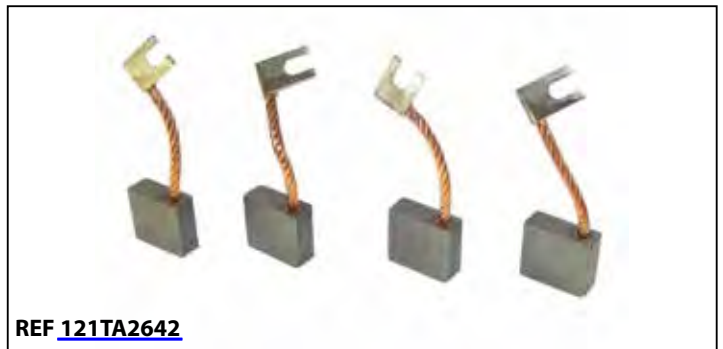

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **KOMATSU**

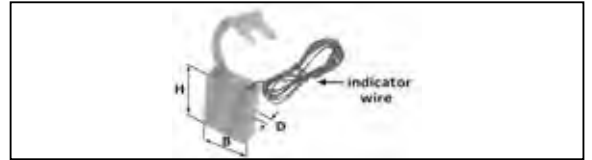


Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	10,0	25,0	23,0		121TA2644
	10,0	25,0	25,0		121TA2645
	10,0	25,5	35,0		141TA4238
	10,0	25,5	35,0		141TA4239
	10,0	28,0	30,0	yes	141TA4234
	10,0	28,0	30,5	yes	140TA9521
	10,0	28,0	30,5		141TA1109
	10,0	28,0	30,5		141TA4236




Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **KOMATSU**

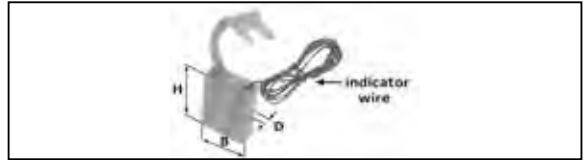


Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	10,0	32,0	32,0		140TA9525
	10,0	50,0	30,0	yes	141TA4237
	11,0	20,0	24,5		141TA4240
	12,0	20,0	30,0		121TA2649
	12,5	19,5	25,5		121TA2650
	12,5	25,0	28,0		121TA2651
	12,5	25,0	28,5		140TA9515
	12,5	31,5	32,0		141TA4241

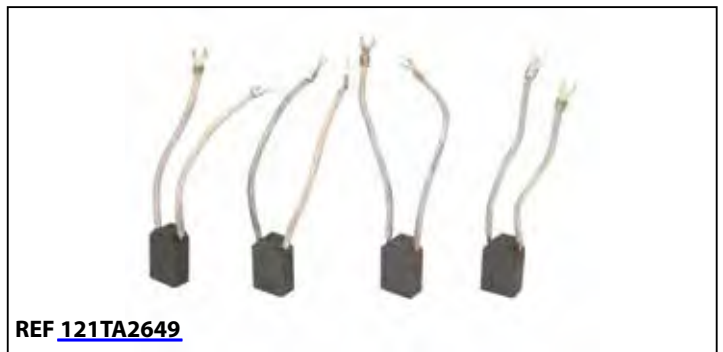


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **KOMATSU**

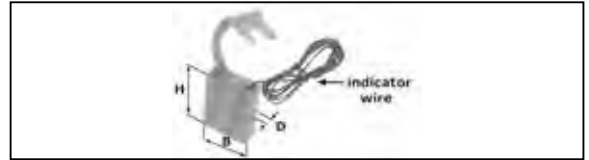


Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	12,5	31,5	32,0		141TA4242
	12,5	32,0	20,5		140TA9523
	12,5	32,0	35,5		141TA4243
	12,5	32,0	38,0		121TA2654
	16,0	24,5	33,0		141TA4245
	16,0	25,0	45,0		121TA2656
	16,0	32,0	32,0		141TA4244
	20,0	10,0	31,0		140TA9501

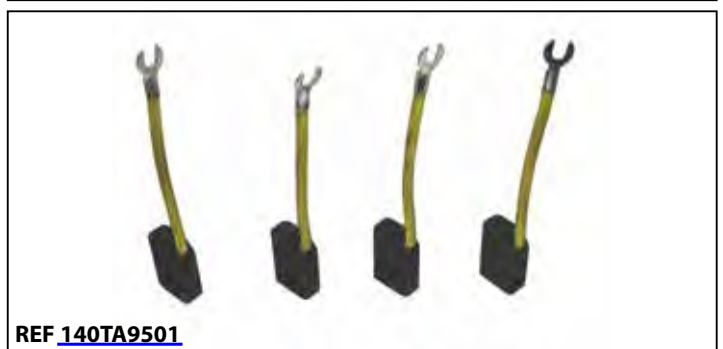


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **KOMATSU**

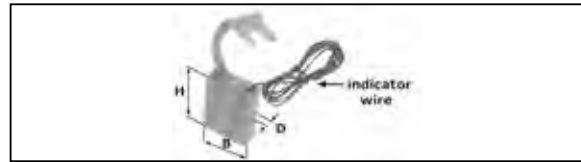

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	60,0	22,0	25,0		140TA9513
8	7,0	22,0	19,5		141TA4246
	7,0	22,0	20,0		140TA9532
	8,0	16,0	20,0		141TA4247
	9,0	13,0	25,0		140TA9528
	9,0	13,0	25,5		140TA9529
	9,0	13,0	25,5		121TA2657
	9,5	27,5	30,5		121TA2664

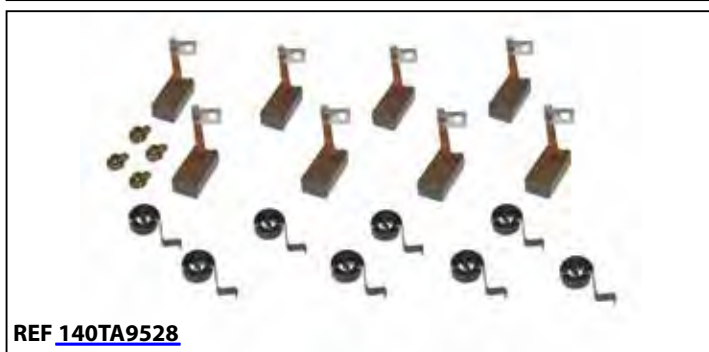


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **KOMATSU**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	10,0	12,5	25,0		121TA2661
	10,0	24,0	31,0		121TA2662
	10,0	25,0	32,0		121TA2659
	10,0	26,0	30,5		121TA2663
	10,0	26,0	31,0		140TA9538
	10,0	28,0	30,0		140TA9539
	10,0	32,0	32,0		yes 121TA2660
	10,0	32,0	32,5		yes 121TA2658



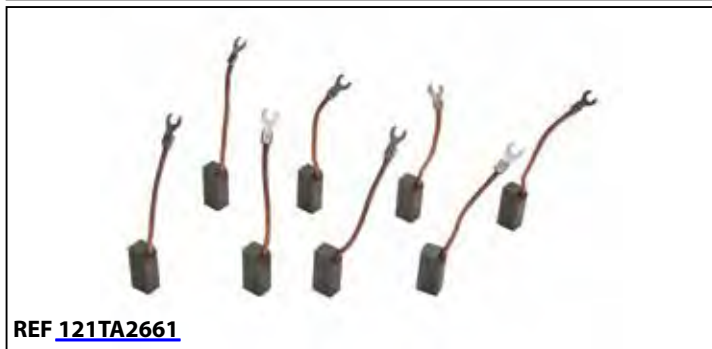


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **KOMATSU**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	12,0	19,5	32,0		121TA2665
	12,0	20,0	30,0		121TA2666
	12,5	15,5	35,0		141TA4251
	12,5	20,0	32,0	yes	121TA2667
	12,5	25,0	32,0		140TA9534
	12,5	25,0	32,0	yes	141TA4248
	12,5	25,0	32,0	yes	141TA4249
	12,5	25,0	32,0	yes	121TA2672

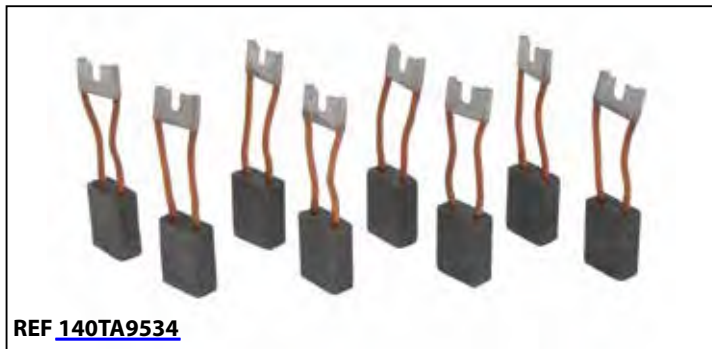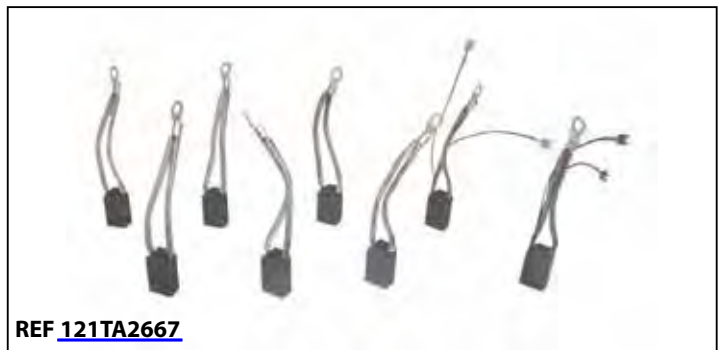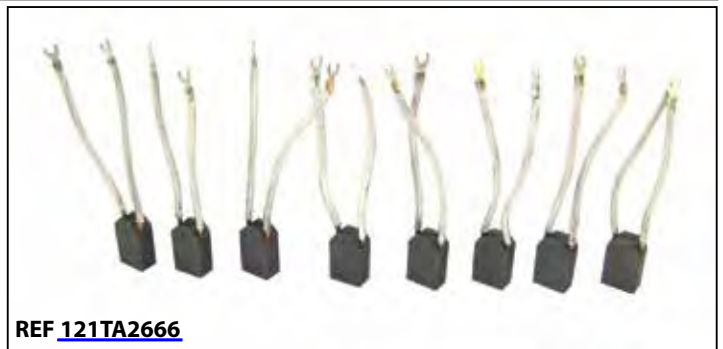

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **KOMATSU**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	12,5	32,0	32,0	yes	141TA4250
	12,5	32,0	32,0	yes	121TA2671
	12,5	32,0	32,0	yes	140TA9541
	12,5	32,0	32,0	yes	141TA1110
	12,5	32,0	32,5	yes	121TA2670
	14,0	25,5	35,0		140TA9537
	14,0	25,5	37,5		141TA4252
	16,0	24,5	33,5		140TA9533




Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.


used for: **KOMATSU**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	16,0	31,5	44,0		141TA4253
	16,0	40,0	30,0		140TA9542
12	16,0	32,0	40,5	yes	121TA2673

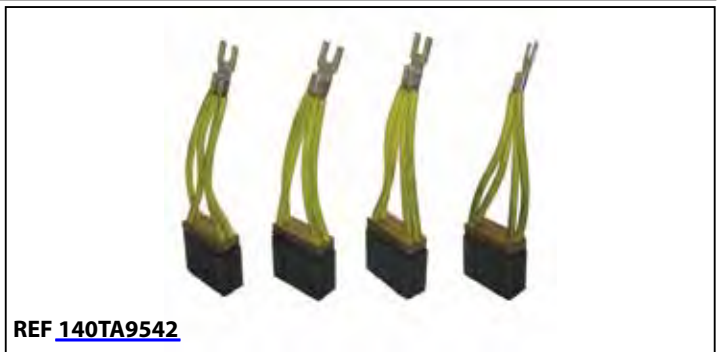

used for: **LINDE-LANSING**

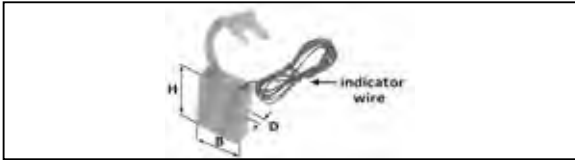

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E1	7,0	19,0	16,0		140TA5144
E2	4,5	6,0	14,0		140TA5145
	5,0	7,0	15,0		140TA5146
	5,0	8,0	19,0		140TA5147
	5,0	8,0	23,0		140TA5148
	6,0	7,0	20,0		140TA5149
	6,0	8,0	21,5		140TA5150
	6,0	10,0	22,0		122TA4628
	6,0	12,0	16,0		122TA4630
	6,0	12,5	22,0		122TA4625
	6,0	12,5	22,0		140TA5151
	6,0	12,5	22,0	yes	140TA5152



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **LINDE-LANSING**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	6,0	16,0	19,0		122TA4629
	6,0	16,0	22,0		140TA5153
	6,0	16,0	22,0		122TA4624
	6,0	16,0	22,0		140TA5154
	6,0	16,0	22,0	yes	140TA5155
	6,0	27,0	19,0		140TA5156
	7,0	10,0	17,0		140TA5157
	7,0	10,0	18,0		140TA5158
	7,0	14,0	16,0		140TA5159
	7,0	14,0	16,0		140TA5160
	7,0	16,0	22,0		140TA5161
	7,0	19,0	15,5		140TA5162



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **LINDE-LANSING**

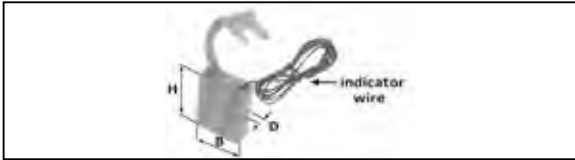


Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	8,0	10,0	20,0		140TA5163
	8,0	12,5	20,5		140TA5164
	8,0	12,5	20,5	yes	140TA5165
	8,0	12,5	22,0		140TA5166
	8,0	12,5	22,0		140TA5167
	8,0	12,5	22,0		122TA4641
	8,0	12,5	22,0		122TA4643
	8,0	12,5	22,0		140TA5168
	8,0	12,5	22,0	yes	122TA4633
	8,0	12,5	22,0	yes	122TA4639
	8,0	12,5	22,0	yes	122TA4640
	8,0	12,5	22,0	yes	122TA4634



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **LINDE-LANSING**

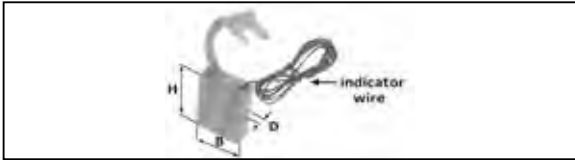


Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	8,0	12,5	22,0	yes	140TA5169
	8,0	12,5	22,5	yes	122TA4636
	8,0	12,5	28,0		140TA5170
	8,0	16,0	22,0		122TA4644
	8,0	16,0	22,0		140TA5171
	8,0	16,0	22,0		140TA5172
	8,0	16,0	22,0	yes	122TA4638
	8,0	16,0	22,5		140TA5173
	8,0	20,0	23,0		140TA5174
	8,0	20,0	32,0		140TA5175
	8,0	22,0	28,5		140TA5176
	8,0	24,5	21,0		140TA5177



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **LINDE-LANSING**

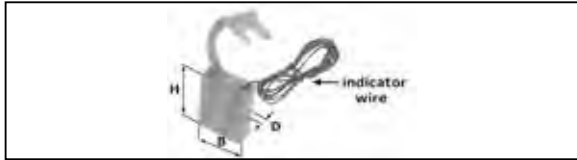

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	8,0	25,0	23,0	yes	122TA7197
	9,0	13,0	25,0		140TA5178
	9,0	13,0	25,0		140TA5179
	9,0	13,0	25,0		140TA5180
	9,0	17,5	16,0		122TA4646
	9,5	20,5	30,0		122TA4647
	9,5	20,5	30,0		140TA5181
	10,0	12,0	23,0		140TA5182
	10,0	12,5	22,5		140TA5183
	10,0	12,5	22,5		140TA5184
	10,0	12,5	22,5	yes	122TA4648
	10,0	16,0	25,0		122TA4653



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **LINDE-LANSING**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	10,0	20,0	20,0		140TA5185
	10,0	20,0	20,0		140TA5186
	10,0	20,0	25,0		140TA5187
	10,0	20,0	26,0		140TA5188
	10,0	20,0	26,0		122TA6050
	10,0	20,0	26,0	yes	140TA5189
	10,0	20,0	32,0		116TA5158
	10,0	25,0	26,5		122TA4650
	10,0	25,0	32,0	yes	122TA4651
	10,0	25,0	32,0	yes	140TA5190
	10,0	25,0	35,0		140TA5191
	10,0	25,0	40,0		122TA4654



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **LINDE-LANSING**

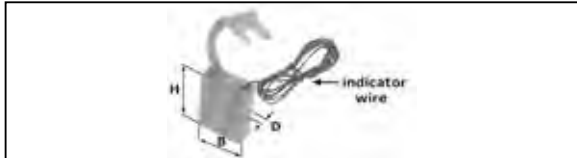

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	10,0	25,0	40,0		140TA5192
	10,0	25,0	40,0		140TA5193
	10,0	25,0	41,0		140TA5194
	10,0	40,0	22,5	yes	122TA4656
	12,0	25,0	24,5		140TA5195
	12,0	25,0	30,0		140TA5196
	12,0	25,0	32,0	yes	140TA5197
	12,0	25,0	32,0	yes	140TA5198
	12,5	16,0	25,0		140TA5199
	12,5	16,0	36,5		140TA5200
	12,5	22,0	32,0		122TA4659
	12,5	25,0	32,0		122TA4658



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **LINDE-LANSING**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	12,5	25,0	32,0		140TA5201
	12,5	25,0	32,5	yes	140TA5202
	12,5	25,0	40,0		140TA5203
	13,0	22,0	32,0		140TA5204
	17,0	35,0	30,0		122TA4660
E3	6,0	27,0	19,0		122TA4661
	6,0	28,0	30,5		140TA5205
	8,0	19,0	22,5		122TA4662
	8,0	28,0	30,0		140TA5206
	8,0	28,0	30,5		140TA5207
	8,0	28,0	30,5		122TA4663
	8,0	28,0	30,5		140TA5208



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **LINDE-LANSING**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E3	9,0	30,0	28,0		122TA4664
	9,5	38,0	19,0		122TA4665
	10,0	32,0	31,0	yes	140TA5209
	12,0	32,0	32,0		122TA4666
E4	6,0	16,0	13,0		140TA5210
	6,0	16,0	14,0		122TA4670
	6,0	16,0	15,0		140TA5211
	6,0	22,0	25,0		122TA4667
	6,0	22,0	26,0		140TA5212
	6,0	22,0	28,5	yes	122TA7214
	6,0	28,0	30,5		122TA4669
	6,0	32,0	31,5		140TA5213



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **LINDE-LANSING**

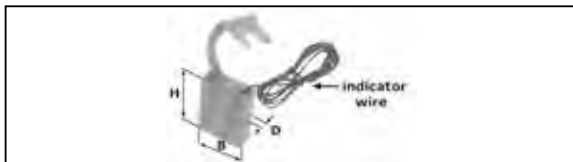

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	7,0	25,0	29,0		140TA5214
	8,0	20,0	25,0		122TA4677
	8,0	20,0	25,0		140TA5215
	8,0	20,0	25,0		140TA5216
	8,0	20,0	25,0		140TA5217
	8,0	25,0	23,0		140TA5218
	8,0	28,0	30,5		140TA5219
	8,0	28,0	30,5		140TA5220
	8,0	28,0	32,0		122TA4673
	8,0	32,0	30,0		140TA5221
	8,0	32,0	30,0		116TA5225
	8,0	32,0	31,0		122TA4676



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **LINDE-LANSING**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	8,0	32,0	31,0		140TA5222
	8,0	32,0	31,0		140TA5223
	8,0	32,0	32,0		122TA4679
	8,0	32,0	32,0		122TA4678
	8,0	32,0	32,0		122TA4675
	8,0	32,0	32,0	yes	140TA5224
	8,0	32,0	38,0		140TA5225
	9,0	20,0	22,0		140TA5226
	9,0	20,0	22,0		122TA4681
	9,5	19,0	26,0		122TA4682
	9,5	22,0	25,5		122TA4686
	9,5	22,0	30,0		122TA4687



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **LINDE-LANSING**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	9,5	22,5	27,0		122TA4698
	9,5	25,5	27,0		122TA4688
	9,5	31,5	27,0		122TA4689
	9,5	31,5	27,0		122TA4690
	9,5	31,5	27,5		122TA4683
	9,5	32,0	27,0		122TA4691
	9,5	38,0	22,0		122TA4692
	9,5	38,0	22,0		122TA4684
	9,5	38,0	22,0		122TA4694
	9,5	38,0	22,0		122TA4693
	9,5	38,0	22,5		122TA4695
	9,5	38,0	26,0		140TA5227



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **LINDE-LANSING**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	9,5	38,0	27,0		122TA4697
	9,5	38,0	27,0		122TA4685
	9,5	38,0	27,0		122TA4696
	10,0	16,0	20,5		140TA5228
	10,0	20,0	20,0		122TA4705
	10,0	20,0	32,0		122TA4706
	10,0	24,0	32,0		140TA5229
	10,0	25,0	20,0		140TA5230
	10,0	25,0	22,0		140TA5231
	10,0	25,0	25,5		122TA4708
	10,0	25,0	28,5		122TA4702
		10,0	25,0	28,5	yes



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **LINDE-LANSING**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	10,0	25,0	31,0		140TA5233
	10,0	25,0	44,5		140TA5234
	10,0	25,0	45,0		140TA5235
	10,0	26,0	30,5		140TA5236
	10,0	26,0	31,0		140TA5237
	10,0	32,0	31,0		122TA4709
	10,0	32,0	31,0		140TA5238
	10,0	32,0	31,5	yes	140TA5239
	10,0	32,0	32,0		140TA5240
	10,0	32,0	32,0		140TA5241
	10,0	32,0	32,0		140TA5242
	10,0	32,0	32,5		140TA5243



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **LINDE-LANSING**

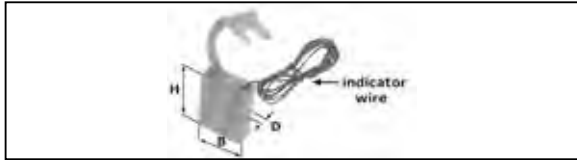


Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	10,0	32,0	40,0		140TA5244
	10,0	32,0	40,0		140TA5245
	10,0	32,0	40,5		122TA4712
	10,0	40,0	30,0		122TA4713
	10,0	40,0	30,0		140TA5246
	10,0	40,0	32,0		116TA5392
	10,0	40,0	32,0		140TA5247
	10,0	40,0	32,0	yes	140TA5248
	10,0	40,0	32,5		140TA5249
	10,0	40,0	36,0		140TA5250
	10,0	40,0	46,0		122TA4704
	10,0	40,0	46,0		122TA4715



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **LINDE-LANSING**

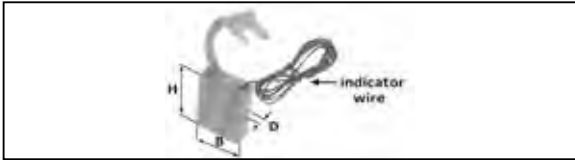


Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	10,0	40,0	46,0	yes	140TA5251
	10,0	48,0	31,0		122TA4700
	11,0	25,0	25,0		140TA5252
	11,0	25,0	25,0		140TA5253
	11,0	25,0	25,5		122TA4718
	11,0	25,0	37,0		122TA4716
	11,0	25,5	25,5		122TA4719
	11,0	25,5	30,5		122TA4720
	12,0	20,0	32,0		122TA4722
	12,0	20,0	32,0		122TA4721
	12,0	25,0	28,5		140TA5254
	12,0	25,0	32,0		140TA5255



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **LINDE-LANSING**

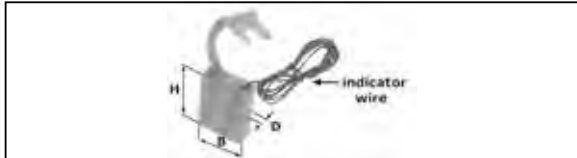

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	12,0	32,0	32,0		140TA5256
	12,0	32,0	32,0		122TA4723
	12,0	32,0	32,0		140TA5257
	12,0	32,0	32,0		140TA5258
	12,0	32,0	32,0	yes	122TA4725
	12,0	32,0	40,0		122TA4726
	12,0	32,0	40,0	yes	122TA4724
	12,0	32,0	41,0		122TA4727
	12,0	40,0	40,0		140TA5259
	12,0	40,0	40,0		122TA4728
	12,0	48,0	31,5		122TA4730
	12,0	48,0	32,0		140TA5260



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **LINDE-LANSING**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	12,0	48,0	32,0	yes	122TA4729
	12,5	25,0	25,0		140TA5261
	12,5	25,0	32,0		140TA5262
	12,5	25,0	33,0		122TA4731
	12,5	25,0	39,5		140TA5263
	12,5	25,0	45,5	yes	122TA4732
	12,5	31,5	41,0		140TA5264
	12,5	31,5	44,5		140TA5265
	12,5	32,0	32,0		140TA5266
	12,5	32,0	32,0		140TA5267
	12,5	32,0	32,0		122TA6054
	12,5	32,0	32,0	yes	140TA5268



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **LINDE-LANSING**

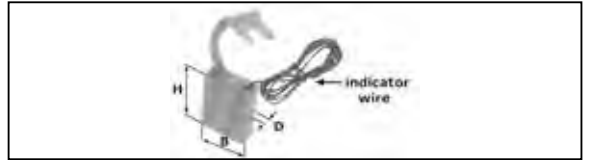

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	12,5	32,0	32,0	yes	140TA5269
	12,5	32,0	32,5		140TA5270
	12,5	32,0	32,5	yes	140TA5271
	12,5	32,0	35,5	yes	140TA5272
	12,5	32,0	36,0	yes	140TA5273
	12,5	32,0	39,5		140TA5274
	12,5	32,0	40,0		140TA5275
	12,5	32,0	40,0		140TA5276
	12,5	32,0	40,0		122TA6055
	12,5	32,0	40,0		140TA5277
	12,5	32,0	40,0	yes	140TA5278
	12,5	32,0	40,0	yes	140TA5279



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **LINDE-LANSING**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	12,5	32,0	40,5		140TA5280
	12,5	32,0	43,5		140TA5281
	12,5	40,0	40,0		122TA4735
	12,5	40,0	40,0		140TA5282
	12,5	40,0	40,0		122TA4737
	12,5	40,0	40,0		140TA5283
	14,0	40,0	27,0		140TA5284
	16,0	24,5	33,0		140TA5285
	16,0	24,5	33,5		140TA5286
	16,0	25,0	32,0		122TA4742
	16,0	25,0	32,0		140TA5287
	16,0	32,0	31,5		140TA5288



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **LINDE-LANSING**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	16,0	32,0	32,0		140TA5289
	16,0	32,0	40,0		140TA5290
	16,0	32,0	40,0	yes	140TA5291
	16,0	38,0	51,0		122TA4741
	16,0	38,0	51,0		122TA4744
	16,0	38,0	51,0		122TA4739
	16,0	38,0	51,0		140TA5292
	16,0	38,0	60,0		122TA4743
	16,0	40,0	34,0		140TA5293
	16,0	40,0	34,0		140TA5294
	16,0	40,0	34,0		140TA5295
	16,0	40,0	40,0		140TA5296



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **LINDE-LANSING**

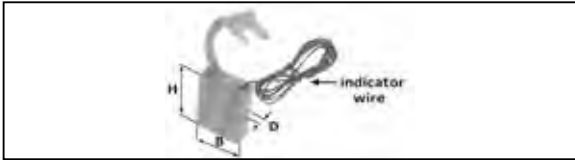

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	16,0	40,0	45,0		122TA4745
	16,0	40,0	45,0	yes	140TA5297
	16,0	40,0	46,0		140TA5298
	16,0	40,0	53,0		140TA5299
	19,0	28,5	51,0		122TA4746
	20,0	25,0	32,5		122TA4747
	20,0	25,0	45,5		122TA4748
	20,0	40,0	33,0		122TA4749
M2	8,0	20,0	25,0		140TA5300
	9,0	19,0	14,0		140TA5301
	11,0	25,0	28,5		140TA5302
	12,0	20,0	33,0		140TA5303




Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.


used for: **LINDE-LANSING**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
M2	12,5	16,0	25,0		140TA5304
M3	10,0	16,0	31,0		140TA5305
	10,0	16,0	31,0		122TA4750
M4	10,0	40,0	30,5	yes	122TA4752

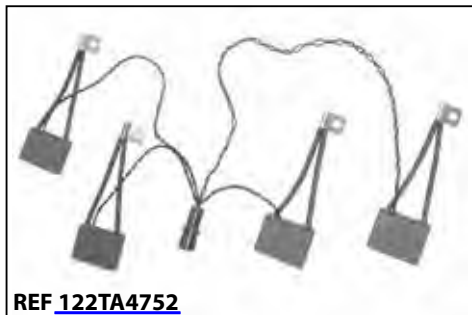

used for: **LINDE-LANSING**

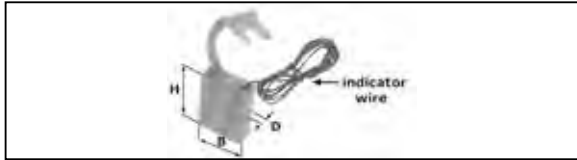


Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
2	5,0	8,0	19,5		140TA9543
	5,0	8,0	19,5		141TA4732
	6,0	16,0	19,0		141TA4733
	6,0	16,0	19,0		121TA2676
	6,0	20,0	28,0		141TA4734
	8,0	10,0	17,5		141TA4735
	8,0	20,0	25,0		121TA2678
	9,5	22,0	25,5		141TA4736




Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **LINDE-LANSING**

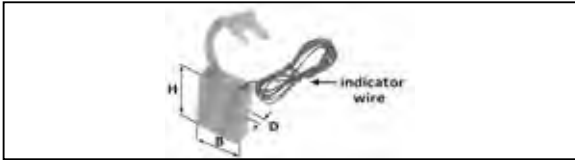

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
2	9,5	22,0	30,0		141TA4737
	9,5	25,5	27,5		141TA4738
	10,0	20,0	20,0		140TA9546
4	6,0	22,0	25,0		141TA4739
	6,0	22,0	25,0		141TA4743
	6,0	22,0	25,0		140TA9601
	6,0	22,0	25,5		141TA4742
	6,0	22,0	25,5		140TA9602

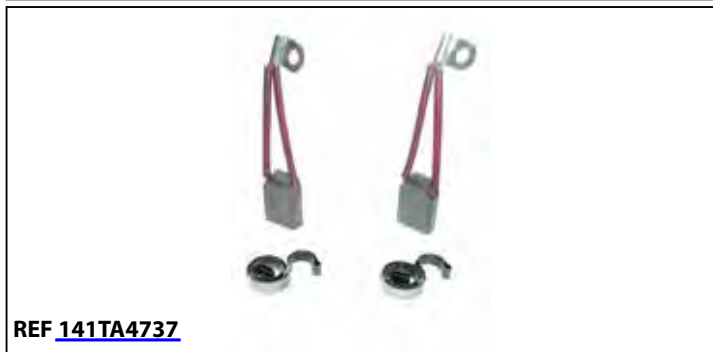


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **LINDE-LANSING**




Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	6,0	22,0	28,0		140TA9604
	6,0	27,0	19,0		141TA4744
	6,0	27,5	30,0		141TA4740
	6,0	27,5	30,5		141TA4741
	6,0	28,0	30,5		121TA2681
	6,0	28,0	30,5		121TA2682
	6,0	28,0	30,5		140TA9625
	6,5	12,5	21,0		141TA4745

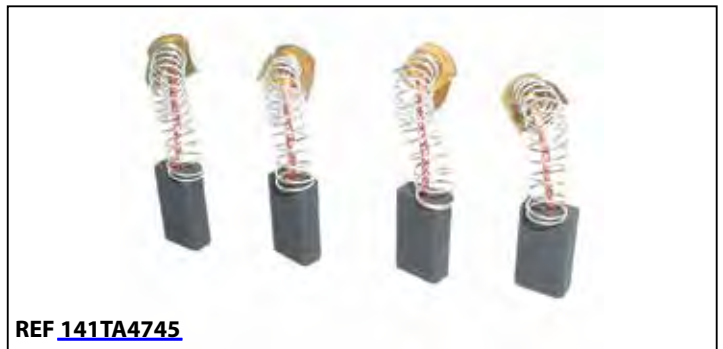


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **LINDE-LANSING**

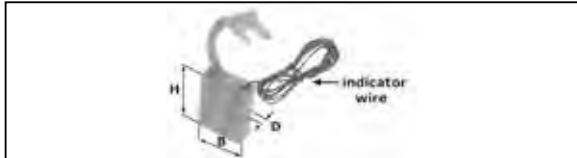

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	6,5	16,0	14,0		121TA2687
	6,5	19,0	16,0		121TA2684
	7,0	10,0	14,0		141TA4748
	7,0	12,5	20,5		141TA4747
	7,0	16,0	15,0		141TA4746
	7,0	18,0	14,5		141TA4749
	7,0	19,0	16,5		141TA4752
	7,0	19,0	17,0		141TA4750

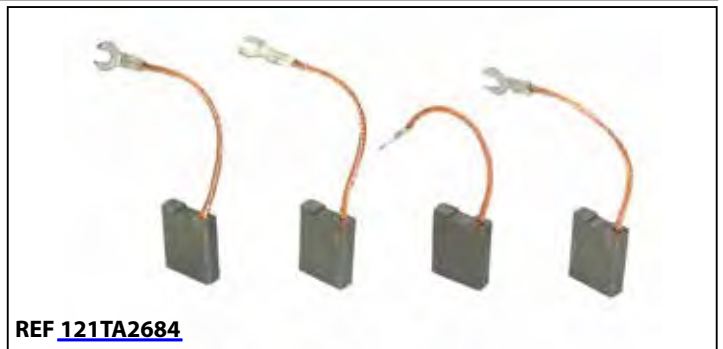


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **LINDE-LANSING**




Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	7,0	20,0	25,0		121TA2692
	7,0	25,5	28,5		141TA4751
	7,5	20,0	23,0		140TA9586
	8,0	10,0	20,0	yes	140TA9552
	8,0	12,5	22,0		140TA9555
	8,0	16,0	25,0		141TA4757
	8,0	19,0	22,5		141TA4753
	8,0	19,0	22,5		122TA6658


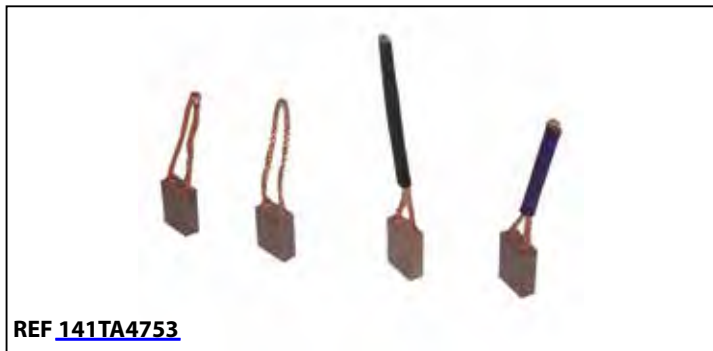


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **LINDE-LANSING**

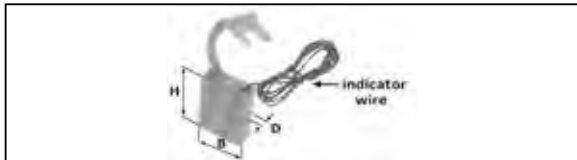

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	8,0	20,0	22,0		140TA9583
	8,0	20,0	25,0		141TA4759
	8,0	20,0	25,0		141TA4766
	8,0	20,0	25,0		121TA2704
	8,0	20,0	25,0		141TA4767
	8,0	20,0	25,5		141TA4758
	8,0	20,0	25,5		140TA9592
	8,0	22,0	28,5		141TA4769

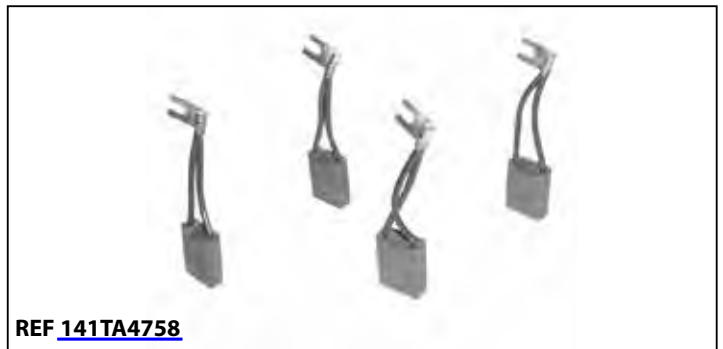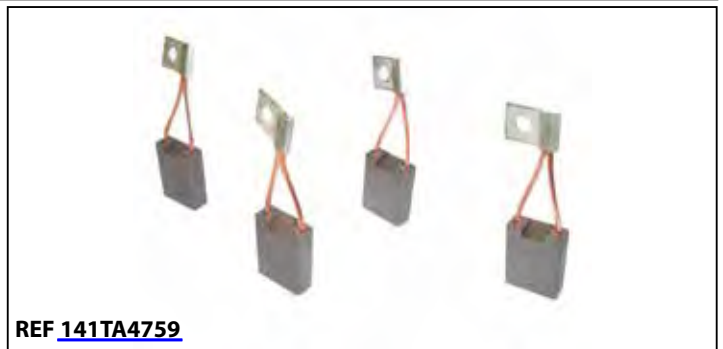

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **LINDE-LANSING**




Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	8,0	25,0	17,0		141TA4770
	8,0	25,0	22,0		141TA4771
	8,0	25,0	23,0	yes	141TA4772
	8,0	27,5	30,5		121TA2700
	8,0	28,0	30,5		141TA4754
	8,0	28,0	30,5		141TA4763
	8,0	28,0	31,0		140TA9632
	8,0	28,0	31,0		140TA9631



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **LINDE-LANSING**

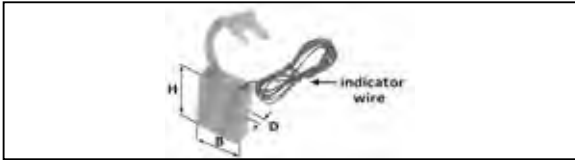

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	8,0	28,0	32,0		141TA4755
	8,0	28,0	32,0		141TA4760
	8,0	28,0	32,0		141TA4761
	8,0	28,0	32,5		141TA4762
	8,0	31,5	32,0		141TA4756
	8,0	32,0	30,0		141TA4765
	8,0	32,0	31,0		141TA4764
	8,5	11,5	16,0		141TA4773




Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **LINDE-LANSING**




Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	8,5	17,5	16,0		141TA4775
	8,5	18,0	25,0		140TA9569
	8,5	19,0	13,5		141TA4774
	8,5	19,0	13,5		121TA2708
	8,5	19,0	14,5		140TA9572
	8,5	19,0	16,5		141TA4776
	8,5	19,0	17,0		140TA9573
	8,5	19,0	25,5		140TA9579

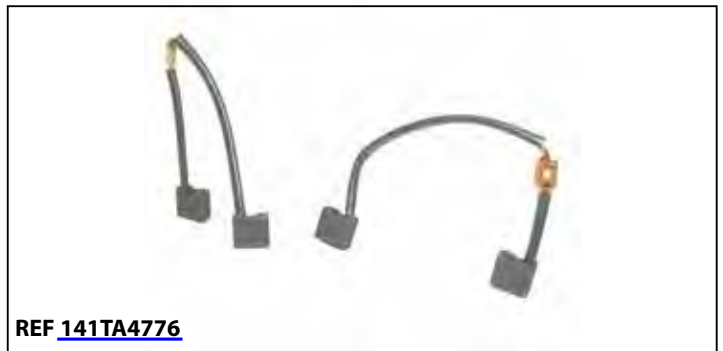


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **LINDE-LANSING**

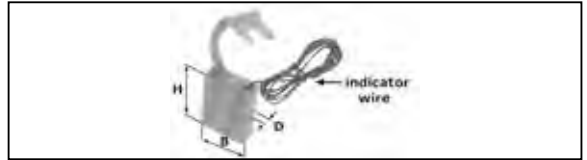

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	9,0	13,0	25,5		121TA2709
	9,0	13,0	25,5		141TA4777
	9,0	13,0	25,5		141TA4786
	9,0	13,0	26,0		141TA4781
	9,0	13,0	26,0		141TA4782
	9,0	16,0	17,0		140TA9562
	9,0	16,0	17,0		141TA4783
	9,0	16,0	20,0		140TA9564

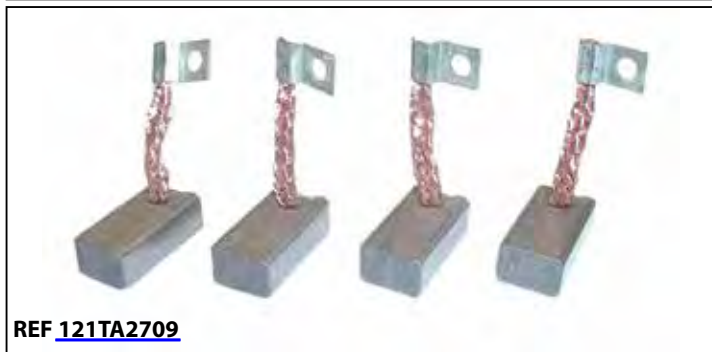


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **LINDE-LANSING**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	9,0	16,0	26,0		140TA9565
	9,0	17,5	16,0		140TA9567
	9,0	17,5	25,5		141TA4778
	9,0	18,0	25,5		141TA4784
	9,0	19,0	14,0		141TA4779
	9,0	19,0	14,0		141TA1113
	9,0	19,0	16,5		140TA9574
	9,0	19,5	16,0		141TA4785

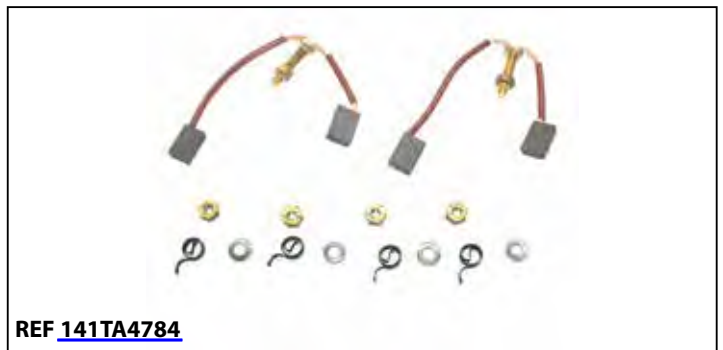


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **LINDE-LANSING**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	9,0	19,5	22,0		141TA4787
	9,0	20,0	22,0		140TA9584
	9,0	20,0	22,0		140TA9585
	9,0	20,0	28,0		140TA9594
	9,0	26,0	26,0		141TA4780
	9,0	30,0	28,0		140TA9636
	9,0	30,0	29,5		141TA4788
	9,5	19,0	25,5		141TA4790

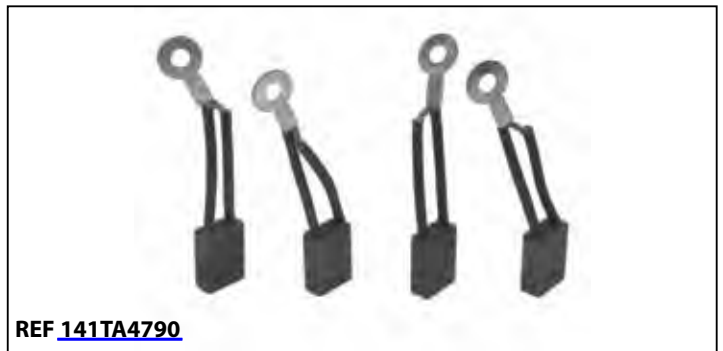


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **LINDE-LANSING**




Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	9,5	19,0	26,0		141TA4791
	9,5	20,5	25,5		140TA9599
	9,5	22,0	25,5		141TA4792
	9,5	22,0	30,0		141TA4793
	9,5	31,5	27,0		141TA4794
	9,5	31,5	27,0		141TA4797
	9,5	31,5	27,5		141TA4795
	9,5	31,5	27,5		141TA4796



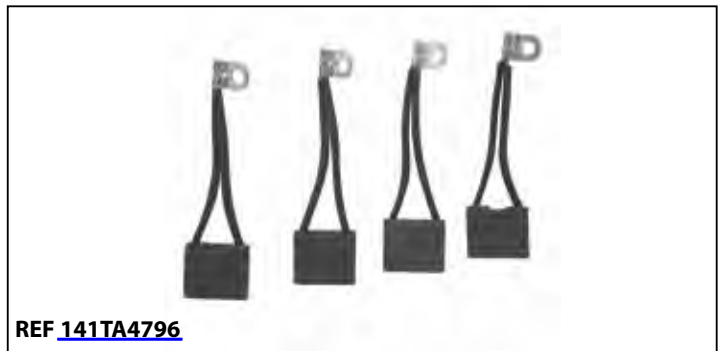


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **LINDE-LANSING**

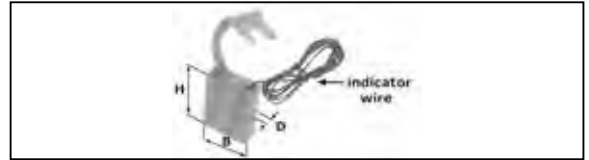

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	9,5	31,5	27,5		141TA4798
	9,5	32,0	27,0		141TA4799
	9,5	38,0	19,0		141TA4800
	9,5	38,0	22,0		141TA4789
	9,5	38,0	22,0		141TA4801
	9,5	38,0	22,0		122TA7297
	9,5	38,0	22,0		141TA4802
	9,5	38,0	22,0		141TA4803

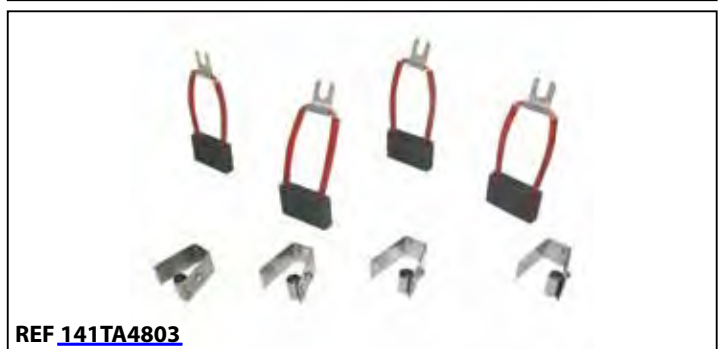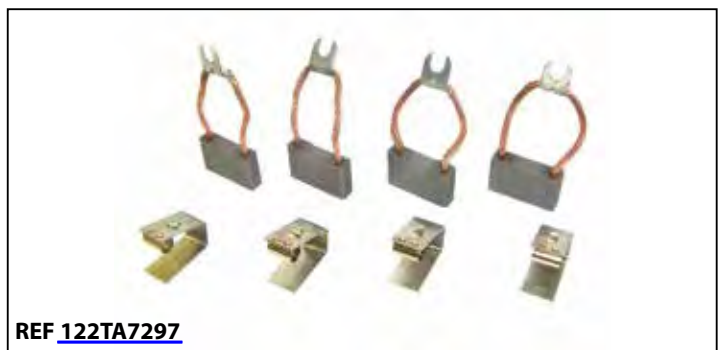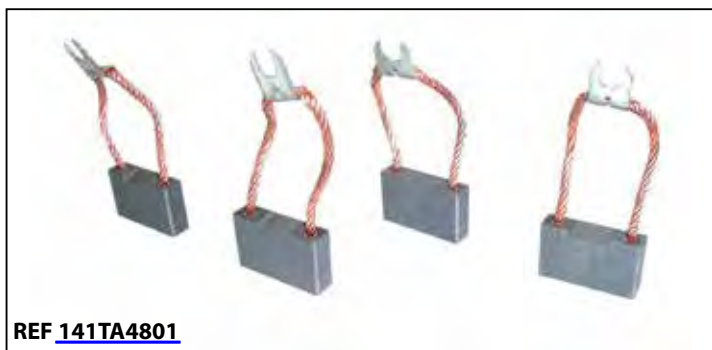


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **LINDE-LANSING**




Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	9,5	38,0	22,0		141TA4804
	9,5	38,0	22,0		140TA9654
	9,5	38,0	22,0		141TA4805
	9,5	38,0	22,5		122TA5468
	9,5	38,0	22,5		141TA4806
	9,5	38,0	27,0		141TA4807
	9,5	38,0	27,0		141TA4808
	9,5	38,0	27,0		121TA2730


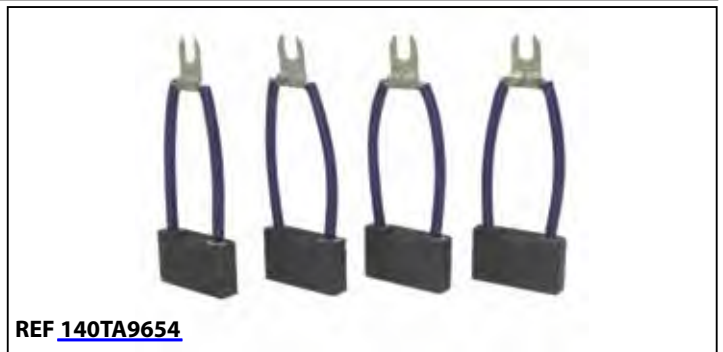


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **LINDE-LANSING**

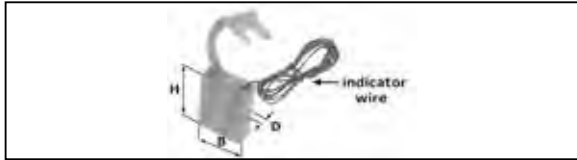

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	9,5	38,5	27,0		121TA2718
	10,0	20,0	20,0		140TA9581
	10,0	20,0	20,0		140TA9582
	10,0	20,0	25,0	yes	140TA9590
	10,0	20,0	25,5		140TA9593
	10,0	20,0	32,0		121TA2737
	10,0	20,0	32,0		121TA2738
	10,0	25,0	15,0		141TA4814


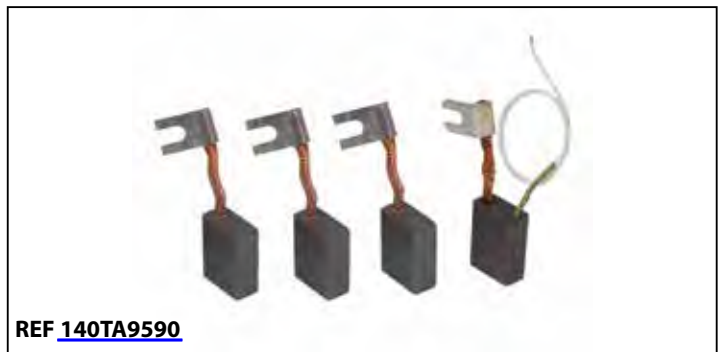
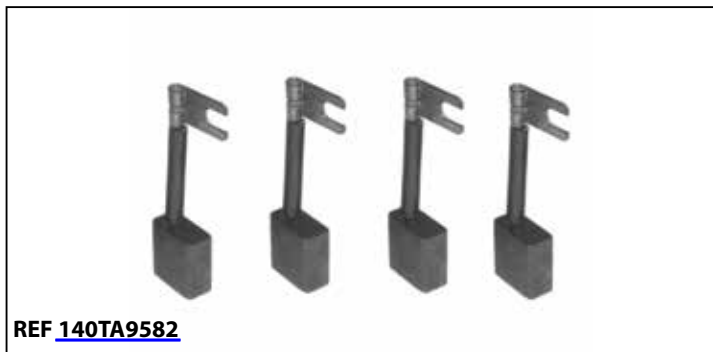


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **LINDE-LANSING**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	10,0	25,0	16,5		140TA9607
	10,0	25,0	20,0		141TA4815
	10,0	25,0	21,0		140TA9610
	10,0	25,0	23,0		141TA4816
	10,0	25,0	25,0		141TA4810
	10,0	25,0	25,0		141TA4817
	10,0	25,0	25,0		141TA4818
	10,0	25,0	28,5		140TA9616

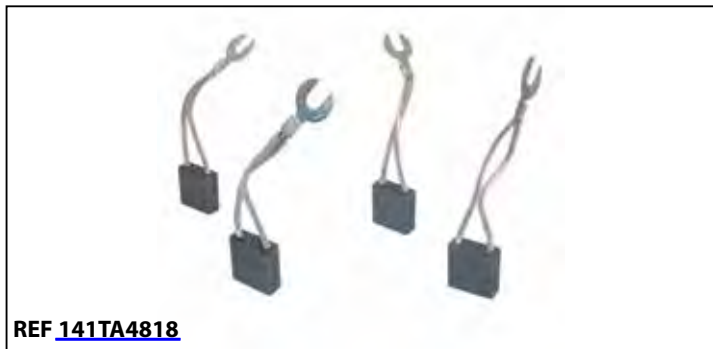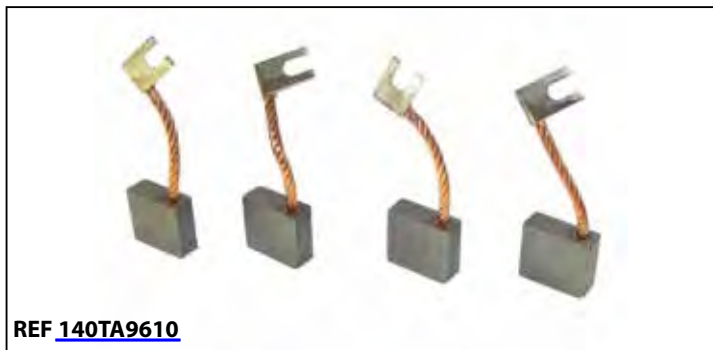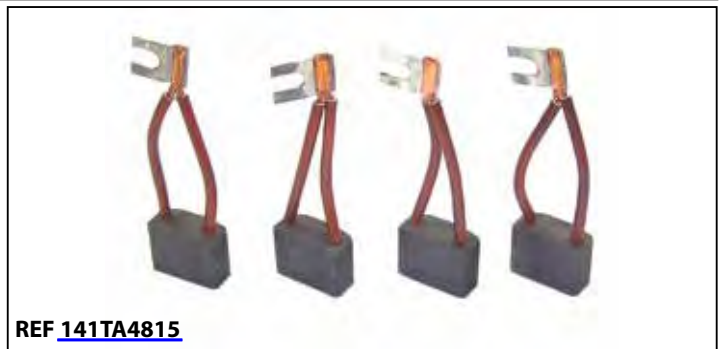


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **LINDE-LANSING**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	10,0	25,0	31,0		141TA4819
	10,0	25,5	35,0		140TA9619
	10,0	25,5	35,0		141TA4826
	10,0	28,0	22,0		140TA9622
	10,0	28,0	30,0	yes	140TA9624
	10,0	28,0	30,5		140TA9629
	10,0	31,5	31,0		141TA4811
	10,0	32,0	32,0		140TA9645

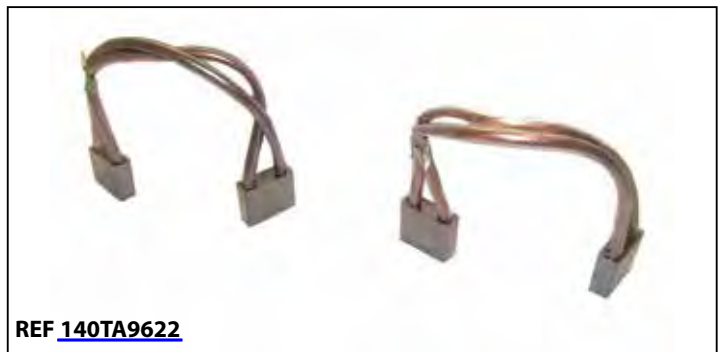

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **LINDE-LANSING**




Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	10,0	32,0	32,0		140TA9647
	10,0	32,0	32,0		141TA4820
	10,0	32,0	32,5	yes	140TA9648
	10,0	40,0	30,0		141TA4821
	10,0	40,0	30,0		141TA4822
	10,0	40,0	30,0		141TA4823
	10,0	40,0	37,0		141TA4813
	10,0	40,0	46,0		122TA5469




Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **LINDE-LANSING**

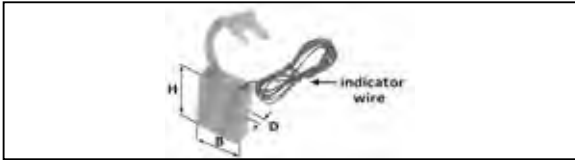

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	10,0	40,0	46,0		141TA4812
	10,0	40,0	46,0		141TA4824
	10,0	48,0	31,0		141TA4825
	11,0	20,0	24,5		141TA4827
	11,0	25,5	25,5		141TA4828
	11,0	25,5	25,5		122TA6662
	11,0	28,5	30,0		140TA9635
	12,0	20,0	30,0		141TA4829

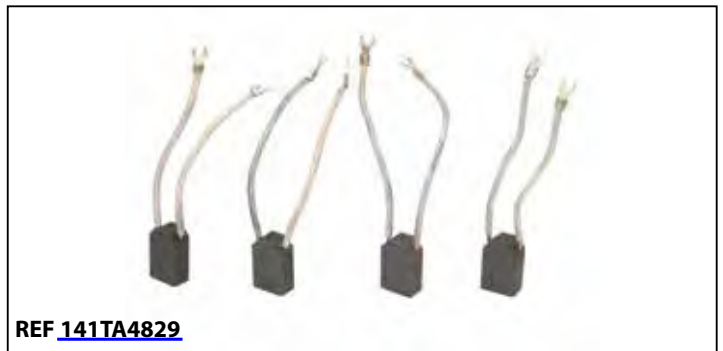

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **LINDE-LANSING**




Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	12,0	20,0	32,0		141TA4830
	12,0	32,0	32,0		141TA4831
	12,0	36,0	26,5		140TA9650
	12,5	24,5	24,0		121TA2752
	12,5	25,0	32,0	yes	141TA4832
	12,5	32,0	20,5		140TA9640
	12,5	32,0	32,5		140TA9643
	12,5	32,0	35,5		140TA9649



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **LINDE-LANSING**

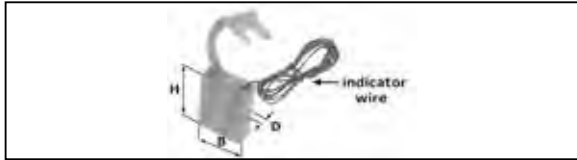

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	12,5	38,0	50,5		141TA4833
	12,5	40,0	32,0		121TA2753
	14,0	31,5	50,5		141TA4834
	16,0	20,0	32,0		140TA9596
	16,0	25,0	45,0		141TA4837
	16,0	32,0	32,0		140TA9644
	16,0	38,0	50,0		141TA4835
	16,0	38,0	50,0		141TA4840




Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **LINDE-LANSING**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	16,0	38,0	51,0		121TA2756
	16,0	38,0	51,0		141TA4836
	16,0	38,0	60,5		141TA4838
	16,0	40,0	40,5		141TA4841
	16,0	40,0	46,0		141TA4842
	16,0	40,0	46,0		141TA4843
	16,0	40,0	53,5		141TA4844
	16,0	40,0	55,5		141TA4839


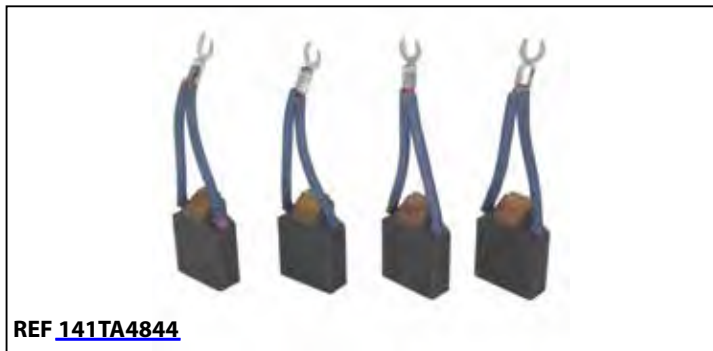


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **LINDE-LANSING**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	17,0	35,0	30,0		141TA4845
	17,0	35,0	30,0		141TA4846
	20,0	10,0	31,0		140TA9553
8	7,0	22,0	20,0		140TA9678
	8,0	16,0	20,0		141TA4847
	9,0	13,0	25,0		140TA9671
	9,0	13,0	25,5		141TA1118
	9,0	13,0	25,5		141TA4848

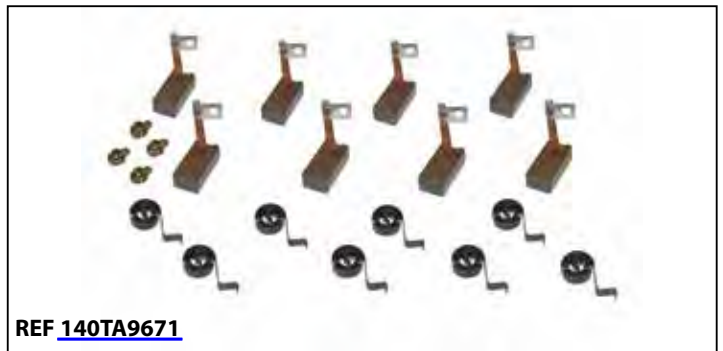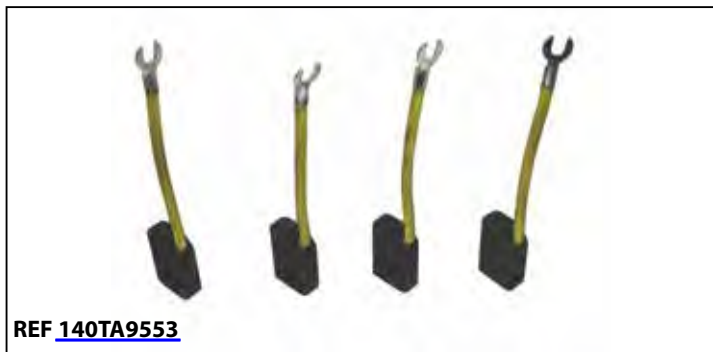

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **LINDE-LANSING**




Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	9,5	27,5	30,5		121TA2762
	9,5	31,5	27,0		121TA2758
	9,5	31,5	27,0		141TA4849
	9,5	31,5	27,0		141TA4850
	10,0	20,0	25,0		141TA4852
	10,0	24,0	31,0		140TA9680
	10,0	25,0	31,0		141TA4853
	10,0	25,0	32,0		140TA9682




Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **LINDE-LANSING**

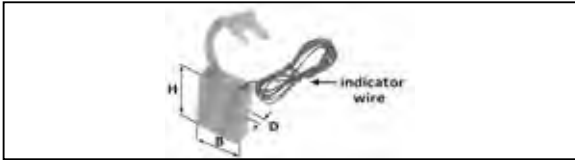

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	10,0	25,5	45,0		141TA4855
	10,0	25,5	45,0		141TA4856
	10,0	25,5	45,0		141TA4857
	10,0	26,0	30,5		140TA9693
	10,0	26,0	30,5		121TA2761
	10,0	26,0	31,0		141TA4851
	10,0	26,0	31,0		140TA9695
	10,0	28,0	30,0		141TA4854

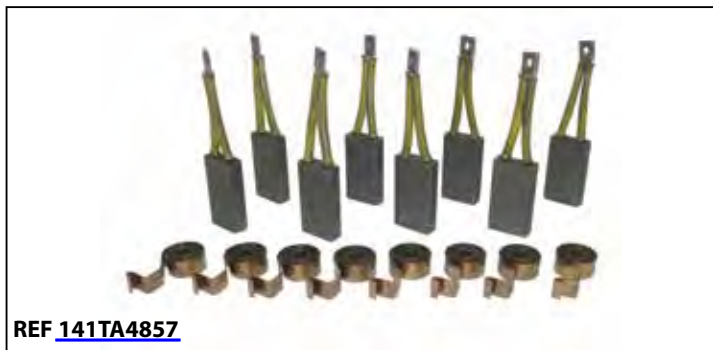


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **LINDE-LANSING**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	10,0	32,0	32,0	yes	140TA9700
	10,0	32,0	32,5	yes	140TA9704
	12,0	19,5	32,0		121TA2764
	12,0	20,0	30,0		140TA9675
	12,0	20,0	32,0		140TA9676
	12,0	20,0	32,0		121TA2765
	12,5	15,5	35,0		140TA9673
	12,5	16,0	28,5		141TA4861





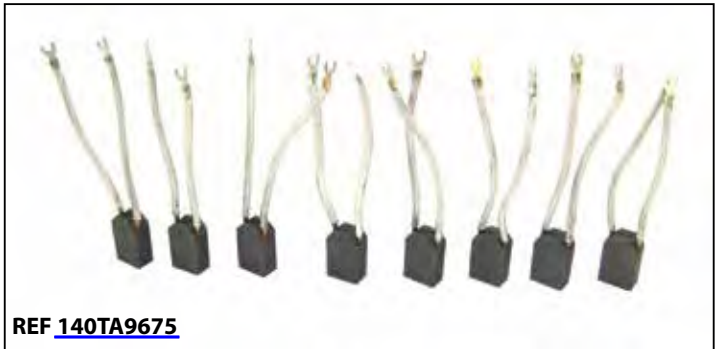


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **LINDE-LANSING**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	12,5	20,0	32,0	yes	140TA9677
	12,5	22,0	32,0		141TA4862
	12,5	25,0	32,0		140TA9684
	12,5	25,0	32,0	yes	141TA4858
	12,5	25,0	32,0	yes	140TA9686
	12,5	25,0	40,0		141TA4859
	12,5	32,0	32,0	yes	141TA4860
	12,5	32,0	32,0	yes	140TA9702

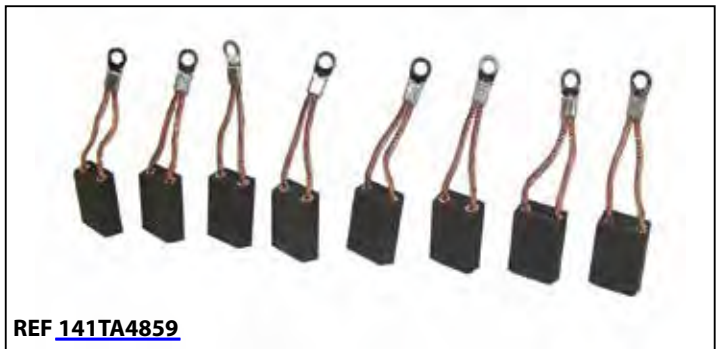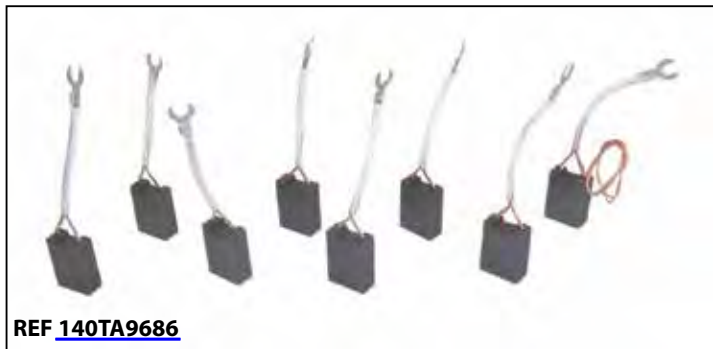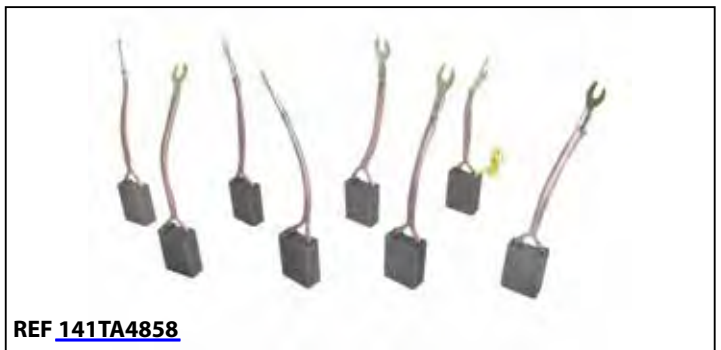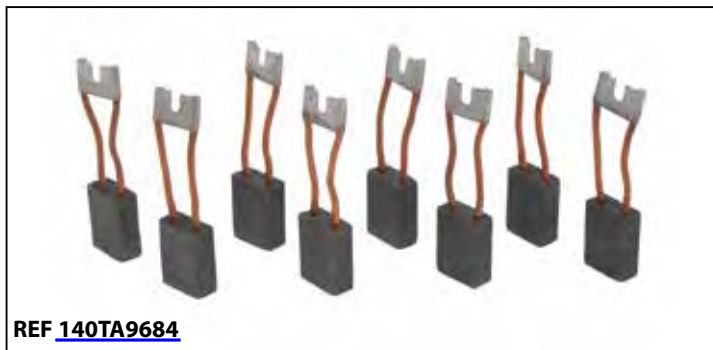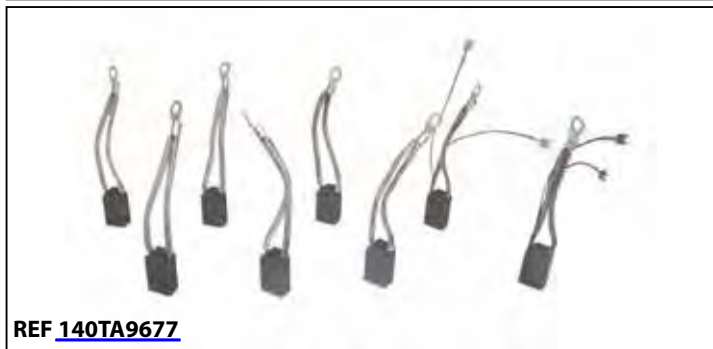


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **LINDE-LANSING**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	12,5	32,0	32,0	yes	140TA9701
	12,5	32,0	32,0	yes	141TA1120
	12,5	32,0	32,5	yes	140TA9705
	12,5	32,0	40,0		121TA2767
	12,5	32,0	40,0		121TA2768
	14,0	25,5	35,0		141TA4863
	16,0	40,0	30,0		141TA4864
	19,0	28,5	51,0		141TA4865



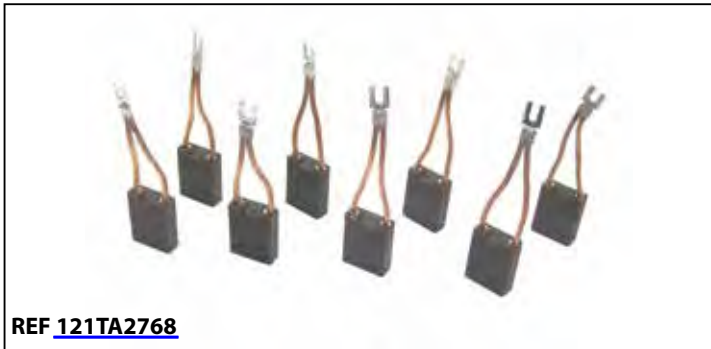


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **LINDE-LANSING**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	19,5	24,5	32,5		141TA4866
	20,0	25,0	32,0		141TA4867
	20,0	25,0	45,5		122TA5471
12	16,0	32,0	40,5	yes	121TA2771

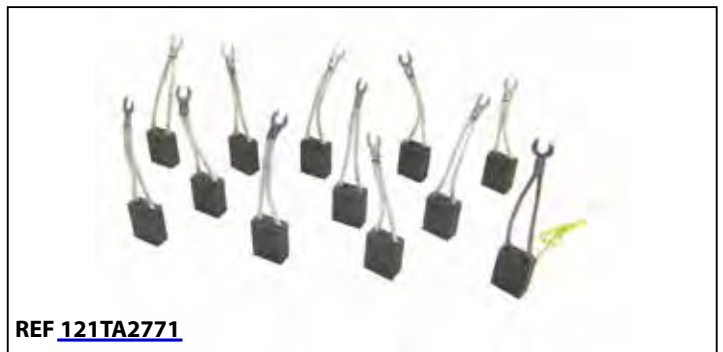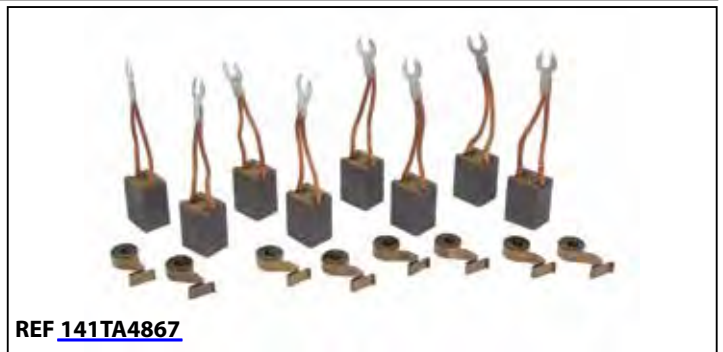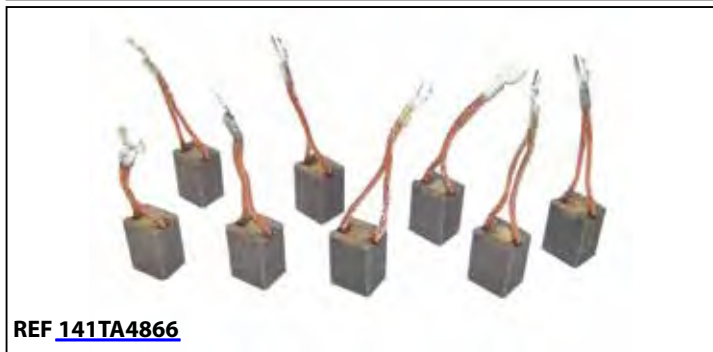

used for: **LUGLI**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	9,0	13,0	25,5		122TA4753
	12,5	20,0	32,0		140TA5306
E4	6,0	22,0	26,0		140TA5307
	6,0	28,0	30,0		122TA4754
	6,0	28,0	30,0		140TA5308
	10,0	28,0	30,5		140TA5309
	10,0	32,0	40,0		140TA5310
	10,0	32,0	41,0	yes	140TA5311
	12,0	32,0	32,0		122TA4755
	12,0	32,0	32,0		140TA5312



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **MANITOU**

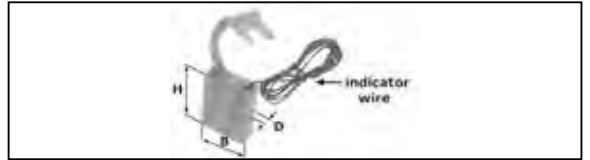

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E1	7,0	19,0	16,5		122TA4756
E2	4,0	5,0	11,0		140TA5313
	5,0	7,0	15,0		140TA5314
	5,0	8,0	20,0		140TA5315
	5,0	8,0	23,0		140TA5316
	6,0	7,0	20,0		140TA5317
	6,5	12,0	18,0		140TA5318
	6,5	18,0	15,0		140TA5319
	8,0	8,0	20,0		140TA5320
	8,0	9,5	17,0		140TA5321
	8,0	9,5	18,0		140TA5322
	9,0	13,0	25,5		140TA5323



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **MANITOU**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	9,0	21,0	28,0		140TA5324
	10,0	12,5	22,5		122TA4757
	10,0	20,0	25,0		140TA5325
	10,0	25,0	20,0		140TA5326
	12,5	20,0	27,0		140TA5327
	12,5	20,0	27,0		140TA5328
	14,0	40,0	32,5		140TA5329
E4	6,0	22,0	25,0		140TA5330
	8,0	20,0	22,5		140TA5331
	8,0	30,0	25,0		140TA5332
	8,0	30,0	25,0		140TA5333
	12,5	30,0	27,0		140TA5334



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **MANITOU**

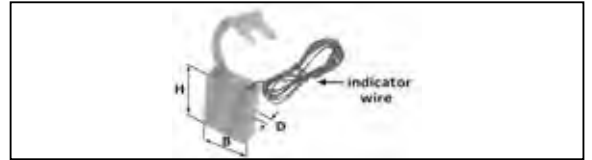

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	12,5	31,5	28,0		140TA5335
	12,5	40,0	34,0		140TA5336
	14,0	40,0	26,5		140TA5337
	14,0	40,0	27,0		140TA5338
	14,0	40,0	27,0		140TA5339
	14,0	40,0	34,0		140TA5340
	14,0	40,0	34,0		140TA5341
	16,0	31,5	33,0		140TA5342
M2	16,0	40,0	34,0		140TA5343
	10,0	20,0	21,0		140TA5344
	10,0	20,0	25,0		140TA5345





Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **MANITOU**




Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	7,0	12,5	19,0		140TA9712
	7,0	16,0	16,0		141TA4254
	8,0	19,0	22,5		141TA4255
	8,0	20,0	25,0		121TA2782
	8,0	20,0	25,5		141TA4256
	8,0	25,0	22,0		140TA9722
	8,0	28,0	30,5		140TA9723
	8,0	28,0	32,0		140TA9724


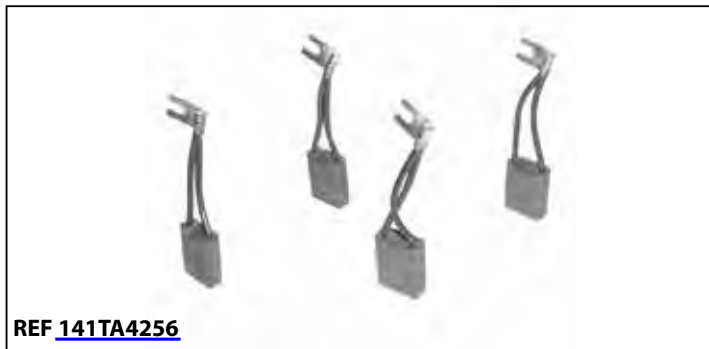
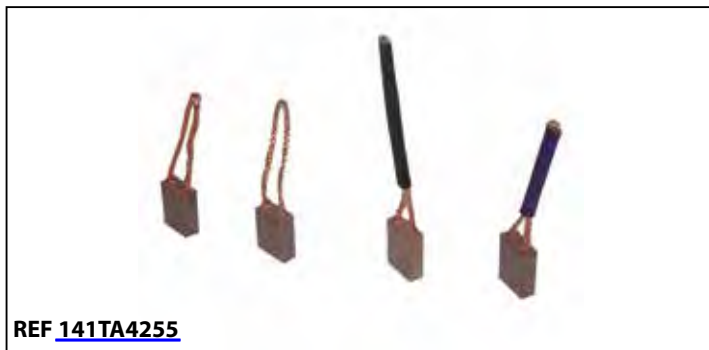


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **MANITOU**

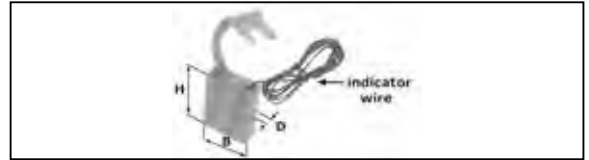


Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	9,0	13,0	25,5		141TA4257
	9,0	16,0	17,0		141TA4258
	9,0	16,0	17,0		140TA9716
	9,0	16,0	18,0		140TA9717
	9,0	19,5	16,0		140TA9718
	9,0	20,0	26,0		140TA9721
	9,0	30,0	28,0		140TA9725
	9,0	30,0	28,0		140TA9726

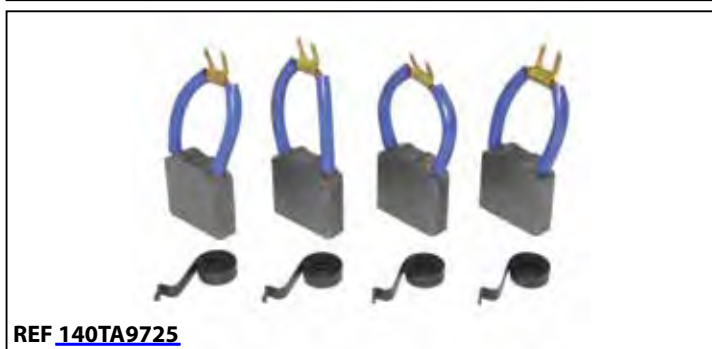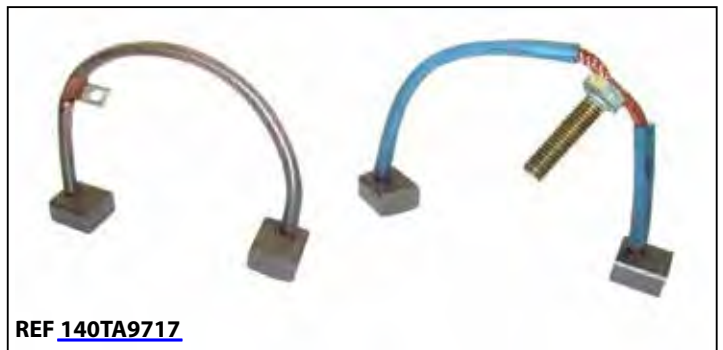
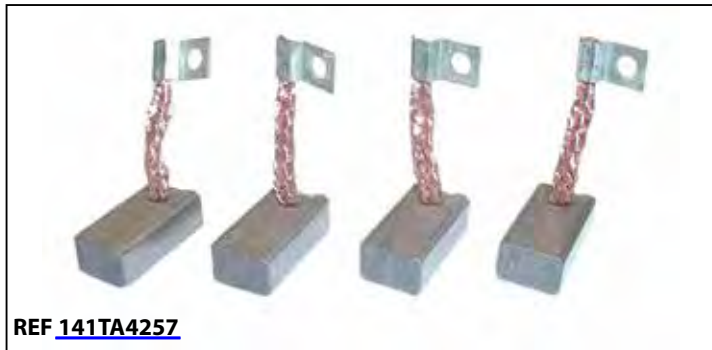


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **MANITOU**

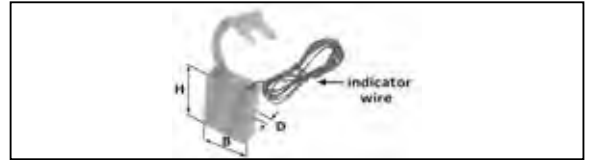

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	10,0	32,0	25,0		140TA9727
	10,0	33,0	23,0		140TA9728
	12,5	20,0	25,0		140TA9719
8	10,0	20,0	21,0		140TA9729
	10,0	20,0	25,5		141TA4259

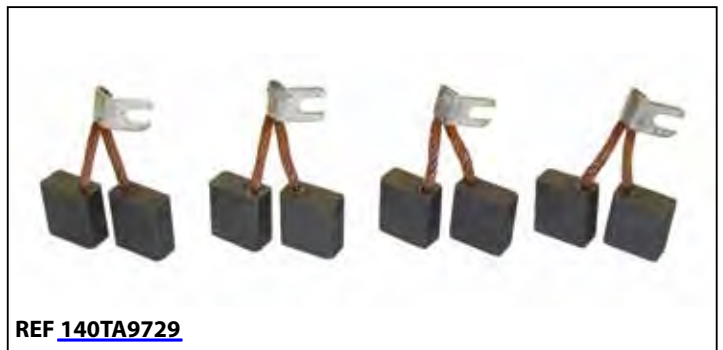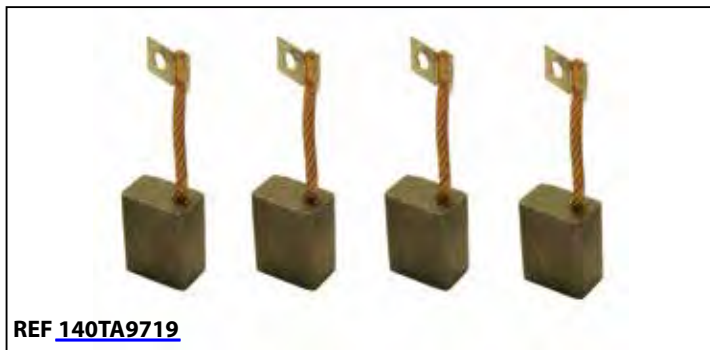

used for: **MITSUBISHI-CATERPILLAR**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E1	5,5	5,5	16,0		122TA3959
	6,0	19,0	16,0		122TA3960
	6,5	19,0	12,5		122TA3961
	6,5	19,0	16,0		122TA3962
	7,0	22,5	44,0		140TA5346
	8,0	19,0	19,0		140TA5347
	9,5	19,0	19,0		122TA3963
	10,0	19,0	19,0		122TA3964
E2	5,0	8,0	18,0		122TA3966
	5,0	8,0	18,5		140TA5348
	5,0	8,0	20,0		140TA5349



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **MITSUBISHI-CATERPILLAR**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	5,0	8,0	23,0		140TA5350
	5,5	7,0	19,5		122TA3969
	6,0	7,0	18,0		140TA5351
	6,0	7,0	20,0		122TA3971
	6,0	7,0	23,5		122TA3970
	6,0	10,0	14,5		140TA5352
	6,0	12,5	22,0		140TA5353
	6,0	19,0	19,5		140TA5354
	6,0	22,0	24,0		140TA5355
	6,5	12,0	16,0		140TA5356
	6,5	12,0	17,5		140TA5357
	6,5	12,0	18,0		140TA5358



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **MITSUBISHI-CATERPILLAR**

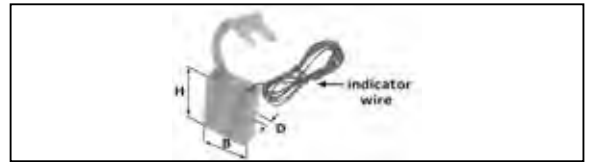

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	7,0	10,0	17,0		140TA5359
	7,0	10,0	18,0		122TA3976
	7,0	11,0	21,0		140TA5360
	7,0	12,0	16,0		140TA5361
	7,0	12,0	16,5		140TA5362
	7,0	12,0	17,0		122TA3978
	7,0	12,0	17,0		122TA3979
	7,0	12,0	17,5		122TA3975
	7,0	16,0	15,0		122TA3980
	7,0	18,0	18,0		140TA5363
	7,0	18,0	18,0		140TA5364
	7,5	15,0	24,0		140TA5365



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **MITSUBISHI-CATERPILLAR**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	8,0	10,0	20,0		140TA5366
	8,0	12,5	22,0		140TA5367
	8,0	12,5	22,0		140TA5368
	8,0	12,5	22,0		140TA5369
	8,0	14,0	19,0		140TA5370
	8,0	16,0	25,0		140TA5371
	8,0	20,0	17,0		122TA4778
	8,0	22,0	20,0		140TA5372
	8,0	22,0	25,5		140TA5373
	8,0	22,0	28,0		140TA5374
	8,0	22,5	23,0		140TA5375
	8,0	24,0	17,0		122TA3982



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **MITSUBISHI-CATERPILLAR**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	8,0	24,0	17,5		140TA5376
	8,0	24,0	18,0		122TA3981
	8,0	25,0	20,5		140TA5377
	9,0	9,0	13,0		122TA3985
	9,0	13,0	25,0		140TA5378
	9,0	18,5	20,0		140TA5379
	9,0	19,0	20,0		140TA5380
	9,0	19,0	22,5		140TA5381
	9,0	20,0	23,0		140TA5382
	9,0	20,0	29,0		140TA5383
	9,0	25,0	19,5		140TA5384
	9,0	25,0	22,5		122TA4782



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **MITSUBISHI-CATERPILLAR**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	9,0	25,0	23,0		122TA3984
	9,0	25,0	25,0		140TA5385
	9,0	30,0	23,0		140TA5386
	9,5	16,0	28,5		122TA3986
	9,5	19,0	21,0		140TA5387
	10,0	12,0	23,0		140TA5388
	10,0	12,5	22,5		140TA5389
	10,0	12,5	22,5	yes	140TA5390
	10,0	20,0	20,0		122TA3987
	10,0	20,0	23,0		140TA5391
	10,0	20,0	24,0		140TA5392
	10,0	20,0	25,0		140TA5393



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **MITSUBISHI-CATERPILLAR**

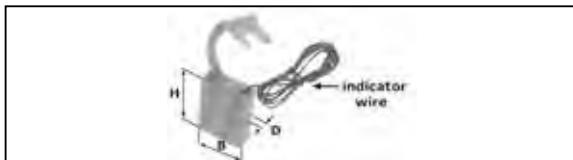

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	10,0	20,0	25,0		122TA3988
	10,0	20,0	25,0		122TA3989
	10,0	25,0	23,0		140TA5394
	10,0	28,0	20,0		122TA3990
	12,0	39,5	25,5		140TA5395
	12,5	16,0	36,0		122TA3992
	12,5	16,0	37,0		140TA5396
	12,5	16,0	44,0		122TA3993
	12,5	20,0	25,5		140TA5397
	12,5	25,0	32,0		140TA5398
	12,5	25,0	33,0		140TA5399
	12,5	30,0	25,0		140TA5400



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **MITSUBISHI-CATERPILLAR**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	12,5	31,5	25,0		140TA5401
	12,5	40,0	25,5		140TA5402
	13,0	16,0	38,5	yes	140TA5403
	14,0	40,0	32,5		140TA5404
	16,0	20,0	26,0		140TA5405
	16,0	25,0	28,0		140TA5406
	16,0	25,0	32,0		140TA5407
	16,0	25,0	50,0		140TA5408
E3	6,0	28,0	30,5		140TA5409
	6,0	28,0	31,0		140TA5410
	10,0	32,0	31,0	yes	140TA5411
E4	6,0	22,0	25,0		140TA5412



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **MITSUBISHI-CATERPILLAR**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	6,0	22,0	25,5		140TA5413
	6,0	32,0	32,0		140TA5414
	7,0	25,0	29,0		140TA5415
	7,5	22,0	22,5		140TA5416
	8,0	19,0	20,0		140TA5417
	8,0	20,0	22,5		140TA5418
	8,0	20,0	26,0		140TA5419
	8,0	20,0	26,0		140TA5420
	8,0	20,0	32,0		122TA3997
	8,0	25,0	23,0		140TA5421
	8,0	30,0	25,0		140TA5422
	8,0	30,0	25,0		140TA5423



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **MITSUBISHI-CATERPILLAR**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	8,0	32,0	25,0		122TA3996
	8,0	32,0	31,0		140TA5424
	8,0	32,0	32,0		122TA3995
	8,0	38,0	21,0		140TA5425
	9,0	20,0	28,0		140TA5426
	9,0	20,0	28,0	yes	140TA5427
	9,0	25,0	25,0		140TA5428
	9,0	28,0	21,0		140TA5429
	9,5	19,0	20,0		122TA3998
	9,5	20,5	28,0		140TA5430
	9,5	25,5	27,0		140TA5431
	9,5	38,0	21,0		140TA5432



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **MITSUBISHI-CATERPILLAR**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	10,0	20,0	20,0		140TA5433
	10,0	25,0	22,0		140TA5434
	10,0	25,0	22,0		140TA5435
	10,0	25,0	25,0		140TA5436
	10,0	32,0	31,0		140TA5437
	10,0	32,0	31,0		140TA5438
	10,0	32,0	32,0		140TA5439
	10,0	32,0	32,0	yes	140TA5440
	10,0	32,0	32,5		140TA5441
	10,0	32,0	40,0		140TA5442
	10,0	38,0	21,0		140TA5443
	10,0	40,0	32,0		140TA5444



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **MITSUBISHI-CATERPILLAR**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	10,0	40,0	46,0	yes	122TA3999
	10,0	48,0	31,0		140TA5445
	10,0	48,0	31,0		140TA5446
	12,0	20,0	32,0		140TA5447
	12,0	20,0	32,0		122TA4000
	12,0	32,0	32,0		140TA5448
	12,5	16,0	29,0		140TA5449
	12,5	20,0	32,5		140TA5450
	12,5	25,0	33,0		140TA5451
	12,5	25,0	33,0		140TA5452
	12,5	25,0	45,0		122TA4006
	12,5	25,5	45,0		140TA5453



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **MITSUBISHI-CATERPILLAR**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	12,5	30,0	27,0		140TA5454
	12,5	31,5	41,0		140TA5455
	12,5	31,5	42,0		140TA5456
	12,5	32,0	32,0		140TA5457
	12,5	32,0	32,0		140TA5458
	12,5	32,0	35,5	yes	122TA4001
	12,5	40,0	25,5		140TA5459
	12,5	40,0	34,0		140TA5460
	12,5	40,0	40,5		122TA4004
	12,5	40,0	41,0		122TA4002
	12,5	40,0	46,0		122TA4003
	12,5	40,0	46,0		140TA5461



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **MITSUBISHI-CATERPILLAR**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	12,5	40,0	46,0	yes	122TA4005
	14,0	51,0	36,0		140TA5462
	16,0	24,5	33,5		122TA4011
	16,0	25,0	32,0		140TA5463
	16,0	25,0	32,0		140TA5464
	16,0	25,0	32,0		140TA5465
	16,0	25,0	32,0		140TA5466
	16,0	25,0	33,0		140TA5467
	16,0	25,5	30,0		140TA5468
	16,0	30,0	33,0		140TA5469
	16,0	32,0	32,0		122TA4008
	16,0	40,0	45,0		122TA4009




Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **MITSUBISHI-CATERPILLAR**

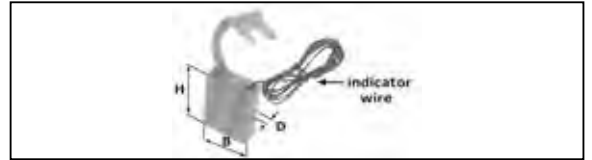

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	16,0	64,0	44,5		122TA4010
	16,0	64,0	44,5		140TA5470
	20,0	25,0	45,5		122TA4013
	20,0	25,0	46,0		122TA4014
	20,0	40,0	45,0		122TA4015
M2	4,0	12,0	16,5		122TA4796
	4,5	12,0	17,5		140TA5471
	4,5	12,0	17,5		122TA4016
	9,0	19,0	20,0		140TA5472
	9,5	16,5	25,5		122TA4017
	9,5	19,0	19,0		140TA5473
	10,0	16,0	25,0		140TA5474

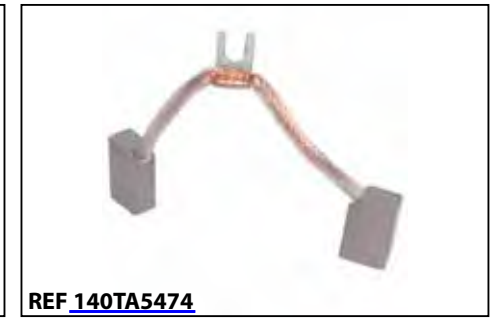

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **MITSUBISHI-CATERPILLAR**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
M2	12,0	20,0	33,0		140TA5475
	12,5	28,0	35,5		140TA5476
	12,5	28,0	36,0		140TA5477
	12,5	28,5	38,0		140TA5478
	12,5	28,5	38,0	yes	140TA5479
	12,5	28,5	40,0	yes	140TA5480
	13,0	28,5	36,0	yes	122TA4018
	13,0	28,5	36,0	yes	122TA4019
	13,0	32,0	29,0	yes	140TA5481
	13,0	32,0	38,0		140TA5482
	16,0	28,5	44,5	yes	140TA5483
	16,0	31,5	45,0		140TA5484



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **MITSUBISHI-CATERPILLAR**

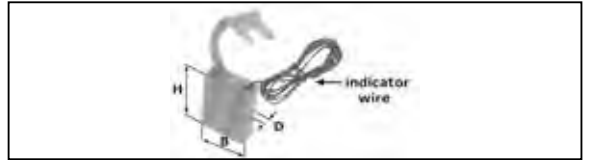



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
M2	16,0	32,0	38,0		122TA4020
	19,0	28,5	51,0	yes	140TA5485
	19,0	32,0	44,0		140TA5486
	20,0	20,0	25,0		140TA5487



used for: **MITSUBISHI-CATERPILLAR**




Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
2	5,0	8,0	18,5		141TA4260
	6,0	22,5	22,5		121TA2253
	8,0	8,0	19,5		141TA4261
	8,0	9,5	20,0		141TA4263
	8,0	12,5	17,5		141TA4262
	8,0	12,5	22,0		141TA4264
4	6,0	12,0	11,5		141TA4265
	6,0	22,0	25,5		141TA4266

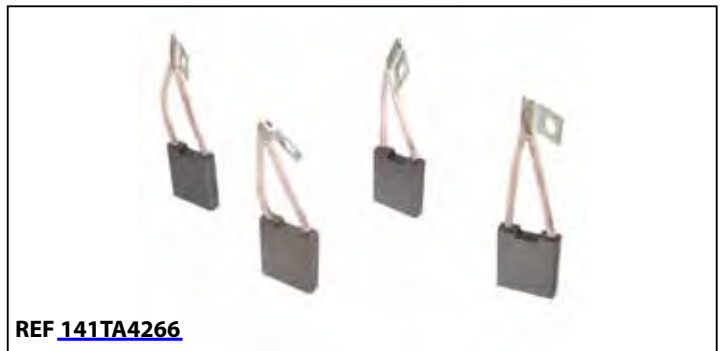
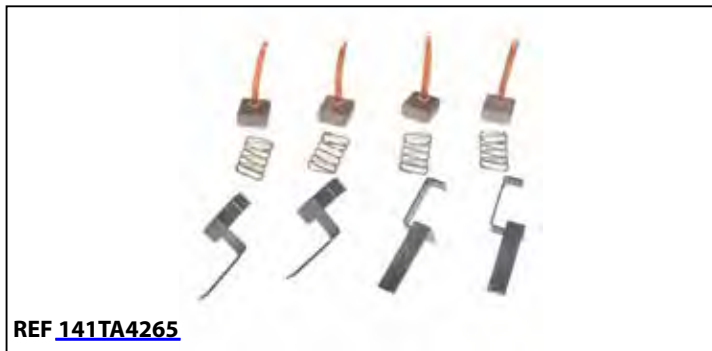


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **MITSUBISHI-CATERPILLAR**

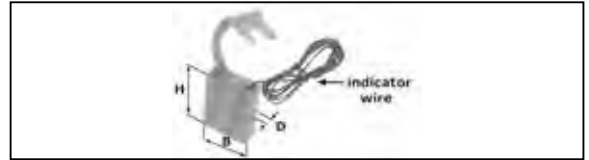

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	6,0	28,0	30,5		141TA4267
	6,0	28,0	30,5		141TA4268
	6,5	12,5	16,5		141TA4269
	7,0	12,0	20,5		121TA2784
	7,0	12,5	20,5		141TA4270
	7,0	16,0	16,0		140TA9737
	7,0	19,0	16,5		141TA4272
	7,0	25,5	28,5		141TA4271

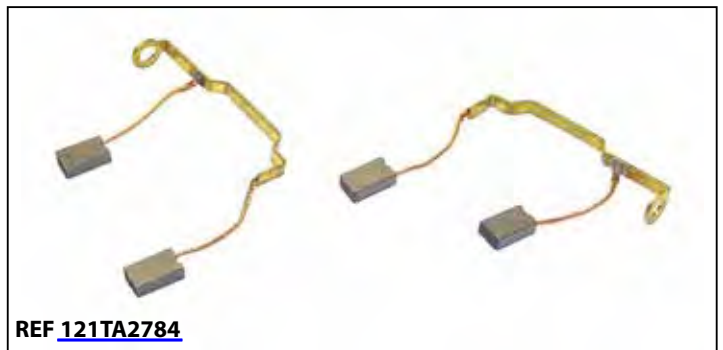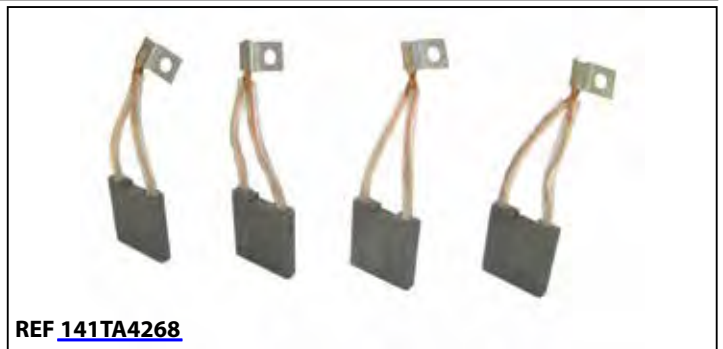


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **MITSUBISHI-CATERPILLAR**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	8,0	19,0	22,5		141TA4273
	8,0	20,0	25,0		140TA9749
	8,0	20,0	25,0		141TA4278
	8,0	20,0	27,0		141TA4274
	8,0	22,0	22,0		140TA9759
	8,0	27,5	30,5		141TA4275
	8,0	27,5	30,5		141TA4276
	8,0	28,0	30,5		141TA4277

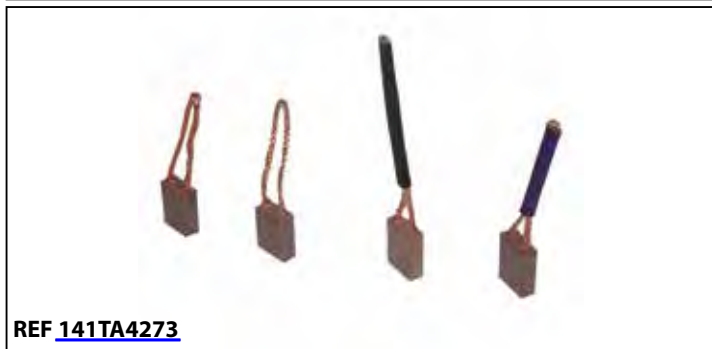

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **MITSUBISHI-CATERPILLAR**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	8,0	28,0	30,5		141TA4279
	8,0	32,0	30,0		140TA9784
	8,0	32,0	30,0		141TA4280
	8,0	32,0	32,0		141TA4281
	8,5	11,5	16,0		141TA4282
	8,5	17,5	20,0		141TA4283
	8,5	17,5	25,5	yes	121TA2785
	8,5	19,0	14,0		141TA4284




Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **MITSUBISHI-CATERPILLAR**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	8,5	19,0	16,5		141TA4285
	8,5	19,0	16,5		141TA4286
	8,5	19,0	17,0		140TA9744
	8,5	19,0	19,0		141TA4287
	8,5	19,0	23,0		141TA4288
	9,0	12,5	26,0		141TA4301
	9,0	13,0	25,5		141TA4289
	9,0	13,0	25,5		141TA4290

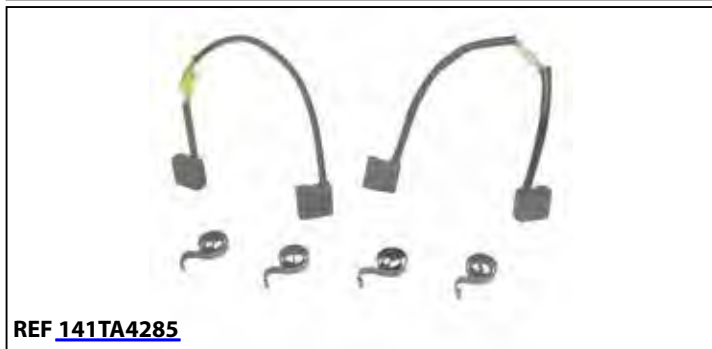

REF [141TA4285](#)



REF [141TA4286](#)



REF [140TA9744](#)



REF [141TA4287](#)



REF [141TA4288](#)



REF [141TA4301](#)



REF [141TA4289](#)



REF [141TA4290](#)

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **MITSUBISHI-CATERPILLAR**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	9,0	13,0	25,5		141TA1122
	9,0	13,0	25,5		141TA4302
	9,0	13,0	26,0		141TA4298
	9,0	16,0	17,0		141TA4299
	9,0	17,5	16,0		141TA4291
	9,0	17,5	16,0		141TA4292
	9,0	17,5	20,0		141TA4293
	9,0	19,0	14,0		141TA4294




Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **MITSUBISHI-CATERPILLAR**




Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	9,0	19,5	16,0		141TA4300
	9,0	25,5	27,0		140TA9766
	9,0	26,0	25,5		141TA4295
	9,0	26,0	26,0		141TA4296
	9,0	26,0	26,0		141TA4297
	9,0	30,0	26,0		121TA2262
	9,5	16,0	28,5	yes	140TA9740
	9,5	20,5	25,5		140TA9758

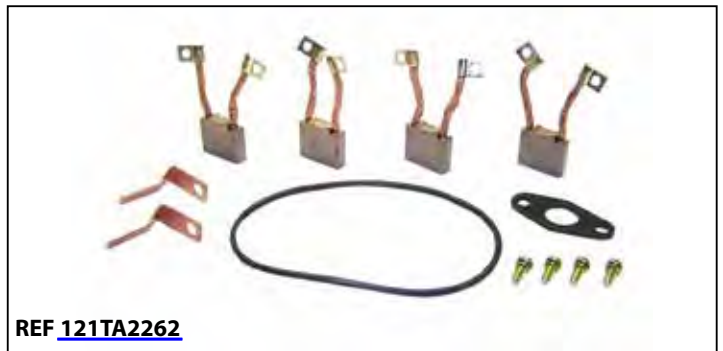

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **MITSUBISHI-CATERPILLAR**

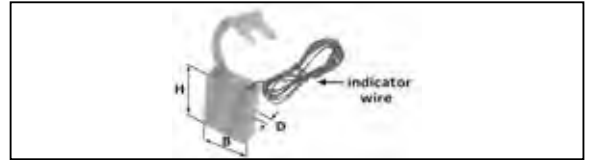

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	9,5	20,5	25,5		141TA4306
	9,5	20,5	28,5		141TA4303
	9,5	20,5	29,0		141TA4304
	9,5	22,0	25,0		141TA4305
	9,5	44,0	25,5		141TA4307
	9,5	44,5	25,0		141TA4308
	10,0	12,5	23,0		141TA4314
	10,0	16,0	25,0		141TA4315



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **MITSUBISHI-CATERPILLAR**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	10,0	19,5	26,0		141TA4310
	10,0	20,0	22,0		141TA4317
	10,0	20,0	26,0		141TA4311
	10,0	20,0	26,0		141TA4316
	10,0	21,5	36,5		141TA4325
	10,0	25,0	23,0		141TA4318
	10,0	25,0	23,0		141TA4320
	10,0	25,0	23,0		141TA4321



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **MITSUBISHI-CATERPILLAR**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	10,0	25,0	23,5		141TA4312
	10,0	25,0	25,0		141TA4322
	10,0	25,0	28,5		141TA4313
	10,0	25,5	35,0		141TA4326
	10,0	25,5	35,0		141TA4327
	10,0	25,5	35,0		141TA4328
	10,0	32,0	32,0		yes 141TA4309
	10,0	40,0	45,5		yes 141TA4323




Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **MITSUBISHI-CATERPILLAR**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	10,0	40,0	46,0	yes	141TA4324
	10,5	25,5	35,0		141TA4329
	10,5	36,5	24,5		121TA2268
	11,0	20,0	25,0		141TA4330
	12,0	20,0	32,0		141TA4331
	12,5	19,5	25,5		141TA4332
	12,5	20,0	25,5	yes	141TA4340
	12,5	25,0	28,0		141TA4333




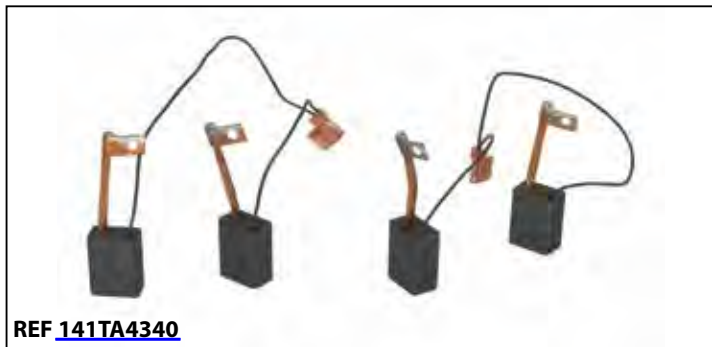


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **MITSUBISHI-CATERPILLAR**




Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	12,5	25,0	28,5		141TA4334
	12,5	31,5	27,5		141TA4336
	12,5	31,5	28,5		141TA4341
	12,5	31,5	31,5	yes	140TA9780
	12,5	31,5	32,0		141TA4335
	12,5	31,5	32,5		140TA9782
	12,5	32,0	35,0		141TA4342
	12,5	32,0	35,5	yes	140TA9791

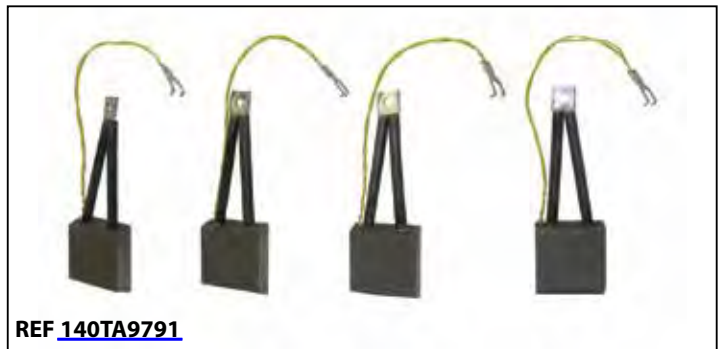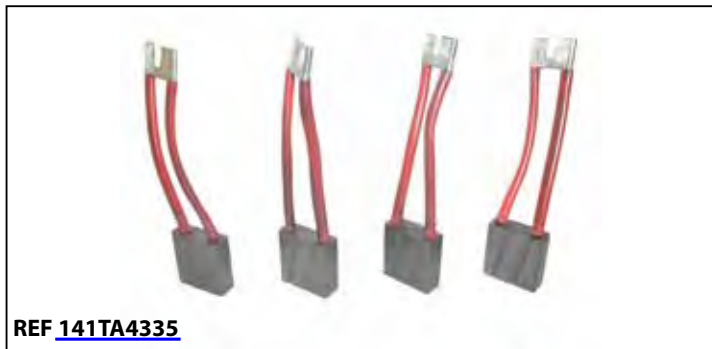
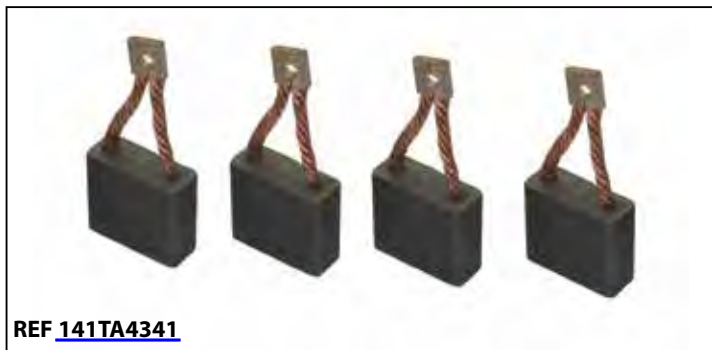
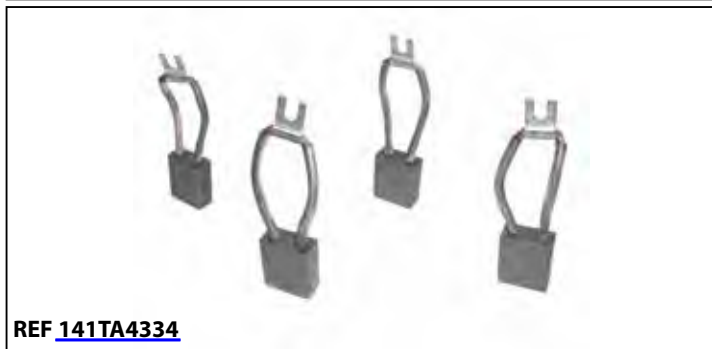


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **MITSUBISHI-CATERPILLAR**

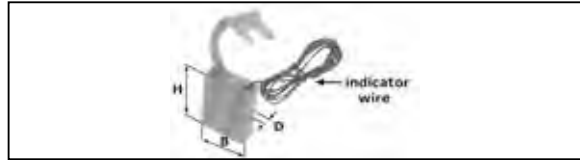


Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	12,5	32,0	35,5		141TA4345
	12,5	32,0	35,5		141TA4346
	12,5	32,0	36,0		141TA4347
	12,5	32,0	38,0		141TA4348
	12,5	32,0	38,0		140TA9792
	12,5	32,0	38,0		141TA4349
	12,5	40,0	42,5	yes	141TA4343
	12,5	40,0	45,0	yes	141TA4344

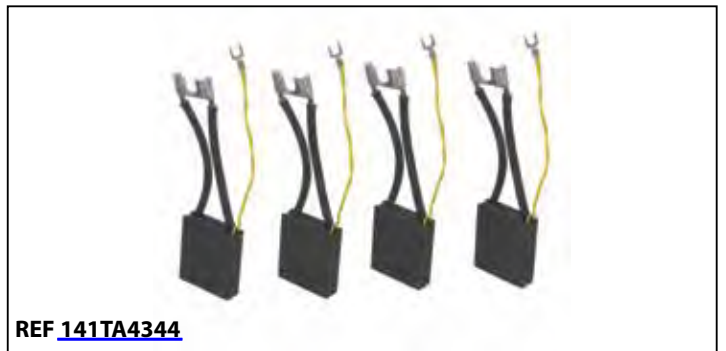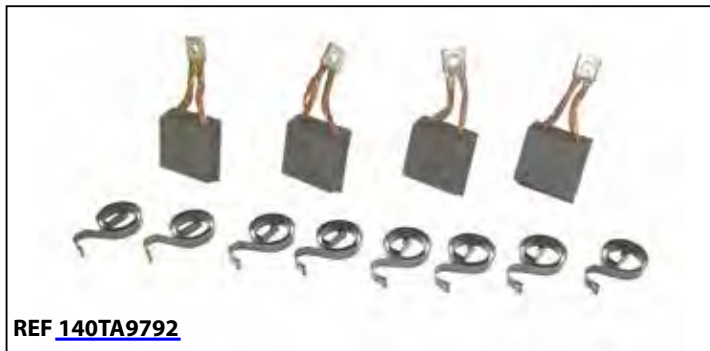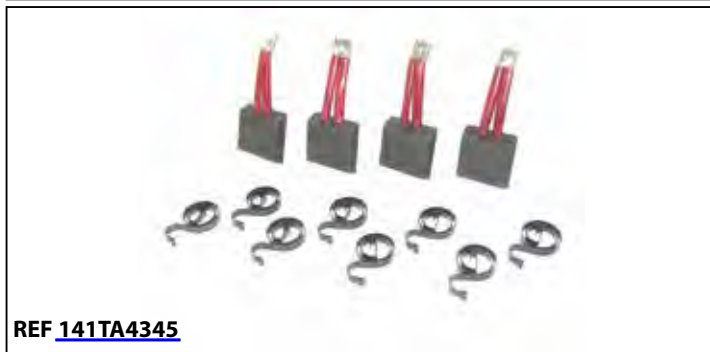


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **MITSUBISHI-CATERPILLAR**

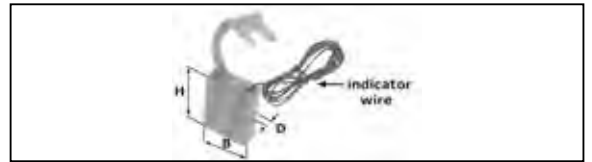


Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	12,5	40,0	45,5		141TA4337
	12,5	40,0	45,5	yes	141TA4338
	12,5	40,0	46,0	yes	121TA2271
	12,5	40,0	46,0		140TA9794
	12,5	47,5	41,5		140TA9796
	12,5	53,5	44,5		141TA4350
	15,5	63,5	45,0	yes	140TA9798
	16,0	24,5	33,0		141TA4351



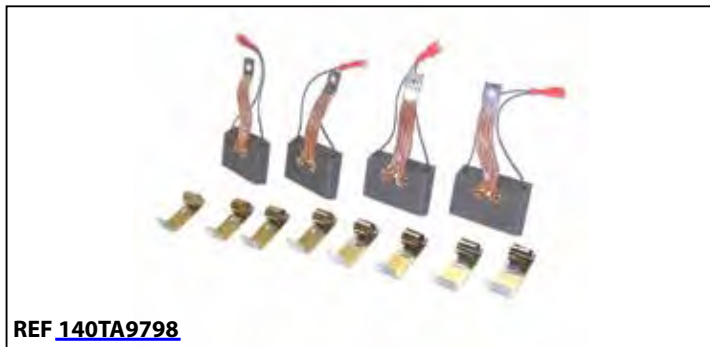


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **MITSUBISHI-CATERPILLAR**

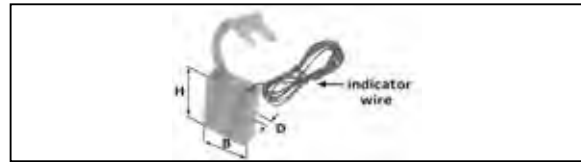

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	16,0	31,5	33,0		121TA2789
	16,0	31,5	33,0		141TA4352
	16,0	31,5	33,0		141TA4354
	16,0	31,5	33,0		141TA4355
	16,0	32,0	30,5		121TA2790
	16,0	65,0	45,5		141TA4353
	17,0	53,5	44,5	yes	140TA9797
	20,0	32,0	32,0		141TA4356

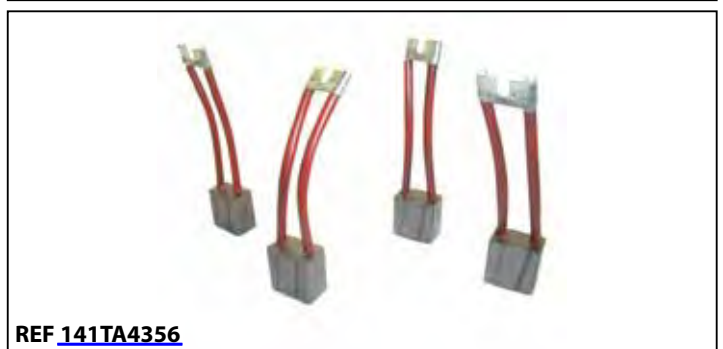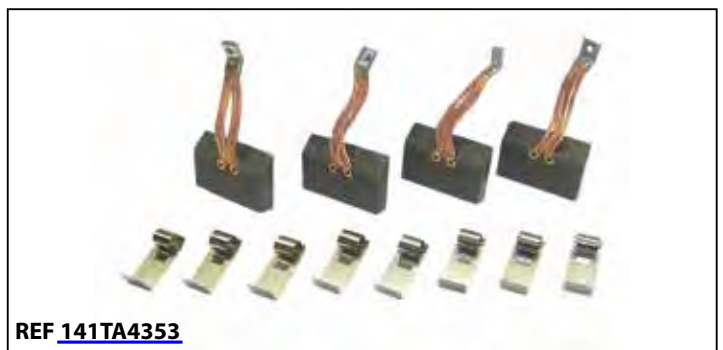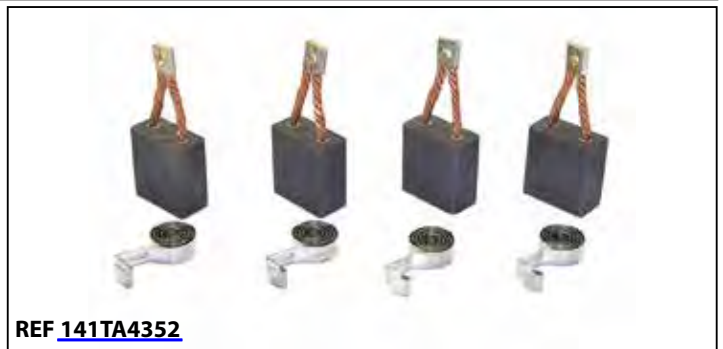


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **MITSUBISHI-CATERPILLAR**




Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	6,5	12,5	22,0		141TA4357
	7,0	22,0	19,5		141TA4358
	7,0	22,0	19,5		141TA4359
	7,0	22,0	20,0		141TA4360
	7,0	22,0	20,0		141TA4361
	8,5	16,0	24,0		141TA4362
	9,0	13,0	25,5		140TA9800
	9,0	13,0	25,5		141TA4363


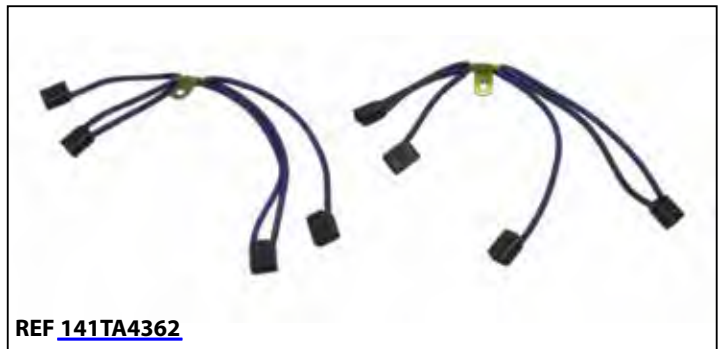


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **MITSUBISHI-CATERPILLAR**

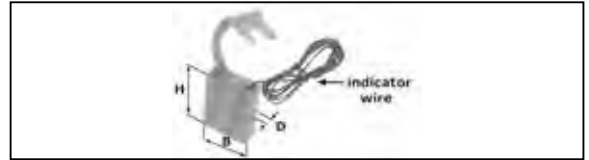

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	9,5	19,0	22,0		141TA4364
	10,0	20,0	26,0		141TA4365
	10,0	25,0	31,5	yes	141TA4366
	10,0	25,0	32,0	yes	121TA2791
	10,0	25,0	33,0		141TA4368
	10,0	25,5	35,0		141TA4369
	10,0	32,0	32,5	yes	141TA4367
	10,5	25,5	35,0		141TA4370

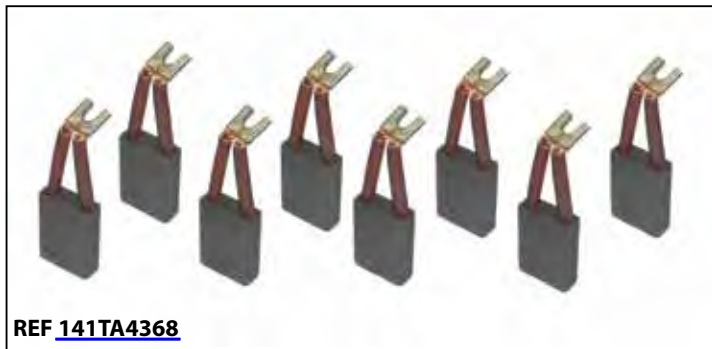
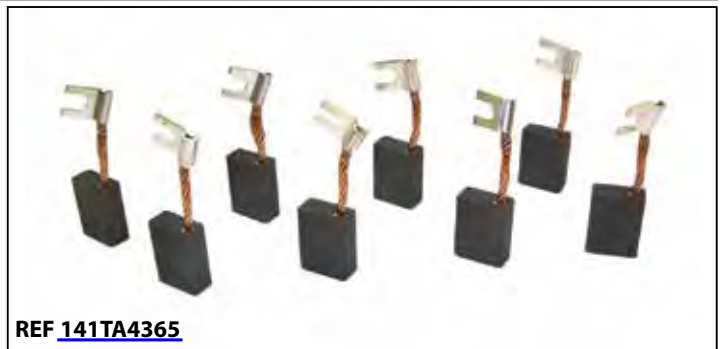


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **MITSUBISHI-CATERPILLAR**




Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	12,5	16,0	25,0		141TA4373
	12,5	16,0	28,5		141TA4384
	12,5	16,0	35,0		141TA4385
	12,5	20,0	25,0		141TA4371
	12,5	20,0	32,0		141TA4381
	12,5	20,0	32,0		141TA4382
	12,5	25,0	32,0	yes	141TA4375
	12,5	25,0	35,5	yes	141TA4374

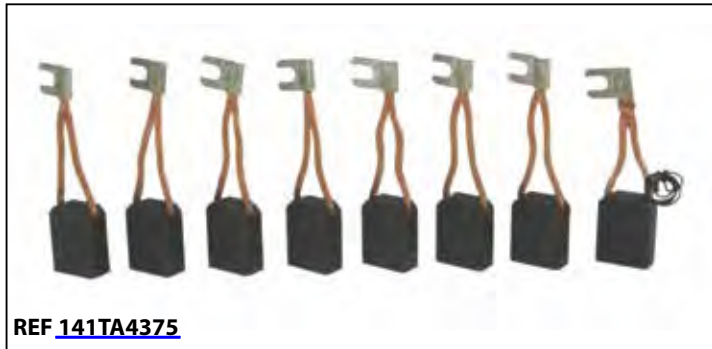
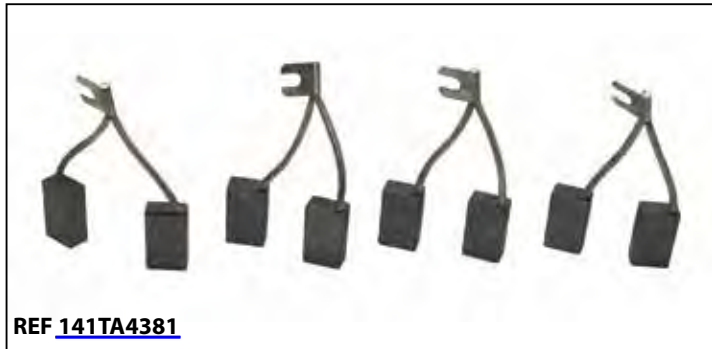


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **MITSUBISHI-CATERPILLAR**

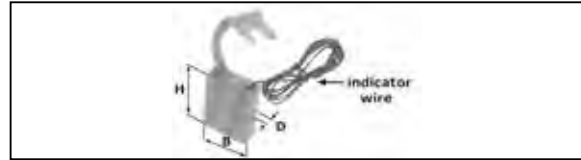

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	12,5	25,0	44,5		141TA4372
	12,5	25,0	45,0	yes	141TA4376
	12,5	25,0	45,5	yes	141TA4377
	12,5	25,0	46,0	yes	140TA9815
	12,5	28,5	38,5		141TA4386
	12,5	28,5	38,5		141TA4387
	12,5	32,0	35,0		141TA4383
	12,5	32,0	40,0		141TA4378

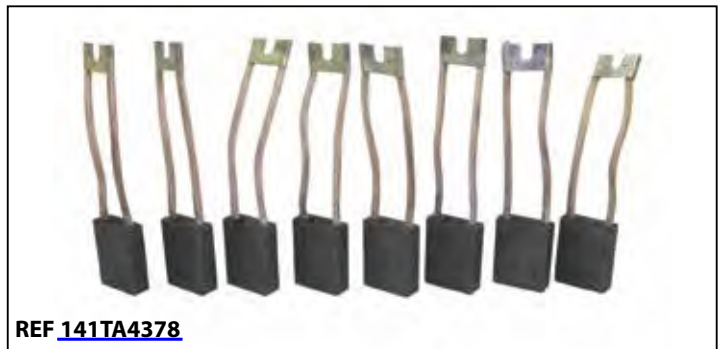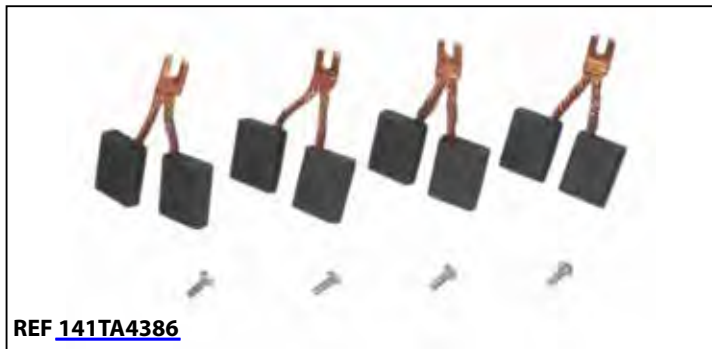


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **MITSUBISHI-CATERPILLAR**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	12,5	32,0	41,0		141TA4388
	12,5	32,0	45,5		141TA4379
	12,5	32,0	45,5	yes	121TA2285
	12,5	32,0	46,0		141TA4380
	14,0	25,0	35,5		141TA4393
	14,0	25,5	32,0		141TA4396
	14,0	25,5	32,0		141TA4397
	14,0	25,5	35,0		141TA4395

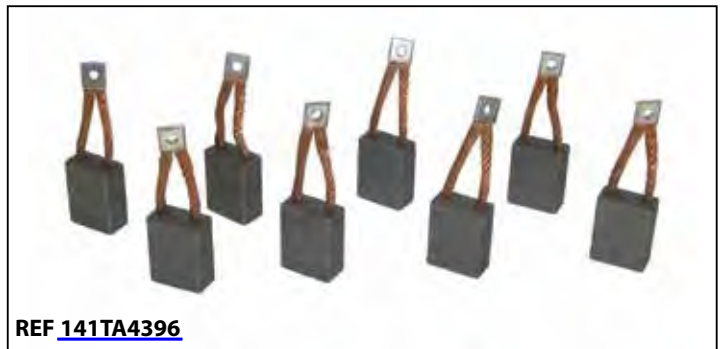

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.


BRUSHKITS




For all our latest catalogue updates and company info: www.tvh.com

BRUSH KITS

used for: **MITSUBISHI-CATERPILLAR**

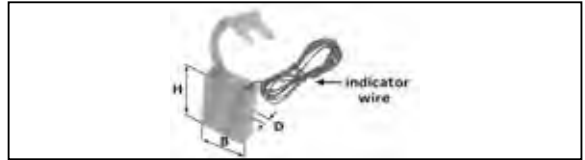


Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	14,0	25,5	35,5		141TA4389
	14,0	25,5	35,5		141TA4392
	14,0	25,5	37,5		141TA4394
	14,0	25,5	39,0		141TA4390
	14,0	25,5	39,0		140TA9813
	14,0	25,5	42,0		121TA2793
	14,0	25,5	42,5		121TA2792
	14,0	25,5	47,0		141TA4391





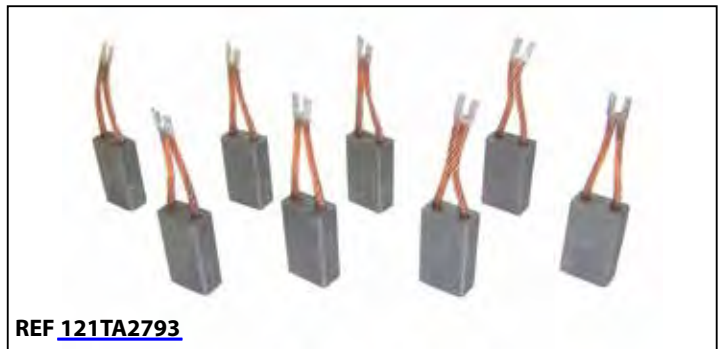


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **MITSUBISHI-CATERPILLAR**

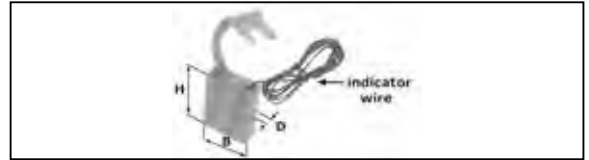


Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	16,0	16,0	25,5		141TA4398
	16,0	24,5	33,0		141TA4399
	16,0	24,5	33,5		141TA4404
	16,0	25,0	32,0		141TA4405
	16,0	28,0	45,5	yes	140TA9820
	16,0	28,5	44,5		141TA4400
	16,0	28,5	45,0		141TA4401
	16,0	28,5	45,0	yes	141TA4402

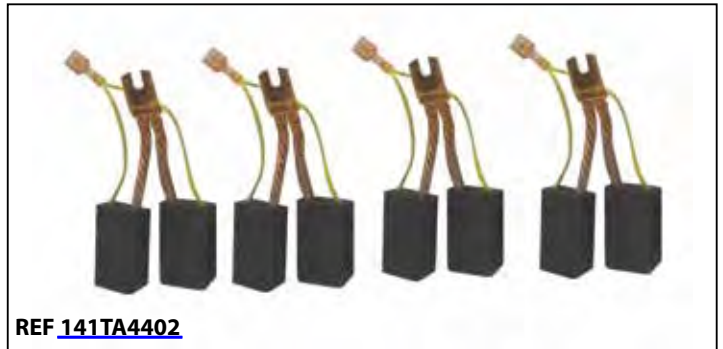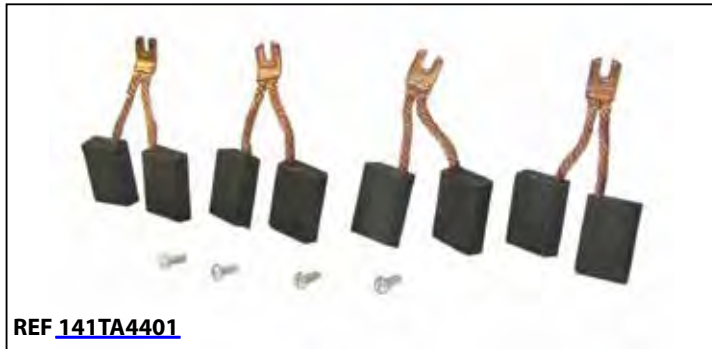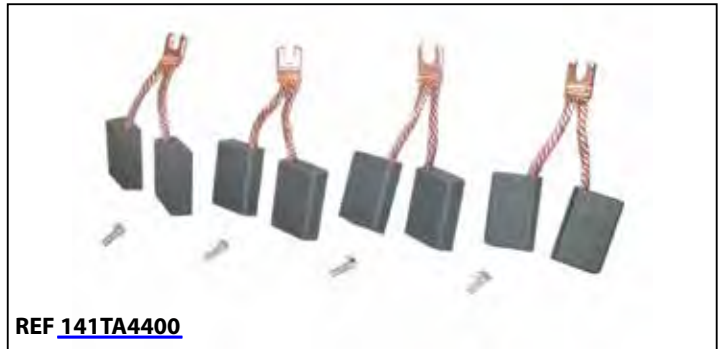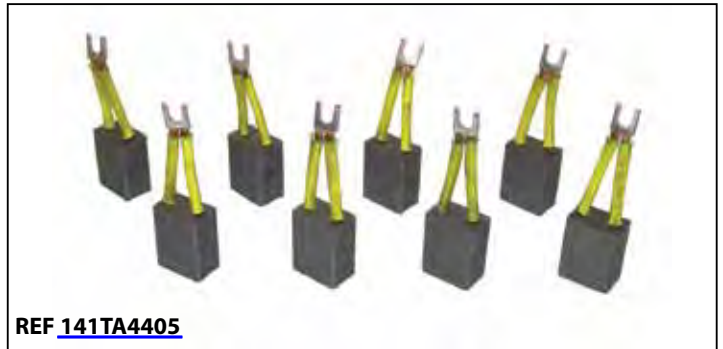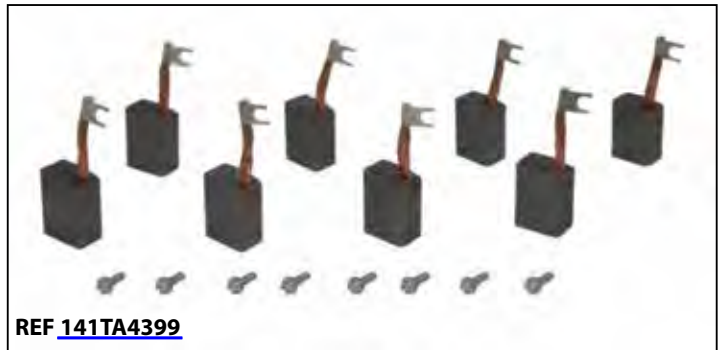


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **MITSUBISHI-CATERPILLAR**

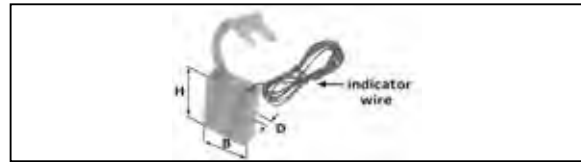


Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	16,0	31,5	38,5		140TA9821
	16,0	31,5	44,0		141TA4406
	16,0	31,5	45,0		141TA4403
	16,0	32,0	36,0		141TA4407
	16,0	32,0	42,0		141TA4408
	19,0	28,5	51,5		141TA4409
	19,0	31,5	41,5		141TA4410
	20,0	20,0	32,0		141TA4412

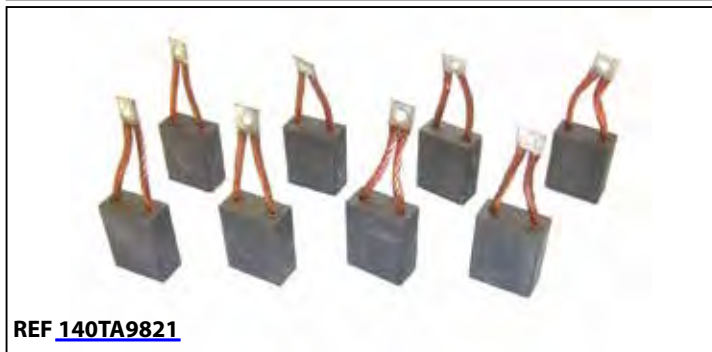


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **MITSUBISHI-CATERPILLAR**

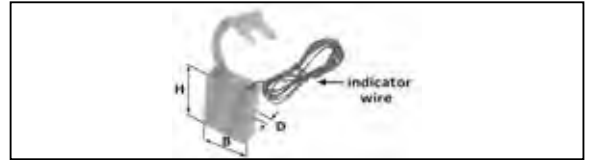

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	20,0	32,0	40,0		141TA4411

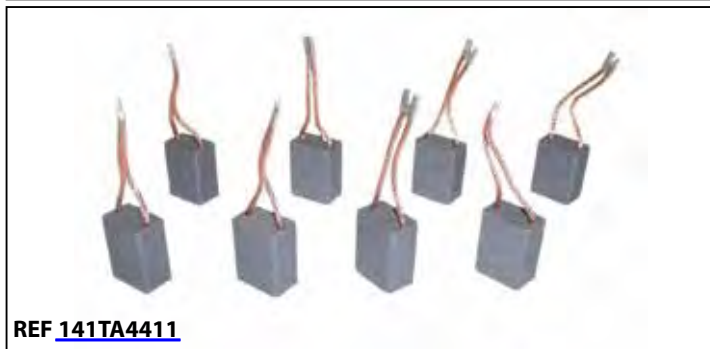

used for: **MORA**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	12,5	20,0	30,0		140TA5488



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **NICHIYU-NYK**

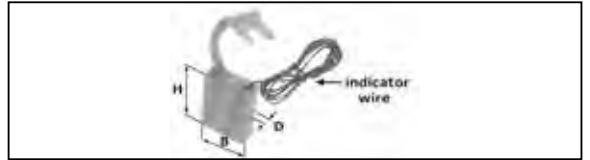


Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	6,0	10,0	14,5		140TA5489
	7,0	11,0	21,0		140TA5490
	8,0	14,0	19,0		122TA4804
	8,0	16,0	25,0		122TA4805
	8,0	22,0	20,0		122TA4806
	8,0	22,5	23,0		140TA5491
	9,0	18,5	20,0		140TA5492
	9,0	19,0	20,0		140TA5493
	9,0	20,0	23,0		122TA4808
	9,0	25,0	19,5		140TA5494
	9,0	25,0	22,5		140TA5495
	9,0	25,0	23,0		122TA4809



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **NICHIYU-NYK**

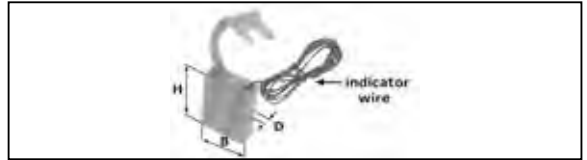


Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	12,0	39,5	25,5		140TA5496
	12,5	25,0	33,0		140TA5497
	12,5	30,0	25,0		140TA5498
	12,5	31,5	25,0		140TA5499
	12,5	40,0	25,5		122TA4811
	16,0	20,0	26,0		140TA5500
	16,0	25,0	28,0		122TA4812
	16,0	25,0	32,0		140TA5501
E4	8,0	20,0	22,5		122TA4814
	8,0	28,0	30,5		140TA5503
	8,0	30,0	25,0		140TA5504



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.


used for: **NICHIYU-NYK**

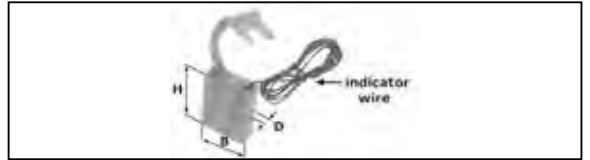

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	8,0	30,0	25,0		140TA5505
	9,0	28,0	21,0		140TA5506
	10,0	20,0	20,0		122TA4816
	12,5	40,0	25,5		122TA4817
	16,0	25,0	32,0		122TA4821
	16,0	25,0	32,0		122TA4820
	16,0	25,5	30,0		122TA4818
	16,0	30,0	33,0		122TA4819
M2	9,0	19,0	20,0		140TA5507



used for: **NICHIYU-NYK**

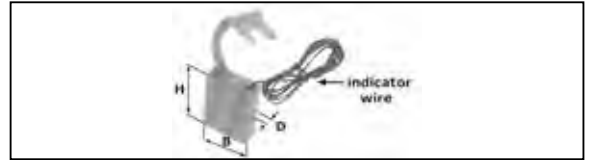

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	9,5	16,0	28,5		140TA9831



used for: **NISSAN**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E1	6,5	19,0	18,0		140TA5508
	7,0	22,5	44,0		140TA5509
E2	5,0	6,0	12,0		122TA4826
	5,0	7,0	15,5		122TA4825
	5,0	7,0	15,5		122TA4824
	5,0	7,0	17,0		140TA5510
	5,0	8,0	23,0		140TA5511
	5,0	8,0	26,0		140TA5512
	6,0	7,0	15,0		140TA5513
	6,0	7,0	15,0		140TA5514
	6,0	7,0	15,0		140TA5515
	6,0	7,0	16,0		140TA5516



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **NISSAN**

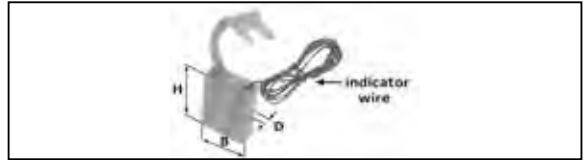


Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	6,0	7,0	16,5		140TA5517
	6,0	7,0	18,0		140TA5518
	6,0	7,0	20,0		122TA4828
	6,0	7,0	20,0		122TA4827
	6,0	7,0	23,5		140TA5519
	6,0	8,0	19,0		140TA5520
	6,0	13,0	18,0		122TA4829
	6,0	16,0	14,5		122TA4830
	6,5	12,0	18,0		140TA5521
	6,5	21,0	25,0		122TA4832
	7,0	10,0	17,0		140TA5522
	7,0	10,0	18,0		122TA4834



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **NISSAN**

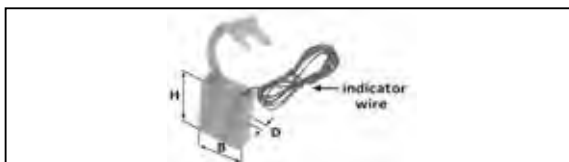


Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	7,0	11,0	19,0		140TA5523
	7,0	11,0	19,0		140TA5524
	7,0	12,0	16,0		140TA5525
	7,0	12,0	16,5		140TA5526
	7,0	14,0	16,0		122TA4837
	7,0	14,0	16,0		122TA4836
	7,0	19,0	16,0		122TA4839
	7,0	19,0	16,0		122TA4840
	7,0	19,0	16,0		122TA4841
	7,5	20,0	22,5		122TA4842
	8,0	14,0	19,0		122TA4847
	8,0	14,0	22,0		122TA4848



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **NISSAN**

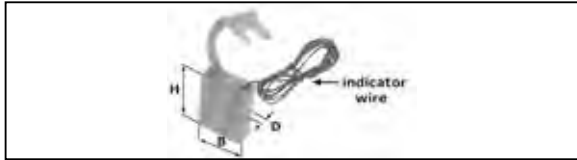

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	8,0	14,0	22,0		122TA4844
	8,0	24,0	17,5		140TA5527
	8,0	24,0	18,0		122TA4843
	8,0	25,0	17,0		122TA4845
	8,0	25,0	17,0		122TA4846
	8,0	25,0	19,5		122TA4849
	8,0	25,0	20,0		122TA4850
	8,0	25,0	20,0		140TA5528
	8,0	30,0	20,0		140TA5529
	9,0	19,0	22,5		122TA4851
	9,0	19,5	20,0		140TA5530
	9,0	19,5	20,0		140TA5531



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **NISSAN**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	9,0	25,0	23,0		122TA4852
	9,0	25,0	23,0		122TA4853
	9,0	30,0	23,0		140TA5532
	9,5	20,5	30,0		140TA5533
	10,0	12,0	23,0		140TA5534
	10,0	12,5	22,5		122TA4855
	10,0	12,5	22,5	yes	122TA4854
	10,0	20,0	20,0		122TA4856
	10,0	20,0	20,5		122TA4857
	12,5	29,5	27,0		140TA5535
	12,5	31,5	32,0		122TA4858
	12,5	40,0	34,0	yes	140TA5536



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **NISSAN**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	14,0	40,0	32,5		122TA4859
	15,0	40,0	28,0	yes	140TA5537
	15,0	40,0	35,0	yes	140TA5538
	16,0	18,0	29,0		140TA5539
	16,0	25,0	32,0		140TA5540
	17,0	40,0	30,0	yes	140TA5541
E3	10,0	32,0	31,0	yes	140TA5542
	15,0	40,0	28,0		122TA4862
	15,0	40,0	28,0		140TA5543
	15,0	40,0	28,0		122TA4863
	15,0	40,0	35,0		122TA4861
E4	6,5	19,0	16,5		140TA5544



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **NISSAN**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	6,5	19,0	17,0		140TA5545
	7,0	16,0	16,0		140TA5546
	7,0	16,0	16,0		122TA4864
	9,0	28,0	21,0		140TA5547
	10,0	32,0	31,0		122TA4860
	12,0	28,0	25,0		140TA5548
	12,0	32,0	28,0		140TA5549
	12,5	20,0	28,5		122TA4866
	12,5	32,0	28,5		122TA4868
	12,5	32,0	32,0		122TA4870
	12,5	32,0	32,0	yes	122TA4869
	12,5	32,0	36,0		140TA5550



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **NISSAN**

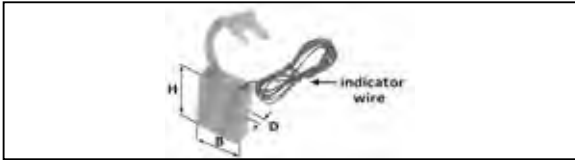

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	12,5	40,0	27,5		122TA4872
	12,5	40,0	34,0		122TA4871
	14,0	18,0	26,0		122TA4873
	14,0	36,0	27,0		122TA4874
	14,0	51,0	36,0		140TA5551
	14,5	30,0	21,5		122TA4875
	15,0	30,0	25,0		140TA5552
	15,0	30,0	26,0		122TA4880
	15,0	40,0	30,5		122TA4877
	15,0	40,0	35,0		122TA4879
	15,0	40,0	35,0		122TA4878
	15,0	40,0	35,0		122TA4876



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **NISSAN**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	15,5	28,0	30,5		122TA4881
	15,5	28,0	31,0		122TA4882
	16,0	20,0	32,5		122TA4884
	16,0	20,0	33,0		122TA4885
	16,0	24,5	33,0		140TA5553
	16,0	25,0	32,5		122TA4886
	16,0	28,0	30,5		140TA5554
	16,0	28,0	30,5		122TA4883
	16,0	64,0	44,5		140TA5555
M2	17,0	40,0	30,5		122TA4887
	4,0	12,0	16,5		140TA5556
	4,5	12,0	17,5		122TA4888



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **NISSAN**

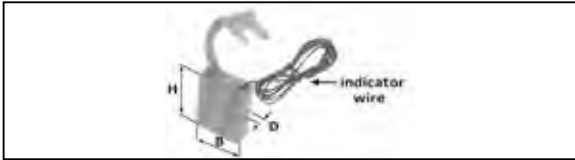


Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
M2	7,0	25,5	11,5		122TA4889
	12,0	20,0	32,0		122TA4890
	12,5	20,0	33,0		122TA4891
	12,5	28,5	36,0	yes	140TA5557
	12,5	32,0	33,0		140TA5558
	13,0	28,5	36,0	yes	140TA5559
	13,0	28,5	38,0	yes	122TA4892
	14,5	30,0	36,0		140TA5560
	15,0	30,0	34,0	yes	140TA5561
	15,0	30,0	35,0		140TA5562
	15,0	30,0	35,5		122TA4894
	15,0	30,0	36,0		122TA4895



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **NISSAN**

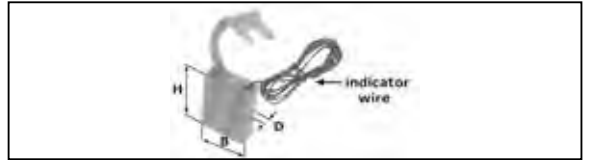

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
M2	16,0	28,5	45,0		122TA4893
	17,0	25,0	31,0		122TA4898
	17,0	25,0	32,5		122TA4896
	17,0	31,0	35,5		122TA4897



used for: **NISSAN**




Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
2	5,0	7,0	21,0		140TA9833
	5,0	8,0	23,5		141TA4413
	7,5	22,0	22,0		140TA9835
	8,0	8,0	19,5		140TA9834
	9,0	17,5	17,0		140TA9840
4	7,0	12,5	20,5		140TA9836
	7,5	18,0	19,0		141TA4414
	8,0	12,5	22,0		140TA9837





Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **NISSAN**

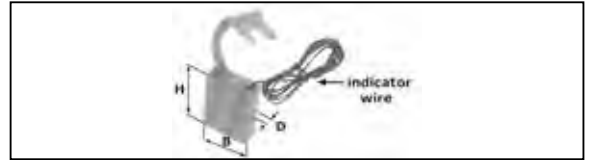


Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	8,0	25,0	20,0		140TA9846
	8,0	27,5	30,5		140TA9850
	8,0	28,0	30,5		140TA9849
	8,5	19,0	16,5		140TA9842
	9,0	13,0	25,5		140TA9838
	9,0	16,0	17,0		141TA1128
	9,0	17,5	16,0		140TA9839
	9,0	20,0	29,0		140TA9843

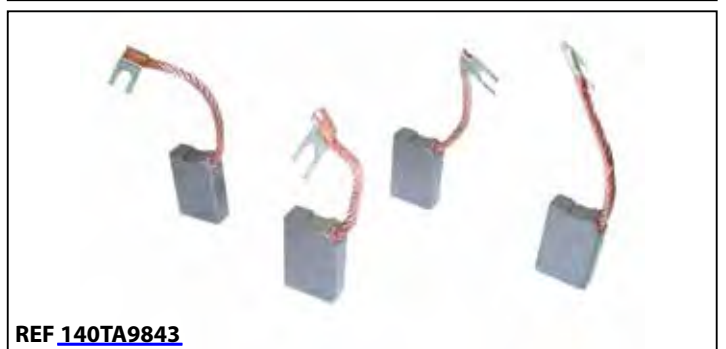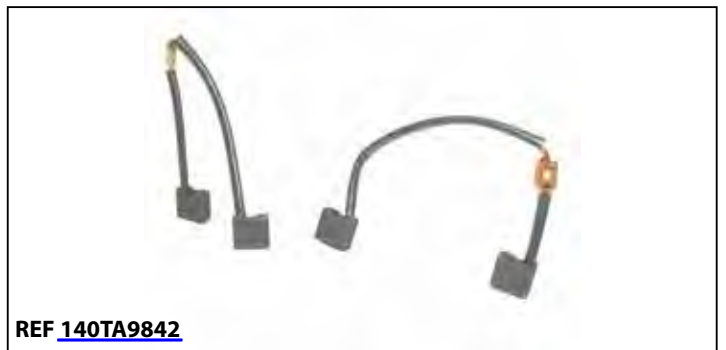

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **NISSAN**

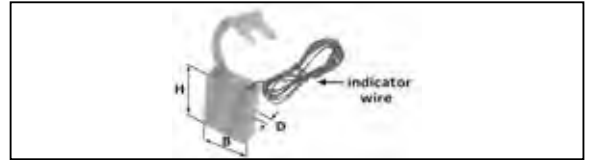

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	9,0	25,5	27,0		140TA9847
	9,0	30,0	28,0		141TA1129
	9,5	20,5	25,5		140TA9844
	9,5	20,5	29,0		140TA9845
	10,0	25,5	35,0		140TA9848
	10,0	28,0	30,0	yes	141TA4415
	10,0	50,0	30,0	yes	121TA2795
	12,5	32,0	35,5		140TA9852







Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **NISSAN**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	12,5	32,0	38,0		140TA9853
	12,5	32,0	38,0		141TA4416
	15,5	63,5	45,0	yes	140TA9854
	16,0	31,5	33,0		140TA9851
	16,0	65,0	45,5		140TA9855
8	7,0	22,0	20,0		140TA9859
	10,0	20,0	25,0	yes	140TA9856
	10,0	20,0	29,0		141TA1130

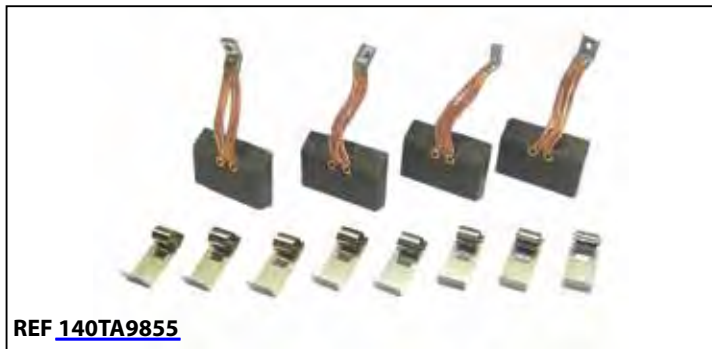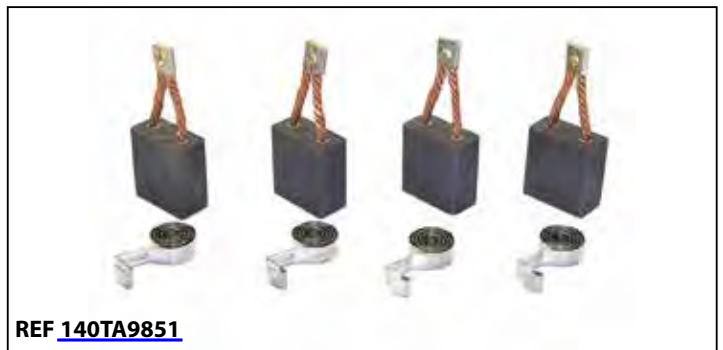
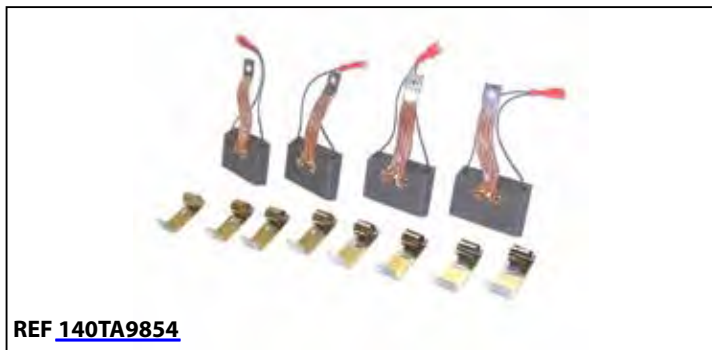
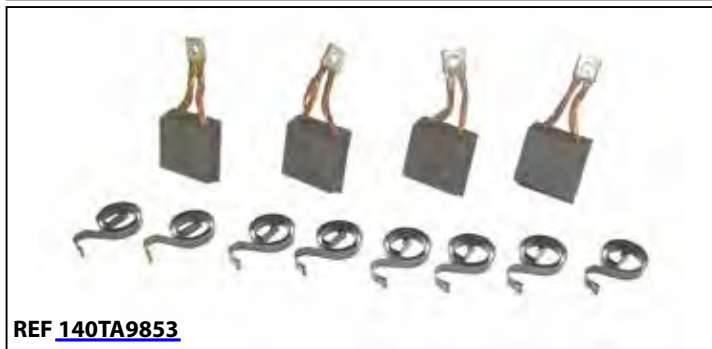


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.


used for: **NISSAN**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	12,5	20,0	28,0	yes	140TA9858
	12,5	20,0	28,0		140TA9857
	12,5	25,0	32,0	yes	140TA9860
	12,5	28,5	38,5		141TA4417
	14,0	25,5	35,5		140TA9861
	16,0	28,5	44,5		140TA9862

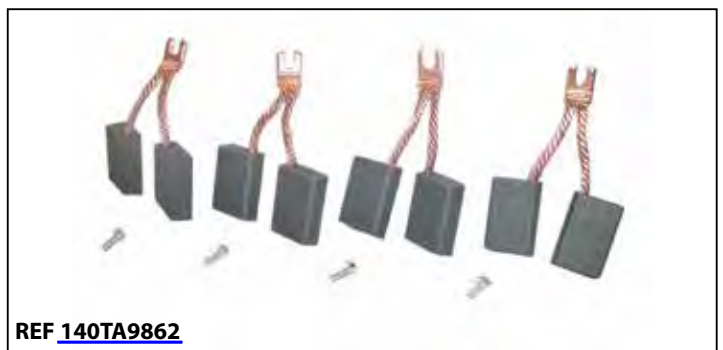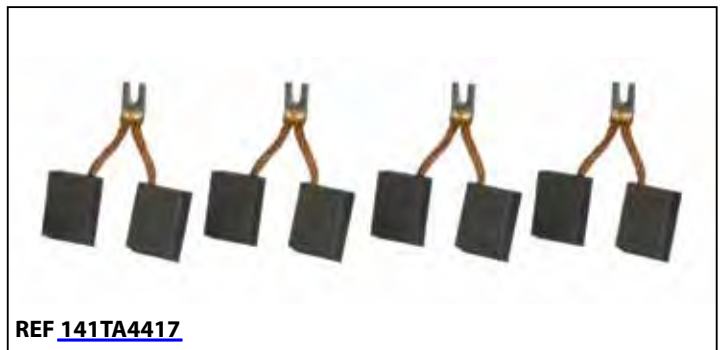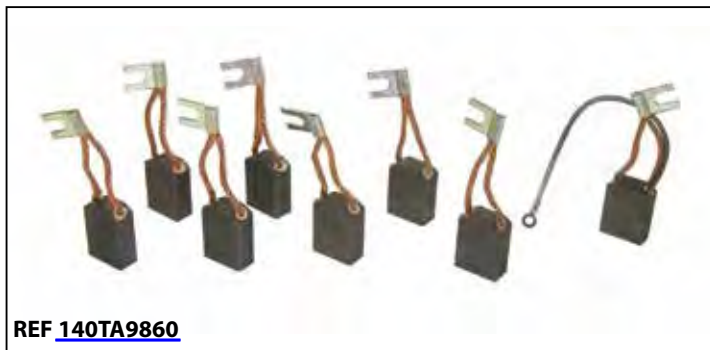


used for: **O&K**

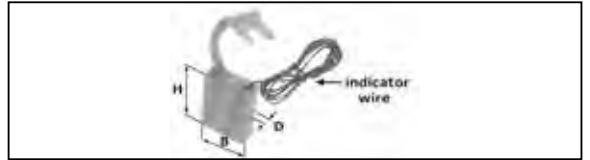

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	8,0	12,5	22,0		122TA4899
E4	8,0	32,0	32,0		122TA4900
	12,0	32,0	40,0		122TA4901
M3	10,0	16,0	31,0		122TA4902



used for: **OM-PIMESPO**

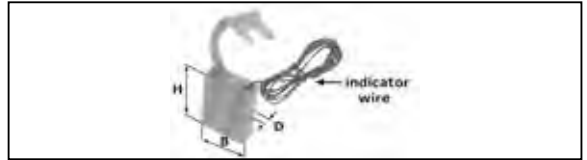

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	5,0	7,0	15,0		140TA5563
	5,0	7,0	15,5		140TA5564
	5,0	7,0	15,5		140TA5565
	5,0	8,0	18,5		140TA5566
	5,0	8,0	23,0		140TA5567
	6,0	7,0	20,0		140TA5568
	6,0	10,0	22,0		140TA5569
	6,0	16,0	22,0		140TA5570
	6,0	16,0	22,0	yes	140TA5571
	7,0	11,0	19,0		140TA5572
	7,0	12,0	16,5		140TA5573
	7,0	14,0	16,0		140TA5574



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **OM-PIMESPO**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	7,0	19,0	15,5		140TA5575
	7,0	22,0	20,0		140TA5576
	7,0	25,0	16,0		140TA5577
	7,0	25,0	16,0		140TA5578
	8,0	12,0	22,0		140TA5579
	8,0	12,5	22,0		140TA5580
	8,0	12,5	22,0		140TA5581
	8,0	12,5	22,0		140TA5582
	8,0	12,5	22,0	yes	122TA4213
	8,0	12,5	22,0	yes	140TA5583
	8,0	12,5	22,0	yes	140TA5584
	8,0	12,5	28,0		122TA6025



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **OM-PIMESPO**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	8,0	14,0	19,0		140TA5585
	8,0	14,0	19,0		140TA5586
	8,0	16,0	22,0		140TA5587
	8,0	16,0	22,0	yes	140TA5588
	8,0	16,0	22,5		140TA5589
	8,0	24,5	21,0		140TA5590
	8,0	25,0	19,5		140TA5591
	9,0	13,0	25,5		122TA4216
	10,0	20,0	20,0		140TA5592
	10,0	25,0	20,5	yes	140TA5593
	10,0	25,0	26,5		140TA5594
	10,0	25,0	32,0	yes	140TA5595



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **OM-PIMESPO**

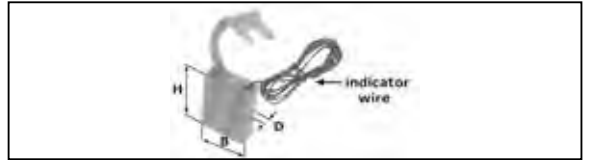


Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	10,0	27,0	30,5		140TA5596
	10,0	40,0	22,5	yes	140TA5597
	11,0	30,0	33,0		140TA5598
E3	6,0	28,0	30,5		140TA5599
	10,0	35,5	30,5		140TA5600
	11,0	40,0	33,5		140TA5601
	11,0	56,0	33,0		140TA5602
	11,0	60,0	33,0		140TA5603
	12,0	20,0	30,0		122TA4221
	12,0	20,0	30,5		122TA7213
	16,0	56,0	33,0		140TA5604
E4	6,0	22,0	25,5		122TA4223



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **OM-PIMESPO**

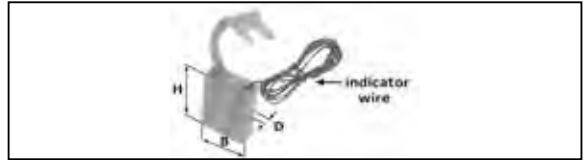

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	6,0	28,0	30,0		122TA4222
	8,0	28,0	30,0		140TA5605
	8,0	28,0	30,5		140TA5606
	9,0	20,0	22,0		140TA5607
	10,0	22,0	28,0		122TA4224
	10,0	26,0	30,5		122TA4225
	10,0	26,0	30,5		140TA5608
	10,0	26,0	31,0		140TA5609
	10,0	32,0	31,0		140TA5610
	10,0	32,0	40,5		140TA5611
	10,0	40,0	32,0		140TA5612
	10,0	40,0	32,5		140TA5613



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **OM-PIMESPO**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	12,0	32,0	32,0		140TA5614
	12,0	32,0	32,0	yes	140TA5615
	12,0	32,0	41,0		140TA5616
	12,0	48,0	31,5		140TA5617
	12,0	48,0	32,0	yes	140TA5618
	12,5	25,0	32,0		140TA5619
	12,5	32,0	32,0		140TA5620
	12,5	32,0	32,0		140TA5621
	12,5	32,0	32,0	yes	140TA5622
	12,5	32,0	32,5		140TA5623
	12,5	32,0	32,5	yes	140TA5624
	12,5	32,0	40,5		122TA4229



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.


used for: **OM-PIMESPO**

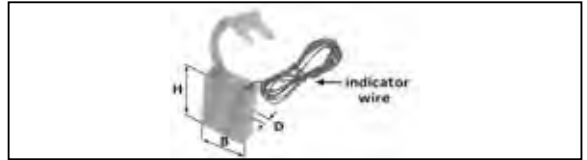

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	12,5	40,0	40,0		122TA4228
	14,0	40,0	33,5		140TA5625
	14,0	40,0	33,5		140TA5626
	16,0	25,0	45,0		140TA5627
	16,0	32,0	32,0		140TA5628
M2	14,0	28,0	33,0		140TA5629



used for: **OM-PIMESPO**

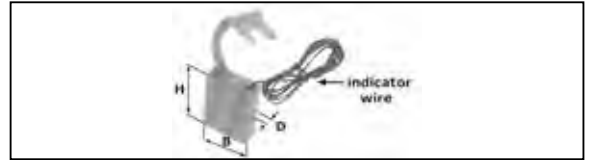

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
2	10,0	20,0	20,0		141TA4418
4	6,0	22,0	25,0		141TA4419
	6,0	22,0	25,5		141TA4422
	6,0	27,5	30,0		141TA4420
	6,0	27,5	30,5		141TA4421
	6,0	28,0	30,5		141TA4423
	7,0	12,5	20,5		141TA4424
	8,0	20,0	25,5		141TA4430



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **OM-PIMESPO**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	8,0	27,5	30,5		141TA4427
	8,0	28,0	30,5		141TA4425
	8,0	28,0	31,0		141TA4431
	8,0	28,0	31,0		140TA9880
	8,0	28,0	32,0		141TA4426
	8,0	28,0	32,0		141TA4428
	8,0	28,0	32,5		141TA4429
	9,0	13,0	25,5		141TA4434





Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **OM-PIMESPO**




Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	9,0	16,0	26,0		141TA4435
	9,0	19,0	14,0		121TA2447
	9,0	19,5	16,0		141TA4433
	9,0	26,0	26,0		141TA4432
	9,5	38,0	22,0		141TA4436
	10,0	25,0	16,5		141TA4437
	10,0	25,0	21,0		121TA2453
	10,0	25,0	23,0		141TA4438


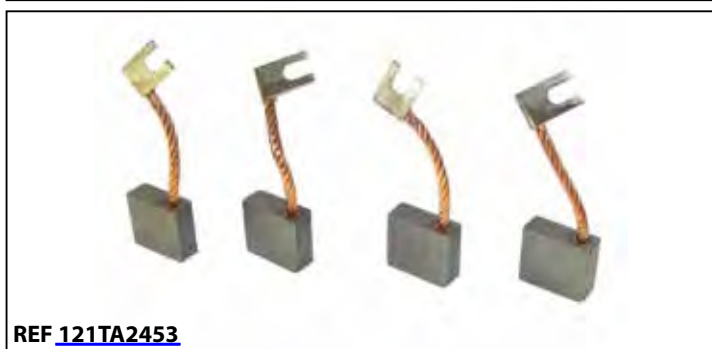
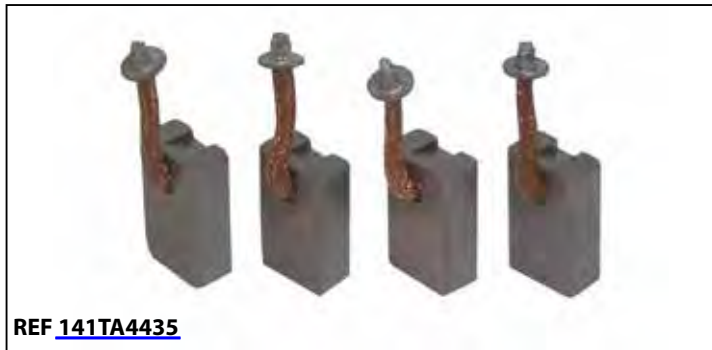


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **OM-PIMESPO**

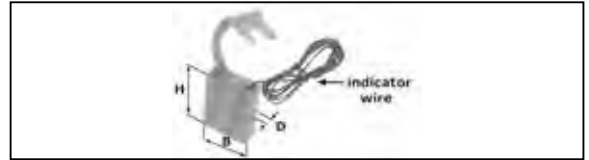

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	10,0	32,0	32,0		141TA4439
	11,0	20,0	24,5		121TA2454
	12,0	20,0	30,0		141TA4440
	12,5	32,0	20,5		141TA4441
	16,0	25,0	45,0		141TA4442
	20,0	10,0	31,0		141TA4443
8	8,0	16,0	20,0		141TA4444
	9,0	13,0	25,0		140TA9889

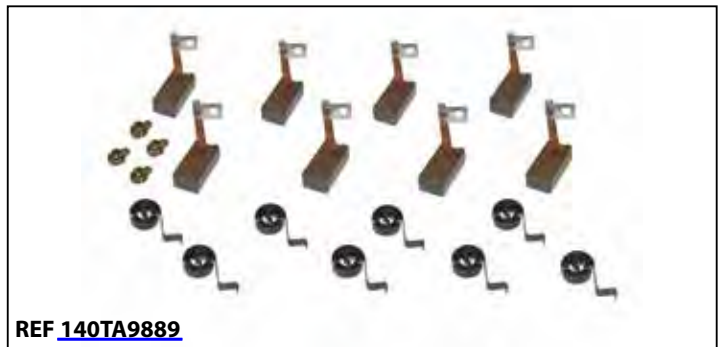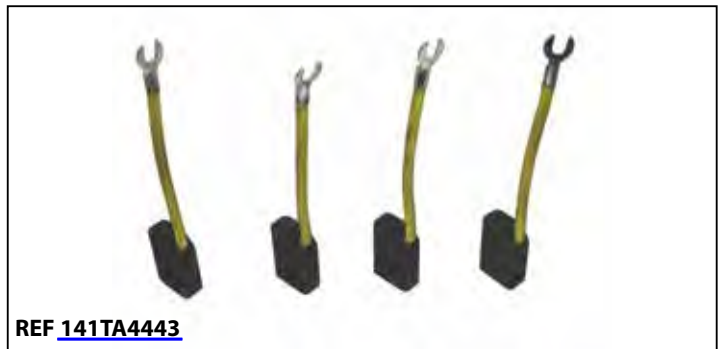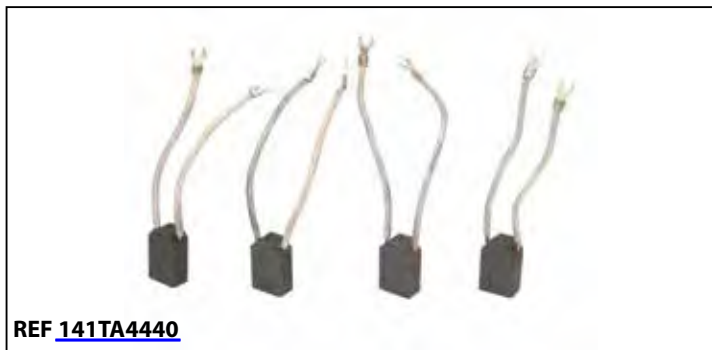

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **OM-PIMESPO**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	9,0	13,0	25,5		141TA4445
	9,5	27,5	30,5		141TA4446
	10,0	24,0	31,0		141TA4448
	10,0	25,0	32,0		121TA2458
	10,0	26,0	30,5		141TA4447
	10,0	26,0	30,5		141TA4450
	10,0	26,0	31,0		141TA4449
	10,0	28,0	30,0		141TA4451







Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **OM-PIMESPO**




Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	10,0	32,0	32,0	yes	121TA2460
	10,0	32,0	32,5	yes	122TA7310
	12,0	20,0	30,0		141TA4452
	12,5	20,0	32,0	yes	121TA2465
	12,5	25,0	32,0		141TA4453
	12,5	25,0	32,0	yes	141TA4454
	12,5	25,0	32,0	yes	141TA4457
	12,5	32,0	32,0	yes	141TA4455

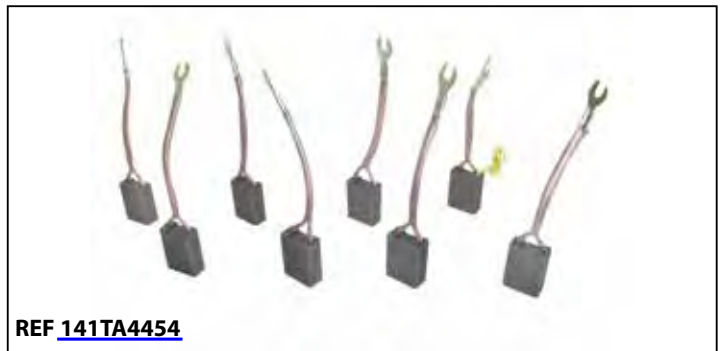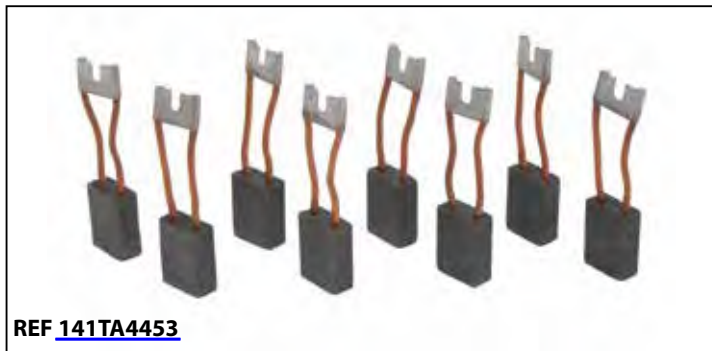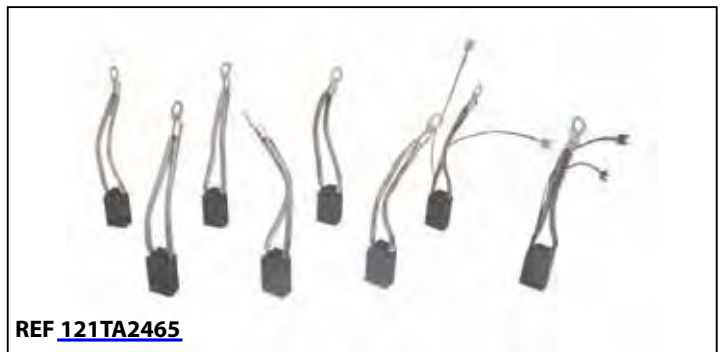
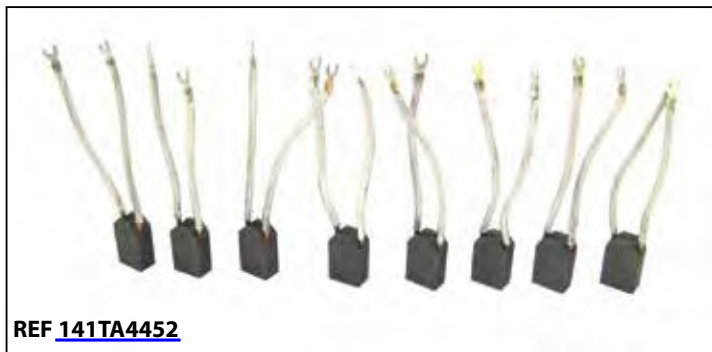


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **OM-PIMESPO**

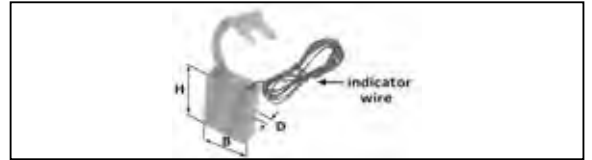

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	12,5	32,0	32,0	yes	141TA4456
	12,5	32,0	32,0	yes	141TA4458
	12,5	32,0	32,0	yes	141TA4459
	12,5	32,0	32,5	yes	121TA2468
	16,0	40,0	30,0		141TA4460
	19,5	24,5	32,5		121TA2471
12	16,0	32,0	40,5	yes	122TA6756

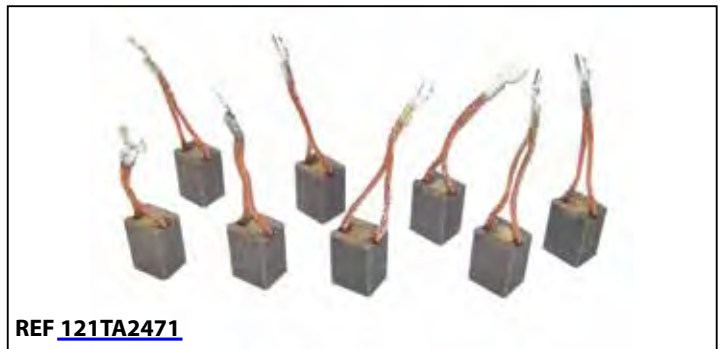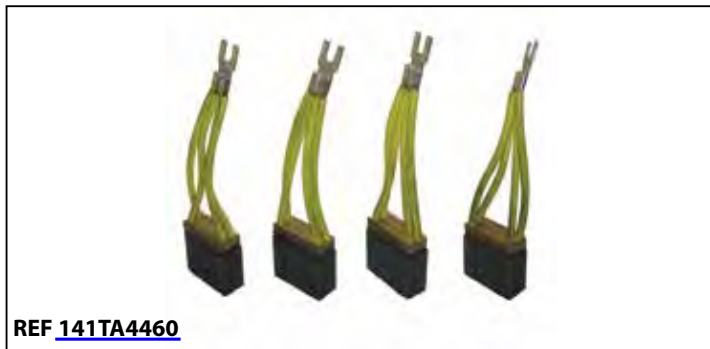

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **OMG**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	9,0	13,0	25,0		140TA5630
	9,0	13,0	26,0		140TA5631
	9,0	13,0	26,0		140TA5632
	9,0	25,0	19,5		140TA5633
	9,0	25,0	22,5		140TA5634
	10,0	12,5	22,0		140TA5635
E3	10,0	20,0	22,5		140TA5637
	10,0	20,0	23,0		140TA5638
	12,0	20,0	30,5		140TA5639
E4	6,0	28,0	30,0		140TA5640
	6,0	28,0	30,0		140TA5641
	8,0	28,0	30,0		140TA5642



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **OMG**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	8,0	28,0	30,0		140TA5643
	8,0	28,0	30,5		140TA5644
	8,0	28,0	30,5		122TA4903
	9,0	16,0	20,0		122TA4904
	10,0	20,0	22,0		140TA5645
	10,0	20,0	26,0		140TA5646
	10,0	26,0	30,0		140TA5647
	10,0	26,0	30,0		140TA5636
	10,0	26,0	31,0		140TA5648
	10,0	28,0	30,5		140TA5649
	10,0	28,0	30,5		140TA5650
	10,0	28,0	30,5		140TA5651



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **OMG**

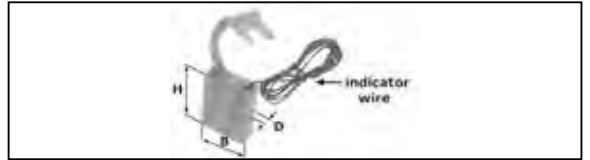


Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	10,0	28,0	31,0		140TA5652
	12,5	36,0	35,0		140TA5653
	12,5	40,0	27,0		140TA5654
	12,5	40,0	27,0		140TA5655




used for: **OMG**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	8,0	19,0	14,5		140TA9906
	9,0	16,0	17,0		141TA4461
	9,0	16,0	17,0		140TA9905
	10,0	25,0	23,5		140TA9907

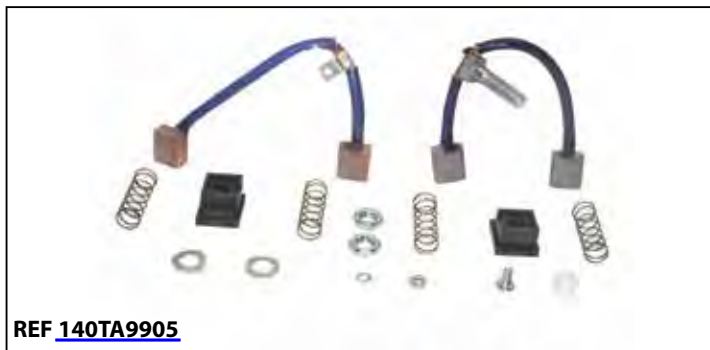

used for: **PATRIA**

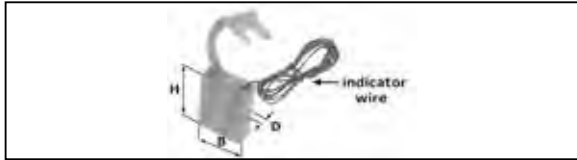

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	5,0	7,0	17,0		122TA4905
	5,0	8,0	23,0		140TA5656
	7,0	10,0	17,0		140TA5657
	7,0	10,0	18,0		140TA5658
	8,0	25,0	17,0		140TA5659
	9,0	19,0	22,5		140TA5660
	9,0	19,5	20,0		140TA5661




used for: **PRAT**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	8,0	22,0	28,5		122TA4906
	9,0	13,0	25,5	yes	122TA4907
	10,0	20,0	20,0	yes	140TA5662
E4	6,0	22,0	25,5		122TA4908
	8,0	28,0	30,5		122TA4909
	8,0	32,0	32,0		122TA4910



used for: **PRAT**

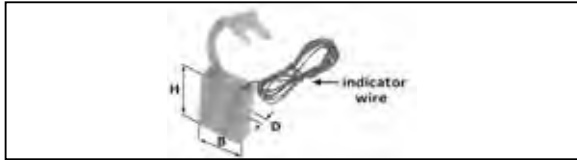


Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	6,0	22,0	25,5		121TA2806
	6,0	22,0	28,0		121TA2805
	6,0	27,5	30,0		121TA2804
	7,0	12,5	20,5		109TA3698
	8,0	20,0	22,0		121TA2807
	8,0	28,0	32,0		141TA4462
	8,5	11,5	16,0		121TA2809
	8,5	19,0	14,5		141TA4463




Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **PRAT**

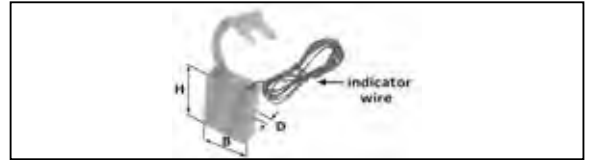


Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	8,5	19,0	16,0		121TA2811
	9,0	13,0	25,5		141TA4464
	9,0	20,0	22,0		121TA2813
	9,0	20,0	28,0		121TA2812
	10,0	20,0	20,0		121TA2815
	10,0	20,0	20,0		140TA9913
	10,0	20,0	25,0	yes	140TA9914
	10,0	20,0	25,5		121TA2817

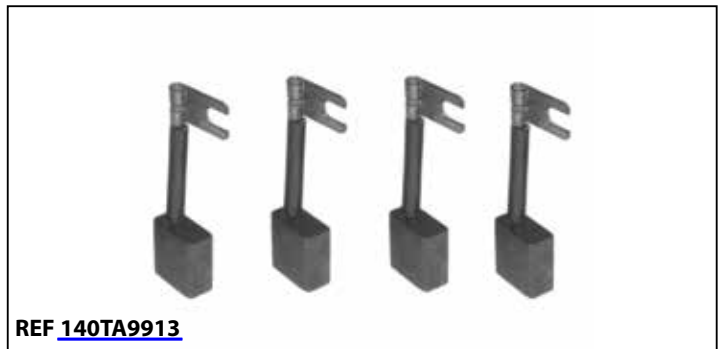

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.


used for: **PRAT**

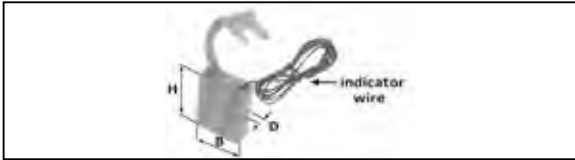

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	10,0	28,0	22,0		121TA2816
	16,0	20,0	32,0		121TA2818



used for: **ROCLA**

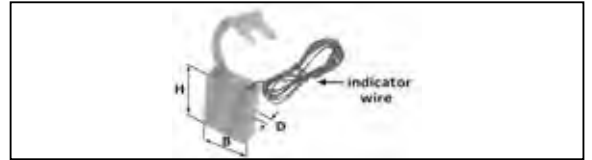


Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	8,0	12,0	22,0		140TA5663
	8,0	12,5	28,0		122TA4911
	9,0	13,0	25,0		122TA4913
	9,0	13,0	25,0		140TA5664
	9,0	20,0	29,0		122TA4914
	10,0	12,0	23,0		140TA5665
	10,0	20,0	20,0		140TA5666
	10,0	28,0	20,0		122TA4915
E3	6,0	28,0	31,0		140TA5667
E4	6,0	22,0	22,5		140TA5668
	8,0	20,0	32,0		140TA5669
	8,0	25,0	23,0		122TA4916



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.


used for: **ROCLA**

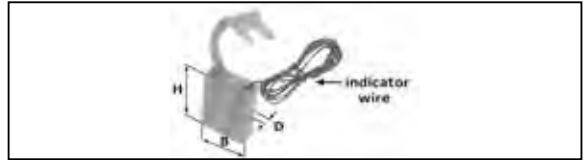


Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	8,0	32,0	25,0		140TA5670
	8,0	32,0	32,0		122TA4917
	9,0	26,0	25,5		140TA5671
	10,0	25,0	25,0		140TA5672
	12,0	20,0	32,0		122TA4919
	12,0	20,0	32,0		122TA4920
	16,0	24,5	33,5		122TA4921



used for: **ROCLA**

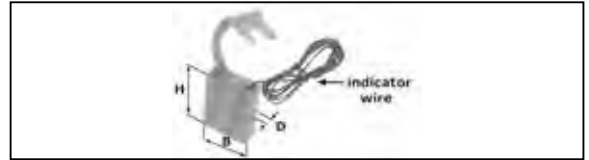

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
2	8,0	8,0	19,5		140TA9915
	8,0	9,5	20,0		121TA2819
	8,0	12,5	22,0		140TA9916
4	7,0	12,5	20,5		141TA4466
	8,0	32,0	25,0		140TA9933
	8,0	32,0	30,0		140TA9934
	9,0	12,5	26,0		140TA9919
	9,0	16,0	17,0		140TA9922

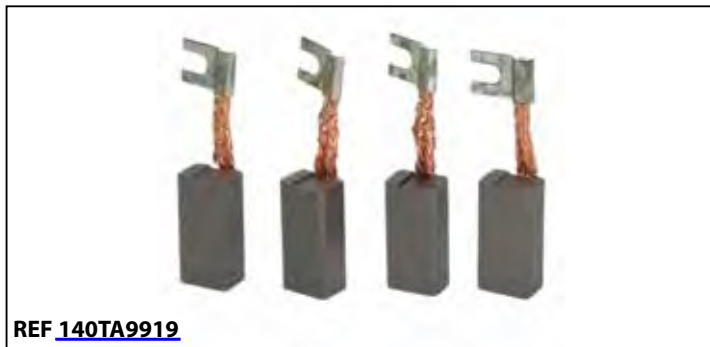

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **ROCLA**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	10,0	12,5	23,0		121TA2823
	10,0	20,0	22,0		121TA2824
	10,0	25,0	23,0		141TA4469
	10,0	25,0	23,0		140TA9927
	10,0	25,0	28,0		140TA9928
	10,0	25,0	28,5		141TA4468
	10,0	28,0	30,0		140TA9930
	10,0	39,5	35,0		140TA9935



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **ROCLA**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	11,0	20,0	25,0		140TA9924
	12,0	20,0	32,0		140TA9925
	16,0	31,5	33,0		121TA2825
	16,0	31,5	33,0		141TA4470
8	10,0	20,0	25,0		140TA9937



used for: **SALEV**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E1	6,5	19,0	16,0		140TA5673
E2	8,0	20,0	32,0		140TA5674
	12,0	20,0	32,0		140TA5675
E3	7,0	18,0	17,0		140TA5676
E4	12,0	20,0	32,0		140TA5677
	12,5	25,0	24,0		122TA4922



used for: **SALEV**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	8,5	17,5	16,0		141TA1133
	8,5	19,0	13,5		141TA1132
	9,0	30,0	29,5		141TA1134
	10,0	24,5	20,5		141TA1135
	10,0	25,0	20,0		141TA4471
	12,0	20,0	32,0		141TA1136
	12,0	32,0	32,0		141TA1138
	12,5	24,5	24,0		141TA1137



REF [141TA1133](#)




REF [141TA1132](#)



REF [141TA1134](#)



REF [141TA1135](#)

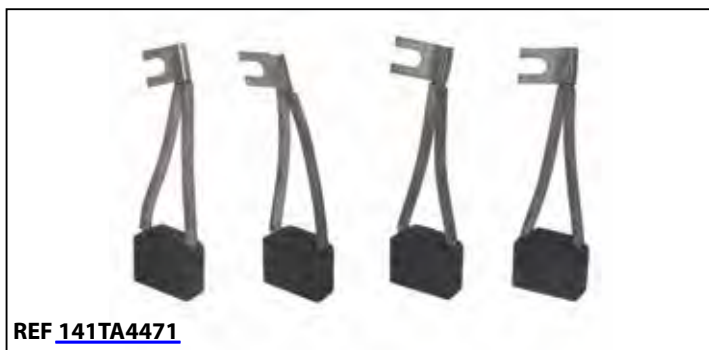

REF [141TA4471](#)



REF [141TA1136](#)



REF [141TA1138](#)



REF [141TA1137](#)

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.


BRUSH KITS



For all our latest catalogue updates and company info: www.tvh.com

BRUSH KITS

used for: **SALEV**

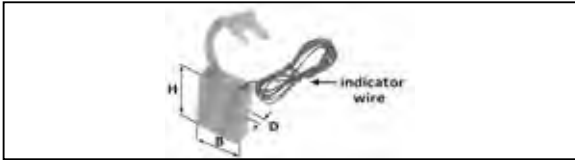

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	12,5	32,0	32,5		141TA1139
8	16,0	31,5	45,0		140TA9938



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **SHINKO**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	7,5	15,0	24,0		122TA4923
	8,0	22,5	23,0		122TA4924
	8,0	22,5	25,5		122TA4925
	9,0	25,0	22,0		140TA5678
	9,0	25,0	23,0		122TA4926
	10,0	16,0	33,0		122TA4927
	12,5	20,0	32,0		122TA4928
	12,5	29,5	27,0		140TA5679
	12,5	31,5	32,0		122TA4930
E3	16,0	55,5	33,0	yes	140TA5680
	16,0	56,0	33,0	yes	140TA5681
	16,0	56,0	33,0		140TA5682



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **SHINKO**

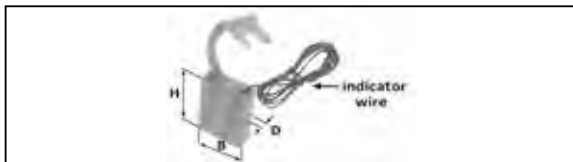

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	8,0	30,0	25,0		140TA5683
	10,0	20,0	20,0		122TA4931
	12,5	20,0	32,0		140TA5684
	14,0	40,0	33,5		122TA4932
M2	12,5	20,0	32,0		140TA5685



used for: **SICHELSCHMIDT**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	8,0	16,0	22,0		140TA5686
	9,0	13,0	25,0		122TA4933
	10,0	20,0	22,0		140TA5687
E4	6,0	22,0	26,5		140TA5688
	8,0	28,0	30,5		122TA4935
	9,0	26,0	25,5		122TA4936
	10,0	25,0	22,0		122TA4937
	10,0	26,0	31,0		122TA4938
M2	12,0	20,0	25,0		122TA4939
M3	8,0	16,0	31,0		140TA5689



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.


used for: **SKYJACK**

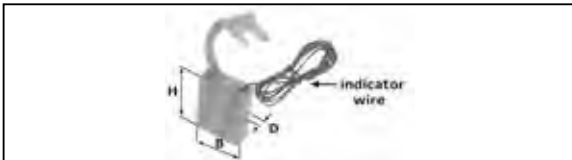

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
M4	16,0	31,5	45,0		140TA5690



used for: **SKYJACK**

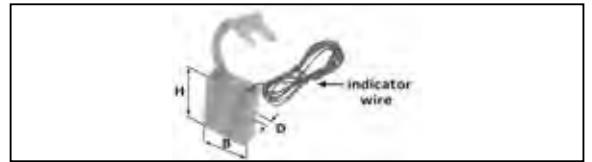

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	9,5	20,5	28,5		140TA9939
8	10,5	19,0	25,0		140TA9940



used for: **STILL**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	6,0	8,0	21,5		140TA5691
	6,0	10,0	22,0		140TA5692
	6,0	12,0	16,0		140TA5693
	6,0	12,5	22,0		140TA5694
	6,0	12,5	22,0	yes	140TA5695
	6,0	16,0	22,0		140TA5696
	6,0	16,0	22,0	yes	140TA5697
	6,0	27,0	19,0		140TA5698
	7,0	16,0	22,0		140TA5699
	8,0	9,0	24,0		140TA5700
	8,0	10,0	20,0		122TA4944
	8,0	10,0	20,0		140TA5701



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **STILL**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	8,0	12,0	25,0		122TA4943
	8,0	12,5	20,5		122TA4956
	8,0	12,5	20,5	yes	122TA7193
	8,0	12,5	22,0		140TA5702
	8,0	12,5	22,0		140TA5703
	8,0	12,5	22,0		140TA5704
	8,0	12,5	22,0		140TA5705
	8,0	12,5	22,0	yes	122TA4947
	8,0	12,5	22,0	yes	140TA5706
	8,0	12,5	22,0	yes	122TA4948
	8,0	12,5	28,0		140TA5707
	8,0	16,0	22,0		140TA5708



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **STILL**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	8,0	16,0	22,0		140TA5709
	8,0	16,0	25,0		122TA4950
	8,0	20,0	23,0		140TA5710
	8,0	20,0	32,0		140TA5711
	8,0	25,0	32,0		140TA5712
	9,0	13,0	25,0		140TA5713
	9,0	13,0	25,0		140TA5714
	9,5	20,5	30,0		140TA5715
	10,0	12,5	22,5		140TA5716
	10,0	12,5	22,5		140TA5717
	10,0	12,5	22,5	yes	140TA5718
	10,0	12,5	25,0		140TA5719



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **STILL**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	10,0	16,0	25,0		122TA7204
	10,0	16,0	25,0		122TA4968
	10,0	16,0	25,0	yes	122TA4966
	10,0	16,0	25,0	yes	140TA5720
	10,0	20,0	25,0		122TA4970
	10,0	20,0	26,0		140TA5721
	10,0	25,0	26,5		140TA5722
	10,0	25,0	32,0		122TA7435
	10,0	25,0	32,0	yes	140TA5723
	10,0	25,0	32,0	yes	140TA5724
	10,0	25,0	40,0		140TA5725
	10,0	25,0	40,0		140TA5726



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **STILL**

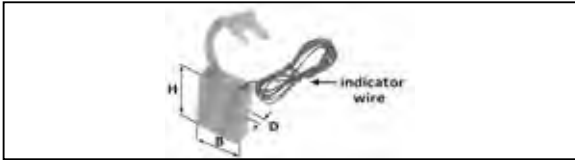

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	10,0	25,0	40,0		140TA5727
	10,0	25,0	41,0		140TA5728
	12,0	25,0	24,5		116TA4785
	12,0	25,0	30,0		140TA5729
	12,0	25,0	32,0	yes	140TA5730
	12,0	25,0	32,0	yes	140TA5731
	12,5	16,0	25,0		140TA5732
	12,5	16,0	25,0		140TA5733
	12,5	20,0	30,0		122TA4978
	12,5	25,0	32,0		122TA4982
	12,5	25,0	32,0		122TA4980
	12,5	25,0	32,0		122TA4983



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **STILL**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	12,5	25,0	32,0		122TA4984
	12,5	25,0	32,0		140TA5734
	12,5	25,0	32,0	yes	140TA5735
	12,5	25,0	32,5	yes	140TA5736
	12,5	25,0	40,0		140TA5737
	16,0	20,0	25,0		122TA6059
E3	6,0	28,0	30,5		122TA4987
	8,0	28,0	30,0		140TA5738
	8,0	28,0	30,5		122TA4988
	8,0	28,0	30,5		122TA4989
	8,0	28,0	30,5		122TA6060
	9,0	30,0	28,0		122TA4991



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **STILL**

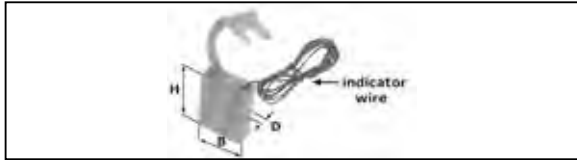

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E3	12,0	32,0	32,0		122TA4992
E4	6,0	22,0	25,0		122TA4993
	6,0	22,0	25,5		122TA4997
	6,0	22,0	25,5		122TA4994
	6,0	22,0	25,5		140TA5739
	6,0	28,0	30,5		122TA4995
	6,0	32,0	31,5		122TA7440
	8,0	20,0	25,0		121TA2838
	8,0	20,0	25,0		122TA5005
	8,0	20,0	25,0		140TA5740
	8,0	25,0	23,0		122TA4999
	8,0	25,0	23,0		122TA5000



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **STILL**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	8,0	28,0	30,5		140TA5741
	8,0	28,0	30,5		140TA5742
	8,0	28,0	32,0		122TA7217
	8,0	32,0	30,0		140TA5743
	8,0	32,0	31,0		140TA5744
	8,0	32,0	31,0		140TA5745
	8,0	32,0	32,0		122TA5007
	8,0	32,0	32,0		122TA5003
	8,0	32,0	32,0		122TA5002
	8,0	32,0	32,0	yes	140TA5746
	9,0	20,0	22,0		140TA5747
	9,0	20,0	22,0		140TA5748



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **STILL**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	9,5	38,0	22,0		122TA5010
	10,0	20,0	25,0		122TA5016
	10,0	20,0	35,0		122TA5017
	10,0	24,0	32,0		140TA5749
	10,0	25,0	22,0		122TA5011
	10,0	26,0	31,0		140TA5750
	10,0	32,0	31,0		140TA5751
	10,0	32,0	31,5	yes	140TA5752
	10,0	32,0	32,0		140TA5753
	10,0	32,0	32,0		140TA5754
	10,0	32,0	32,0		122TA7233
	10,0	32,0	32,5		140TA5755



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **STILL**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	10,0	32,0	40,0		140TA5756
	10,0	32,0	40,5		140TA5757
	10,0	40,0	32,0		140TA5758
	10,0	40,0	32,0		140TA5759
	10,0	40,0	32,5		140TA5760
	10,0	48,0	31,0		122TA5013
	11,0	28,5	30,0		140TA5761
	12,0	20,0	32,0		122TA5025
	12,0	20,0	32,0		122TA5024
	12,0	25,0	28,5		140TA5762
	12,0	32,0	32,0		140TA5763
	12,0	32,0	32,0		140TA5764



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **STILL**

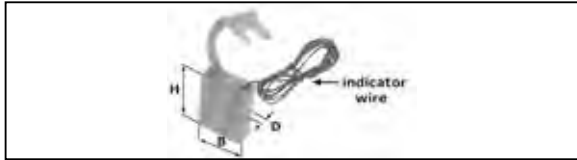


Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	12,0	32,0	32,0		140TA5765
	12,0	32,0	32,0	yes	140TA5766
	12,0	32,0	32,0	yes	140TA5767
	12,0	32,0	40,0		140TA5768
	12,0	32,0	41,0		140TA5769
	12,0	40,0	40,0		140TA5770
	12,0	40,0	40,0		122TA5031
	12,0	48,0	31,5		140TA5771
	12,0	48,0	32,0	yes	140TA5772
	12,5	25,0	25,0		140TA5773
	12,5	25,0	33,0		140TA5774
	12,5	25,0	39,5		140TA5775



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **STILL**

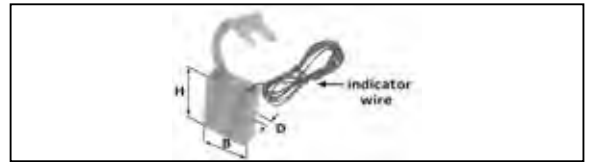


Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	12,5	25,0	40,0		140TA5776
	12,5	25,0	45,0		122TA5045
	12,5	32,0	32,0		140TA5777
	12,5	32,0	32,0		122TA5036
	12,5	32,0	32,0		140TA5778
	12,5	32,0	32,0		140TA5779
	12,5	32,0	32,0	yes	140TA5780
	12,5	32,0	32,0	yes	140TA5781
	12,5	32,0	32,0	yes	140TA5782
	12,5	32,0	32,0	yes	140TA5783
	12,5	32,0	39,5		122TA5049
	12,5	32,0	40,0		122TA5039



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **STILL**

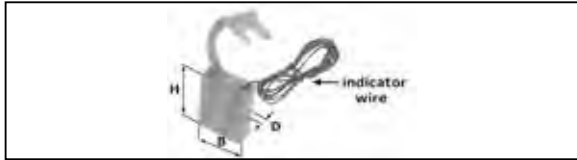


Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	12,5	32,0	40,0		122TA5038
	12,5	32,0	40,0	yes	122TA5040
	12,5	32,0	40,5		122TA6063
	12,5	32,0	41,0		140TA5784
	12,5	40,0	40,0		140TA5785
	16,0	25,0	32,0		122TA5051
	16,0	25,0	32,0		140TA5786
	16,0	32,0	31,5		140TA5787
	16,0	32,0	32,0		122TA5050
	16,0	32,0	32,0		140TA5788
M2	12,5	16,0	25,0		140TA5789



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.


used for: **STILL**

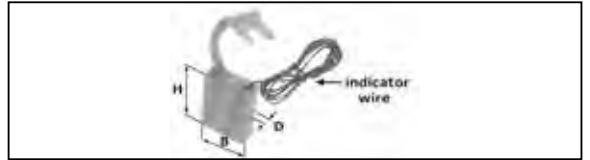

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
M3	10,0	16,0	31,0		140TA5790



used for: **STILL**

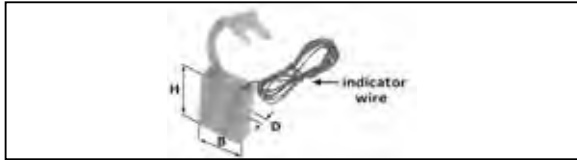


Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
2	6,0	16,0	19,0		141TA4472
	6,0	16,0	19,0		121TA2827
	6,0	20,0	28,0		140TA9944
	9,5	22,0	30,0		121TA2828
4	6,0	22,0	25,0		141TA4473
	6,0	27,0	19,0		121TA2830
	6,5	16,0	14,0		121TA2831
	7,0	10,0	14,0		140TA9945




Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **STILL**

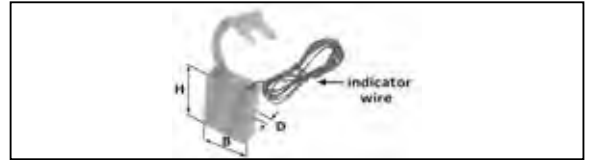


Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	7,0	12,5	20,5		141TA4474
	7,0	16,0	18,0		121TA2833
	7,0	19,0	16,5		121TA2834
	8,0	16,0	25,0		141TA4476
	8,0	19,0	22,5		121TA2837
	8,0	20,0	25,0		141TA4479
	8,0	20,0	25,5		141TA4477
	8,0	22,0	28,5		121TA2843

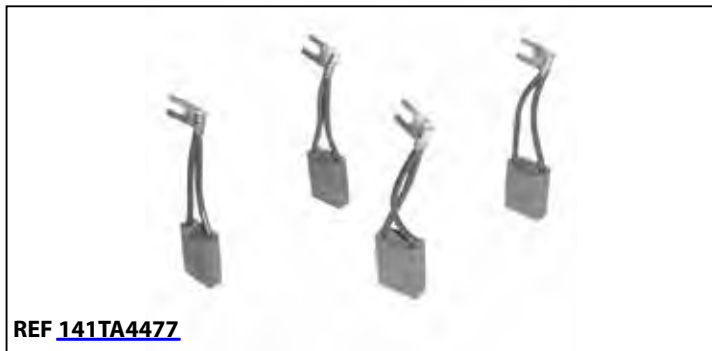

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **STILL**

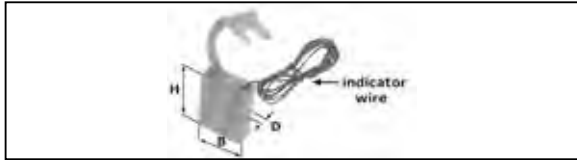


Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	8,0	25,0	23,0	yes	140TA9963
	8,0	27,5	30,5		116TA4784
	8,0	28,0	30,5		141TA4475
	8,0	28,0	32,0		121TA2840
	8,0	32,0	30,0		141TA4478
	8,5	11,5	16,0		141TA4480
	9,0	13,0	25,5		141TA4481
	9,0	13,0	26,0		121TA2849





Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **STILL**

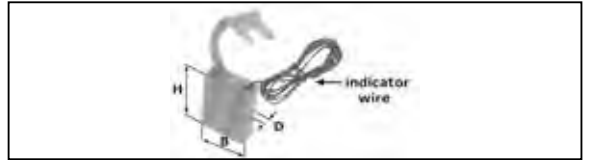

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	9,0	16,0	17,0		141TA4483
	9,0	17,5	25,5		121TA2847
	9,0	18,0	25,5		121TA2851
	9,0	19,0	14,0		141TA4482
	9,0	19,5	16,0		121TA2852
	9,0	19,5	22,0		140TA9954
	9,0	20,0	22,0		141TA4484
	9,0	30,0	28,0		141TA1140

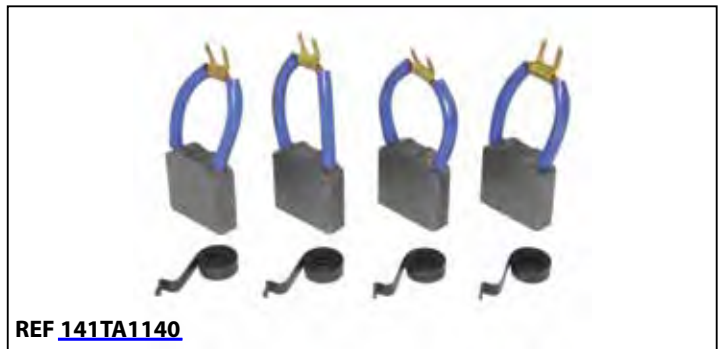
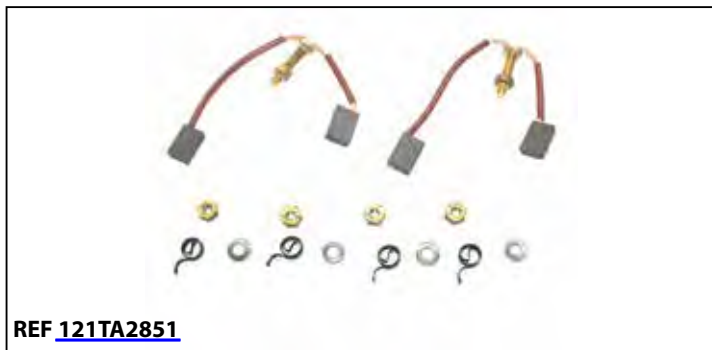


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **STILL**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	9,0	30,0	29,5		141TA4485
	9,5	19,0	26,0		140TA9955
	9,5	22,0	30,0		141TA4486
	9,5	31,5	27,0		140TA9967
	9,5	31,5	27,0		121TA2857
	9,5	31,5	27,5		140TA9968
	9,5	31,5	27,5		121TA2856
	9,5	31,5	27,5		121TA2858

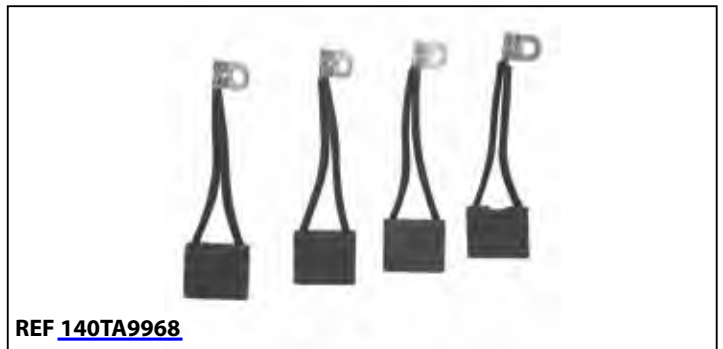
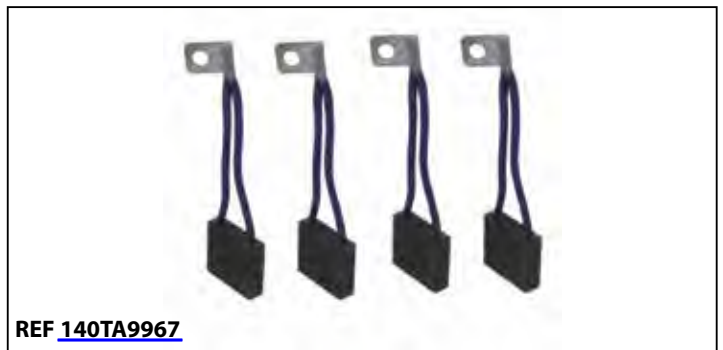


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **STILL**




Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	9,5	32,0	27,0		141TA4487
	9,5	38,0	19,0		121TA2860
	9,5	38,0	22,0		121TA2854
	9,5	38,0	22,0		141TA4488
	9,5	38,0	22,0		121TA2862
	9,5	38,0	22,0		121TA2863
	9,5	38,0	22,5		121TA2864
	9,5	38,0	22,5		140TA9972

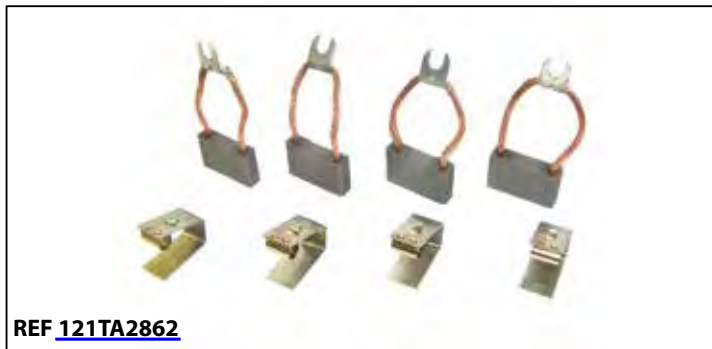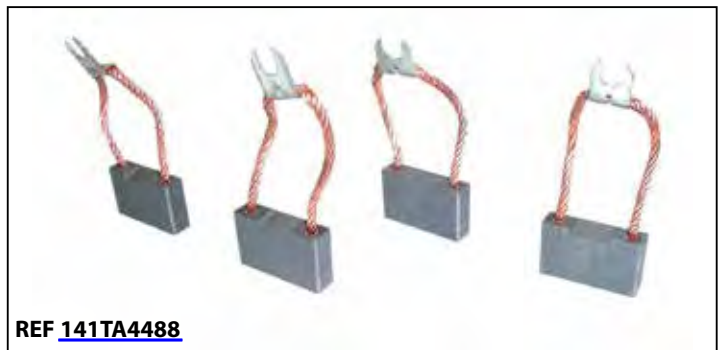

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **STILL**

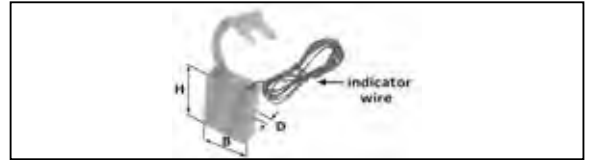

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	9,5	38,0	27,0		141TA4489
	9,5	38,0	27,0		121TA2865
	9,5	38,0	27,0		121TA2867
	9,5	38,5	27,0		121TA2855
	10,0	20,0	32,0		121TA2869
	10,0	25,0	23,0		141TA4490
	10,0	25,0	31,0		140TA9965
	10,0	28,0	30,5		140TA9966



REF [141TA4489](#)



REF [121TA2865](#)



REF [121TA2867](#)



REF [121TA2855](#)



REF [121TA2869](#)



REF [141TA4490](#)




REF [140TA9965](#)





REF [140TA9966](#)

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **STILL**

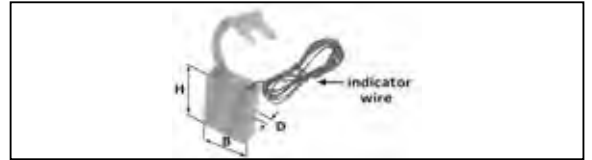

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	10,0	40,0	30,0		121TA2870
	10,0	40,0	30,0		121TA2871
	10,0	40,0	37,0		121TA2868
	10,0	40,0	46,0		140TA9978
	10,0	40,0	46,0		121TA2872
	11,0	25,5	25,5		141TA1141
	11,0	25,5	25,5		121TA2874
	12,5	25,0	28,5		141TA4491

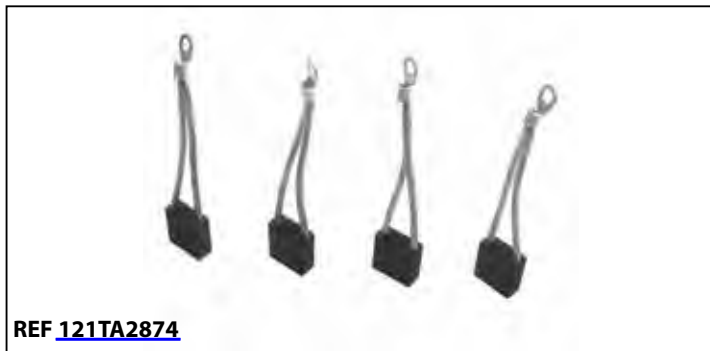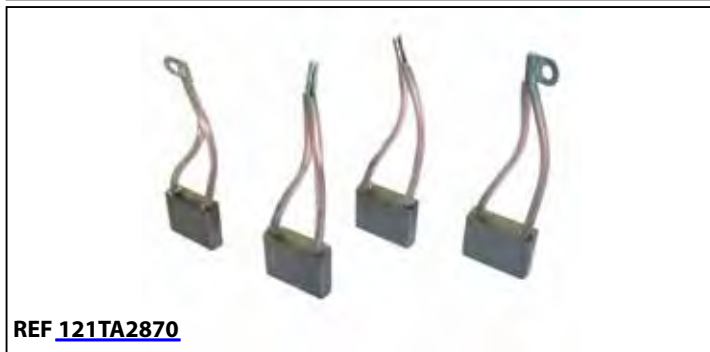

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **STILL**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	12,5	32,0	32,5		141TA4492
	16,0	38,0	50,0		141TA4493
	16,0	38,0	50,0		141TA1142
	16,0	38,0	51,0		121TA2875
	16,0	38,0	51,0		141TA4494
	16,0	38,0	60,5		141TA4495
	16,0	40,0	40,5		140TA9976
	16,0	40,0	46,0		140TA9977





Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **STILL**




Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	16,0	40,0	46,0		140TA9979
	16,0	40,0	53,5		140TA9980
	16,0	40,0	55,5		140TA9981
	17,0	35,0	30,0		141TA1143
	17,0	35,0	30,0		121TA2876
8	9,0	13,0	25,0		140TA9982
	9,5	31,5	27,0		121TA2877
	9,5	31,5	27,0		140TA9988

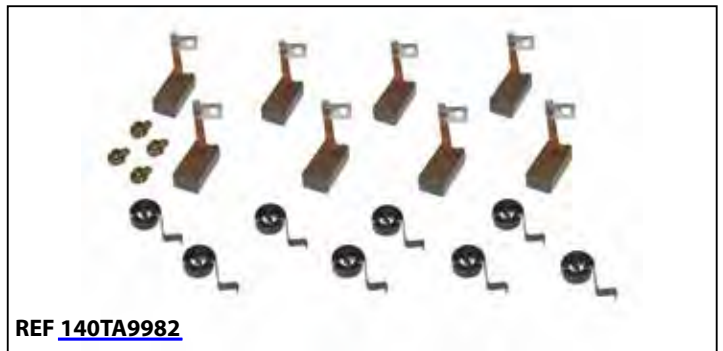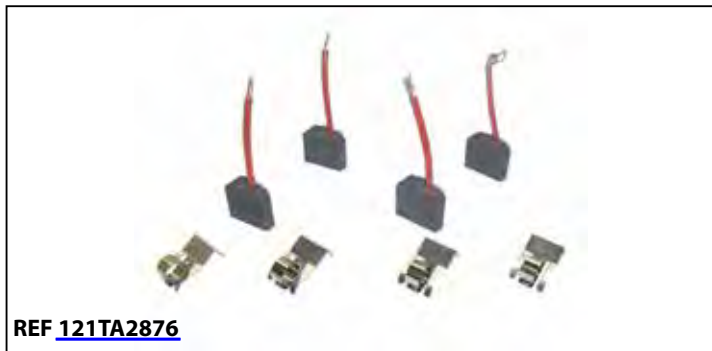


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **STILL**

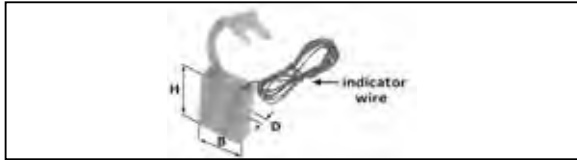


Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	10,0	20,0	25,0		141TA4496
	10,0	25,0	31,0		121TA2878
	10,0	25,5	45,0		121TA2880
	10,0	26,0	30,5		121TA2879
	10,0	26,0	31,0		141TA4497
	12,5	20,0	32,0	yes	121TA2881
	12,5	22,0	32,0		140TA9984
	16,0	40,0	30,0		140TA9989

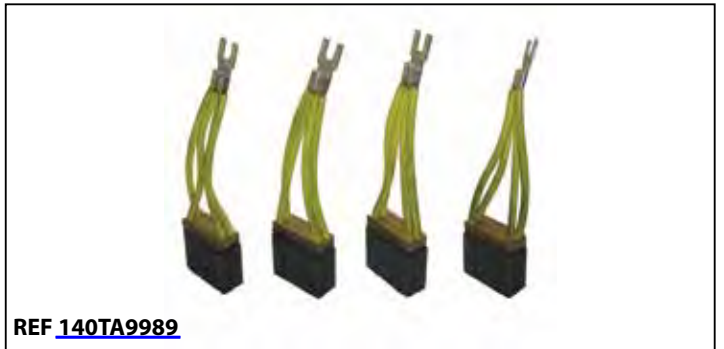


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.


used for: **STILL**

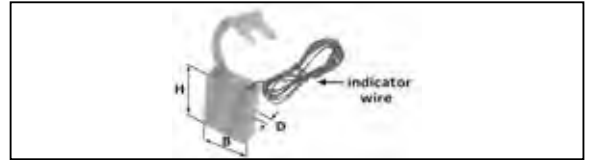

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	19,0	28,5	51,0		140TA9987
	20,0	25,0	32,0		140TA9985
	20,0	25,0	45,5		121TA2882

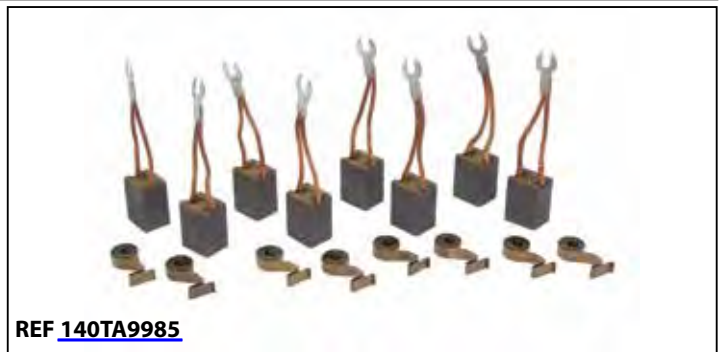

used for: **STOCKA**

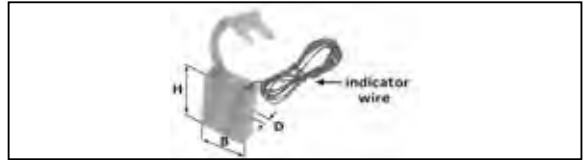

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	5,0	7,0	15,5		122TA5053
	6,0	7,0	16,0		140TA5791
	6,0	7,0	16,5		140TA5792
	7,0	12,0	16,5		122TA5054
	9,0	19,0	22,0		122TA5055
	9,0	19,0	22,0		140TA5793




used for: **STOCKLIN**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	6,0	28,0	31,0		140TA5794
	8,0	32,0	32,0		140TA5795
	10,0	20,0	26,5		140TA5796
	10,0	25,0	22,0		140TA5797
	10,0	25,0	30,0		140TA5798



used for: **STOCKLIN**

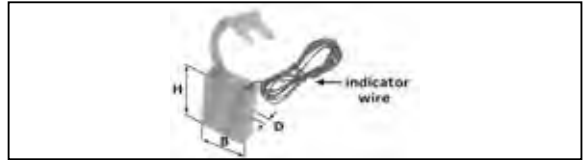

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	7,0	10,0	12,5		140TA9990
	9,0	16,0	17,0		140TA9991
	10,0	25,0	23,0		140TA9992



used for: **TCM**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E1	6,5	19,0	18,0		140TA5799
	8,0	19,0	19,0		140TA5800
E2	5,0	7,0	15,5		122TA5058
	5,0	7,0	15,5		122TA5059
	5,0	7,0	17,0		122TA5060
	5,0	7,0	17,0		140TA5801
	5,0	8,0	18,5		122TA5061
	5,0	8,0	23,0		140TA5802
	6,0	7,0	16,0		140TA5803
	6,0	7,0	16,5		140TA5804
	6,0	7,0	20,0		122TA5063
	6,0	7,0	20,0		122TA5062



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **TCM**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	6,0	8,0	19,0		140TA5805
	6,0	13,0	21,0		140TA5806
	6,0	16,0	14,5		122TA5064
	6,5	12,0	16,0		122TA5067
	6,5	12,0	18,0		140TA5807
	6,5	21,0	25,0		122TA5066
	7,0	10,0	17,0		140TA5808
	7,0	10,0	18,0		122TA5069
	7,0	11,0	19,0		122TA5073
	7,0	11,0	19,0		122TA5070
	7,0	12,0	16,5		122TA5068
	7,0	14,0	15,0		140TA5809



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **TCM**

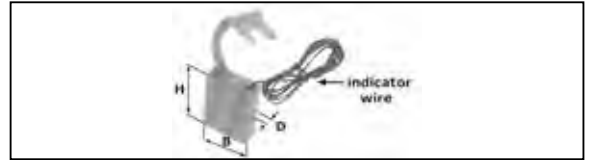


Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	7,0	14,0	16,0		122TA5072
	7,0	14,0	16,0		122TA5071
	7,0	16,0	16,0		140TA5810
	7,0	18,0	18,0		140TA5811
	7,0	19,0	16,0		140TA5812
	7,0	19,0	16,0		140TA5813
	7,5	15,0	24,0		122TA5075
	7,5	20,0	22,5		140TA5814
	8,0	10,0	26,0		140TA5815
	8,0	14,0	19,0		122TA5080
	8,0	14,0	22,0		122TA5076
	8,0	14,0	22,0		122TA5081



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **TCM**

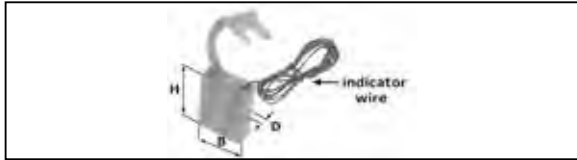

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	8,0	14,5	20,0		140TA5816
	8,0	14,5	20,0		140TA5817
	8,0	18,0	24,0		140TA5818
	8,0	24,0	18,0		140TA5819
	8,0	24,5	21,0		122TA5086
	8,0	25,0	15,0		122TA5077
	8,0	25,0	17,0		122TA5078
	8,0	25,0	17,0		122TA5079
	8,0	25,0	17,0		140TA5820
	8,0	25,0	19,5		122TA5082
	8,0	25,0	20,0		140TA5821
	8,0	25,0	20,0		122TA5083



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **TCM**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	8,0	25,0	20,0		140TA5822
	8,0	25,0	21,5		122TA5084
	9,0	19,0	22,0		122TA5088
	9,0	19,0	22,0		122TA5090
	9,0	19,0	22,0		140TA5823
	9,0	19,0	22,5		122TA5089
	9,0	19,5	20,0		140TA5824
	9,0	20,0	23,0		122TA5087
	9,0	25,0	19,5		140TA5825
	9,0	25,0	22,5		122TA5091
	9,0	25,0	23,0		140TA5826
	9,0	30,0	23,0		140TA5827



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **TCM**

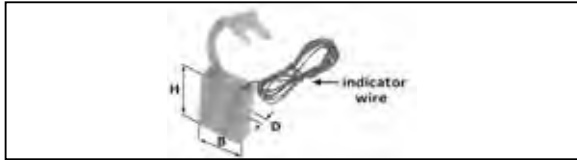

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	10,0	20,0	23,0		140TA5828
	10,0	20,0	24,0		140TA5829
	10,0	30,0	22,0		140TA5830
	12,5	20,0	27,0		122TA5092
	12,5	20,0	29,0		140TA5831
	14,0	40,0	32,5		122TA5093
E3	15,0	40,0	26,0		122TA5098
	15,0	40,0	26,0		122TA5094
	15,0	40,0	28,0		140TA5832
	15,0	40,0	28,0		122TA5100
	15,0	40,0	28,0		122TA5099
	15,0	40,0	28,0		122TA5097



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **TCM**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E3	15,0	40,0	28,0		122TA5096
	15,0	40,0	35,0		122TA5095
	15,0	40,0	35,0		140TA5833
E4	7,0	16,0	16,0		140TA5834
	7,0	16,0	16,0		122TA5101
	7,0	18,5	18,0		140TA5835
	7,0	25,0	30,0		140TA5836
	8,0	20,0	22,5		122TA5102
	8,0	27,5	26,0		122TA5103
	8,0	30,0	25,0		122TA5104
	9,0	20,0	25,0		140TA5837
	10,0	20,0	20,0		140TA5838



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **TCM**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	10,0	32,0	32,0		140TA5839
	10,0	32,0	32,0	yes	140TA5840
	12,0	20,0	28,0		140TA5841
	12,0	25,0	32,0		140TA5842
	12,0	25,0	32,0	yes	140TA5843
	12,0	32,0	28,5		140TA5844
	12,5	16,0	36,0		122TA5108
	12,5	20,0	28,0	yes	140TA5845
	12,5	30,0	27,0		140TA5846
	12,5	30,0	27,0		122TA5109
	12,5	40,0	25,5		122TA5110
12,5	40,0	27,0		122TA5111	



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **TCM**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	12,5	40,0	27,0		140TA5847
	12,5	40,0	27,0		140TA5848
	12,5	40,0	27,0		122TA5112
	12,5	40,0	27,0	yes	140TA5849
	12,5	40,0	34,0		140TA5850
	12,5	40,0	34,0		122TA5106
	12,5	40,0	34,0		122TA5107
	12,5	40,0	34,0		122TA5113
	12,5	40,0	34,5		140TA5851
	12,5	47,5	42,0	yes	140TA5852
	14,0	36,0	27,0		140TA5853
	14,0	40,0	27,0		122TA5115



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **TCM**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	14,0	40,0	28,0		140TA5854
	14,0	40,0	34,0		122TA5116
	14,5	20,0	25,0		140TA5855
	14,5	30,0	21,5		140TA5856
	15,0	30,0	26,0		122TA5120
	15,0	30,0	26,0		122TA5121
	15,0	30,0	26,0		140TA5857
	15,0	40,0	30,5		140TA5858
	15,0	40,0	35,0		122TA5119
	15,0	40,0	35,0		122TA5118
	15,5	28,0	30,5		122TA5122
15,5	28,0	31,0		140TA5859	



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **TCM**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	16,0	24,0	35,0		122TA5123
	16,0	40,0	34,0		122TA5124
	16,0	40,0	34,5		140TA5860
	17,0	40,0	30,5		122TA5125
M2	6,0	16,0	14,0		140TA5861
	12,5	28,5	38,0	yes	140TA5862
	12,5	30,0	34,5		122TA5126
	15,0	30,0	36,0		122TA5127
	16,0	28,5	44,5	yes	140TA5863
	16,0	28,5	45,0		140TA5864
	17,0	25,0	30,5		122TA5128
	17,0	25,0	32,5		122TA5129



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **TCM**

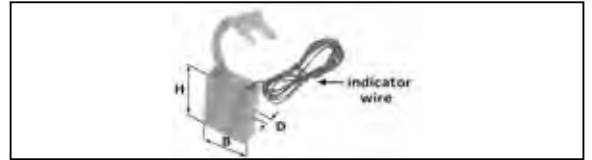

BRUSHES


Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
M2	17,0	31,0	35,5		140TA5865



used for: **TCM**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
2	5,0	7,0	21,0		140TA9994
	5,0	7,0	21,5		141TA1144
	5,0	8,0	19,5		140TA9995
	5,0	8,0	23,5		141TA4498
4	8,0	20,0	25,0		121TA2883
	8,0	20,0	25,0		121TA2885
	8,0	20,0	25,0		121TA2884
	10,0	25,5	35,0		141TA4499

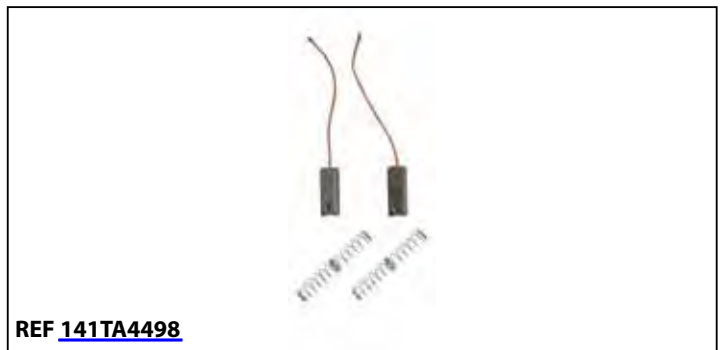

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.


used for: **TCM**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	10,5	36,5	24,5		140TA9998
	12,0	36,0	26,5		140TA9997



used for: **TENNANT**

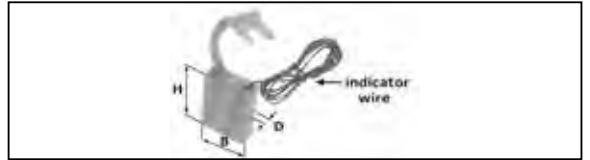


Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	5,0	8,0	15,0		140TA5866
	6,0	12,5	22,0		140TA5867
	6,0	16,0	26,0		140TA5868
	7,0	8,0	16,0		140TA5869
	7,0	14,0	19,0		140TA5870
	8,0	8,0	16,0		140TA5871
	8,0	15,5	17,5		140TA5872
	9,0	19,0	24,0		140TA5873
	9,0	19,0	24,0		140TA5874
	16,0	16,0	33,0		140TA5875
E4	9,5	20,5	29,0		140TA5877



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **TENNANT**

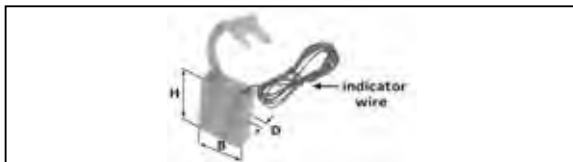

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	10,0	20,0	18,0		140TA5878
	10,0	20,0	22,0		140TA5879
	16,0	25,0	33,0		140TA1595
	16,0	31,5	33,0		140TA5880



used for: **TENNANT**




Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
2	8,0	11,0	27,5		140TA9999
	9,0	19,0	24,0		141TA1145
	9,5	22,0	31,5		141TA1001
	10,0	18,0	20,0		141TA1000
4	5,0	16,0	25,5		141TA1146
	6,5	12,5	22,0		141TA1002
	6,5	12,5	26,0		141TA1003
	6,5	15,5	26,0		141TA1005



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **TENNANT**

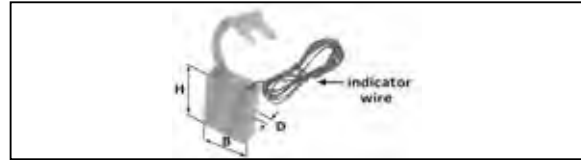

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	7,0	14,0	19,0		141TA1004
	7,0	14,0	19,0		141TA1147
	8,0	12,0	16,5		141TA1148
	8,0	12,0	17,0		141TA1149
	9,0	19,0	24,0		141TA1008
	10,0	18,0	19,5		141TA1007
	12,5	16,0	36,0		141TA4500
	16,0	31,5	33,0		141TA1009



REF [141TA1004](#)




REF [141TA1147](#)



REF [141TA1148](#)



REF [141TA1149](#)

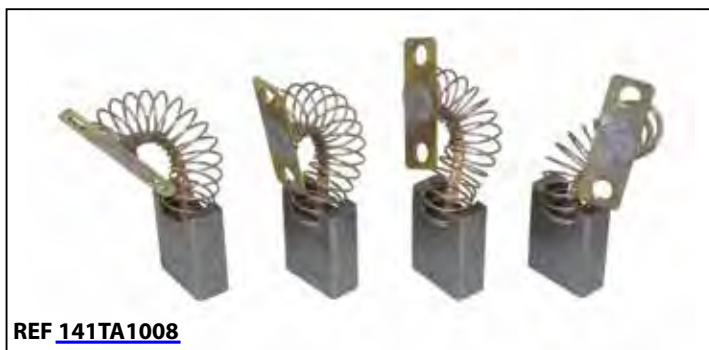

REF [141TA1008](#)



REF [141TA1007](#)



REF [141TA4500](#)




REF [141TA1009](#)

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.


used for: **TENNANT**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
6	9,0	19,0	24,0		140TA6633
8	9,5	19,0	22,5		141TA1010

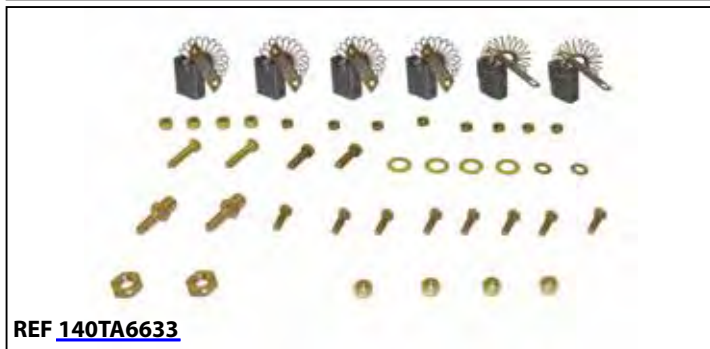

used for: **TOYOTA**

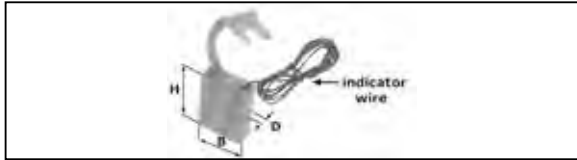

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E1	7,0	19,0	16,5		122TA5131
	20,0	20,0	20,0		140TA5881
E2	5,0	7,0	15,0		140TA5882
	5,0	8,0	18,5		122TA5134
	5,0	10,0	20,0		140TA5883
	5,0	10,0	20,5		122TA5132
	6,0	8,0	20,0		122TA5135
	6,0	13,0	14,0		140TA5884
	6,0	16,0	20,0		140TA5885
	7,0	16,0	14,0		140TA5886
	7,0	16,0	14,5		122TA5138
	8,0	8,0	20,0		140TA5887



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **TOYOTA**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	8,0	9,5	17,0		122TA5140
	8,0	10,0	20,0		140TA5888
	8,0	12,5	22,0		140TA5889
	8,0	16,0	19,0		140TA5890
	8,0	20,0	25,0		122TA5142
	8,0	22,5	23,0		122TA5144
	8,0	22,5	23,0		122TA5143
	8,0	24,5	21,0		122TA5146
	8,0	25,0	21,0		140TA5891
	9,0	13,0	25,0		140TA5892
	9,0	13,0	25,0		140TA5893
	9,0	13,0	25,5		140TA5894



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **TOYOTA**

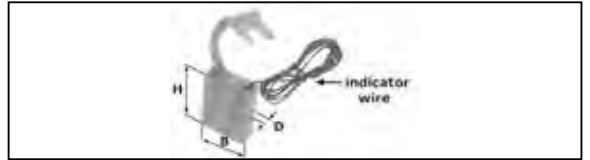


Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	9,0	13,0	25,5		140TA5895
	9,0	20,0	28,5		140TA5896
	9,5	16,0	28,5		140TA5897
	9,5	30,0	21,0		140TA5898
	10,0	12,5	22,5		140TA5899
	10,0	16,0	25,5		140TA5900
	10,0	16,0	28,0		122TA5153
	10,0	20,0	20,0		140TA5901
	10,0	20,0	20,0		140TA5902
	10,0	20,0	20,5		140TA5903
	10,0	20,0	25,0		140TA5904
	10,0	20,0	25,0		140TA5905



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **TOYOTA**

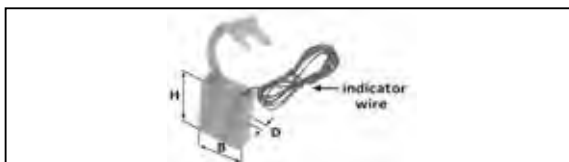


Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	10,0	20,0	26,0		140TA5906
	10,0	25,0	20,0		122TA5151
	10,0	25,0	25,0		140TA5907
	10,0	25,0	27,0		140TA5908
	10,0	25,0	27,0		122TA5154
	10,0	28,0	21,0		122TA5152
	10,0	30,0	21,0		140TA5909
	12,0	25,0	28,0		140TA5910
	12,5	20,0	27,0		140TA5911
	12,5	20,0	32,5		122TA5157
	12,5	25,0	32,0		140TA5912
	12,5	25,0	32,0		140TA5913



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **TOYOTA**

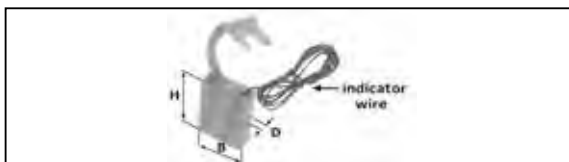

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	14,0	40,0	32,5		140TA5914
	14,0	40,0	32,5		140TA5915
	18,0	18,0	26,0		122TA5160
E3	8,0	28,0	30,5		140TA5916
E4	6,0	15,0	20,0		122TA5161
	6,0	22,0	22,0		140TA5917
	6,0	22,0	25,0		140TA5918
	8,0	20,0	22,0		122TA5164
	8,0	20,0	22,0		140TA5919
	8,0	22,0	18,0		140TA5920
	8,0	29,5	22,0		122TA5163
	8,0	30,0	22,0		140TA5921



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **TOYOTA**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	8,0	30,0	25,0		140TA5922
	8,0	30,0	25,0		140TA5923
	9,0	20,0	28,0		140TA5924
	9,0	30,0	20,5		122TA5169
	9,5	38,0	22,0		140TA5925
	10,0	25,0	20,0		140TA5926
	10,0	25,0	33,0		140TA5927
	10,0	30,0	27,0		122TA5176
	10,0	30,0	27,0		122TA5175
	10,0	30,0	27,0		122TA5170
	10,0	30,0	30,0		140TA5928
		10,0	31,5	32,5	yes



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **TOYOTA**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	10,0	32,0	32,0		140TA5930
	10,0	32,0	32,0		140TA5931
	10,0	32,0	32,0	yes	140TA5932
	10,0	32,0	40,0		140TA5933
	10,0	32,0	40,0		140TA5934
	10,0	32,0	40,0	yes	140TA5935
	10,0	32,0	40,0	yes	140TA5936
	10,0	40,0	27,0		122TA5172
	10,0	40,0	27,0		122TA5173
	12,0	25,0	32,5		140TA5937
	12,0	25,0	33,0	yes	140TA5938
	12,0	32,0	32,0		140TA5939



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **TOYOTA**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	12,0	32,0	32,0	yes	140TA5940
	12,0	48,0	32,0		140TA5941
	12,0	48,0	32,0	yes	140TA5942
	12,5	25,0	33,0		140TA5943
	12,5	30,0	34,5		122TA5182
	12,5	31,5	28,0		140TA5944
	12,5	40,0	27,0		122TA5186
	12,5	40,0	27,0		140TA5945
	12,5	40,0	27,5		122TA5181
	12,5	40,0	29,0		140TA5946
	12,5	40,0	32,0		122TA5187
	12,5	40,0	34,0		122TA5179



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **TOYOTA**

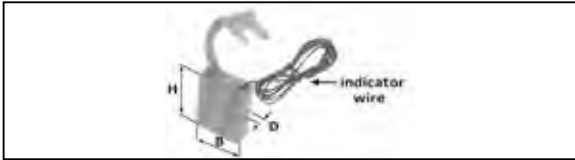

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	12,5	40,0	34,0		122TA5178
	12,5	40,0	34,0		122TA5180
	12,5	40,0	34,0	yes	140TA5947
	12,5	48,0	32,0		140TA5948
	12,5	48,0	32,0	yes	140TA5949
	14,0	16,0	35,0		140TA5950
	14,0	25,5	36,0		140TA5951
	14,0	40,0	26,5		140TA5952
	14,0	40,0	26,5		122TA5190
	14,0	40,0	27,0		140TA5953
	14,0	40,0	27,0		140TA5954
14,0	40,0	27,0		140TA5955	



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **TOYOTA**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	14,0	40,0	27,0		122TA5195
	14,0	40,0	34,0		140TA5956
	16,0	20,0	29,0		140TA5957
	16,0	25,0	33,0		140TA5958
	16,0	32,0	35,0		140TA5959
	16,0	32,0	40,0		140TA5960
	16,0	40,0	34,0		140TA5961
	16,0	40,0	34,0		122TA5202
	16,0	40,0	34,0		122TA5200
M2	20,0	25,0	32,5		140TA5962
	10,0	20,0	21,0		122TA5205
	10,0	20,0	25,0		122TA5204



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.


used for: **TOYOTA**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
M2	10,0	30,0	33,5		140TA5963
	12,5	28,5	38,0	yes	121TA2931
	12,5	30,0	34,5		122TA5207
	14,0	30,0	34,0		140TA5964
	14,0	30,0	34,0		122TA5209
	16,0	28,5	43,5	yes	140TA5965
	16,0	28,5	45,0		140TA5966
	20,0	30,0	34,0		140TA5967
	20,0	30,0	35,0		140TA5968



used for: **TOYOTA**

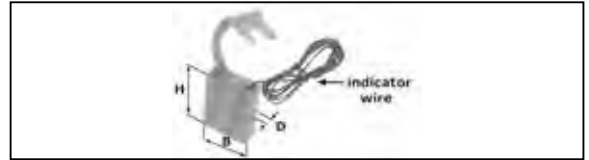


Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
2	6,5	10,0	15,0		141TA4501
	8,5	19,0	22,5		141TA4502
	9,0	17,5	17,0		141TA4522
	12,5	17,5	31,0		141TA4503
4	6,5	12,0	17,0		141TA4506
	6,5	19,0	16,0		141TA4504
	6,5	19,0	16,0		141TA4505
	7,0	10,0	12,5		141TA1012

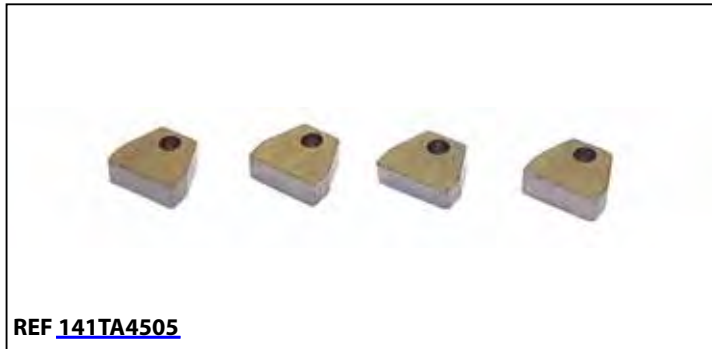


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **TOYOTA**

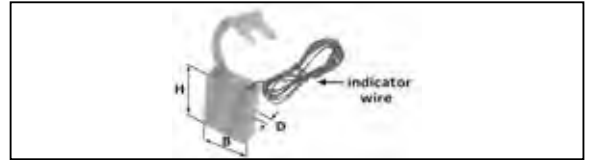


Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	7,0	12,5	19,0		121TA2888
	7,0	12,5	20,5		121TA2889
	7,0	16,0	16,0		141TA4507
	7,0	19,0	16,5		141TA4509
	7,0	25,5	28,5		141TA4508
	8,0	12,5	22,0		141TA4510
	8,0	12,5	22,0		141TA1013
	8,0	16,0	31,5		141TA4511


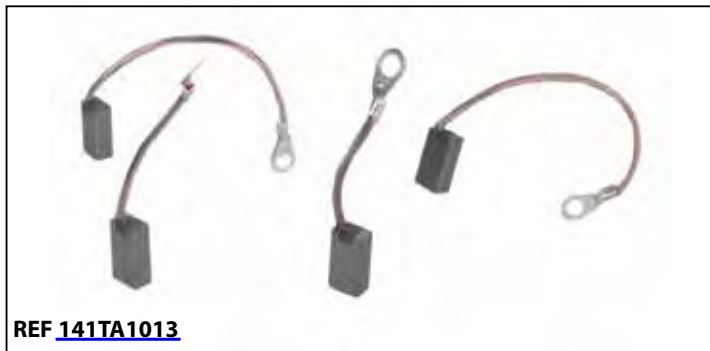


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **TOYOTA**

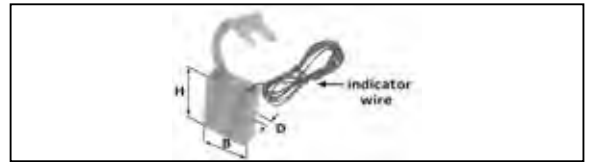

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	8,0	20,0	25,5		121TA2891
	8,0	25,0	20,0		141TA4512
	8,0	25,0	23,0		141TA4513
	8,5	17,5	25,5	yes	141TA4514
	8,5	19,0	16,5		141TA4515
	8,5	19,0	16,5		141TA4516
	8,5	19,0	16,5		141TA4517
	8,5	19,0	17,0		121TA2894


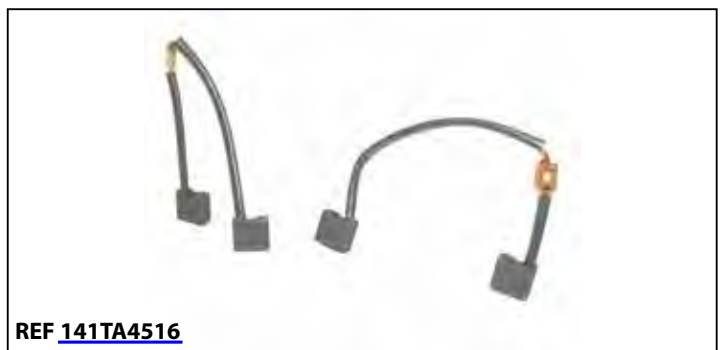
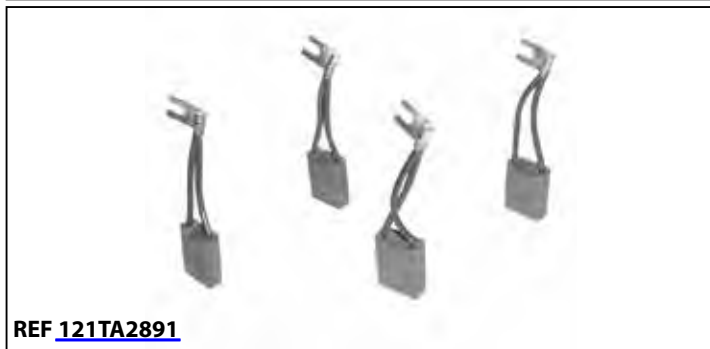


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **TOYOTA**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	8,5	19,0	19,0		141TA4518
	9,0	13,0	25,5		121TA2896
	9,0	16,0	17,0		121TA2903
	9,0	16,0	18,0		121TA2904
	9,0	17,5	16,0		141TA4519
	9,0	17,5	16,0		141TA4520
	9,0	17,5	20,0		141TA4521
	9,0	17,5	25,5		141TA4523

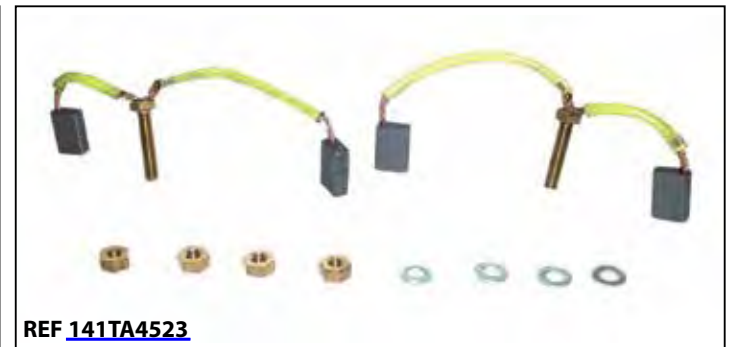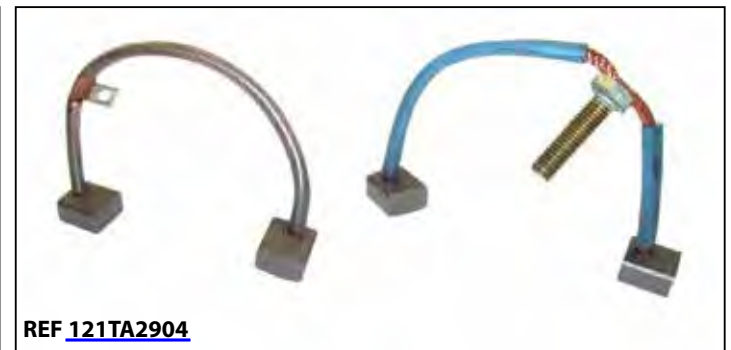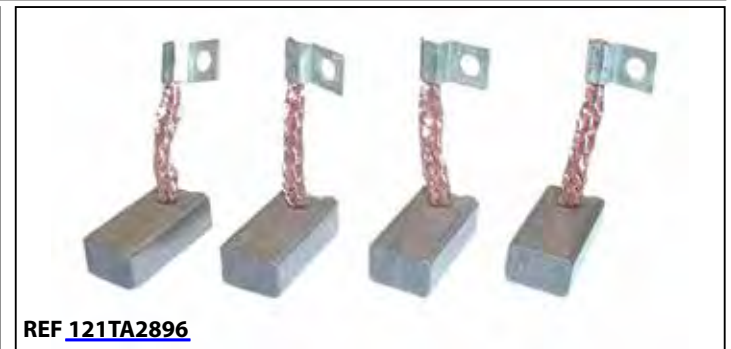

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **TOYOTA**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	9,0	25,5	25,5		141TA1017
	9,0	25,5	27,0		121TA2901
	9,0	26,0	25,5		141TA4524
	9,0	30,0	28,0		141TA1018
	9,5	16,0	28,5	yes	141TA1150
	9,5	19,0	19,0		141TA4531
	9,5	20,5	25,5		121TA2905
	9,5	20,5	25,5		141TA4528





Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **TOYOTA**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	9,5	20,5	28,5		141TA4525
	9,5	20,5	29,0		141TA4526
	9,5	22,0	25,0		141TA4527
	9,5	44,0	25,5		141TA4529
	9,5	44,5	25,0		141TA4530
	10,0	19,0	19,0		141TA4532
	10,0	20,0	20,5		141TA1016
	10,0	21,5	36,5		141TA4535

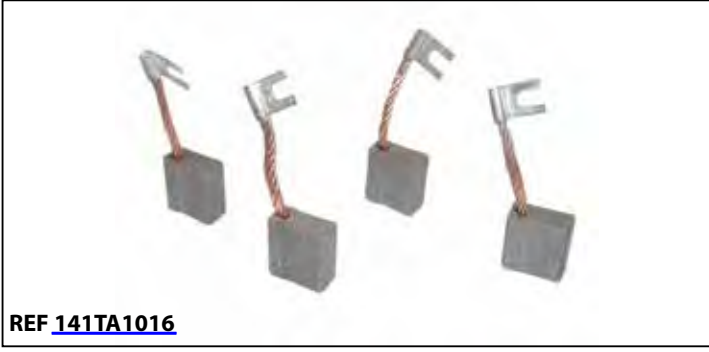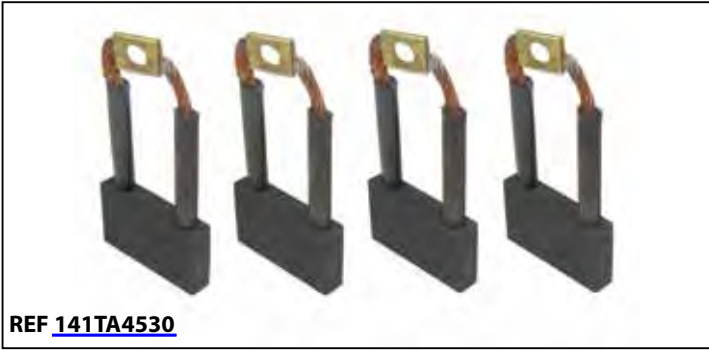

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **TOYOTA**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	10,0	25,5	35,0		141TA4536
	10,0	25,5	35,0		141TA4537
	10,0	25,5	35,0		141TA4538
	10,0	28,0	30,5		141TA4533
	10,0	28,0	30,5		141TA4534
	12,5	16,0	36,5		141TA4546
	12,5	25,5	39,0		141TA4547
	12,5	31,5	27,5		141TA4539




REF [141TA4536](#)



REF [141TA4537](#)



REF [141TA4538](#)

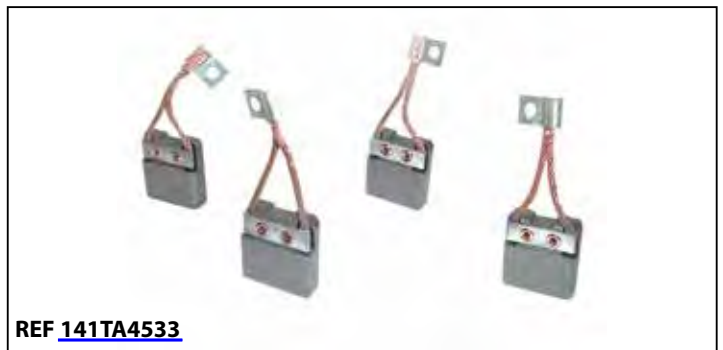

REF [141TA4533](#)



REF [141TA4534](#)



REF [141TA4546](#)



REF [141TA4547](#)





REF [141TA4539](#)

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **TOYOTA**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	12,5	31,5	32,5		141TA4540
	12,5	31,5	32,5		121TA2912
	12,5	32,0	35,0		141TA4542
	12,5	32,0	35,5		141TA4548
	12,5	32,0	35,5		141TA4549
	12,5	32,0	38,0		141TA4550
	12,5	32,0	38,0		141TA4551
	12,5	40,0	42,5	yes	141TA4543


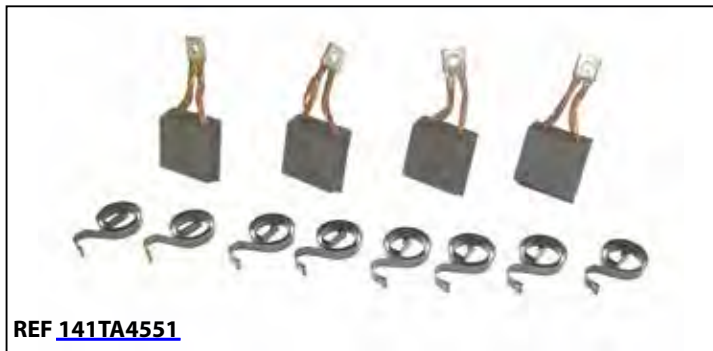
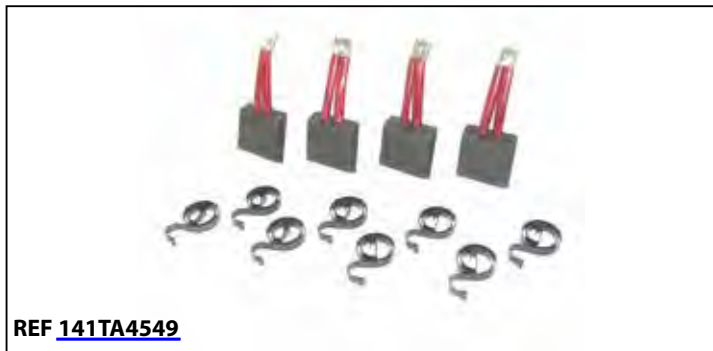


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **TOYOTA**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	12,5	40,0	45,0	yes	141TA4544
	12,5	40,0	45,5		141TA4541
	12,5	47,5	41,0	yes	141TA4545
	12,5	53,5	44,5		141TA4552
	15,5	63,5	45,0	yes	141TA4553
	16,0	24,5	33,0		141TA4554
	16,0	31,5	33,0		121TA2919
	16,0	31,5	33,0		141TA4555

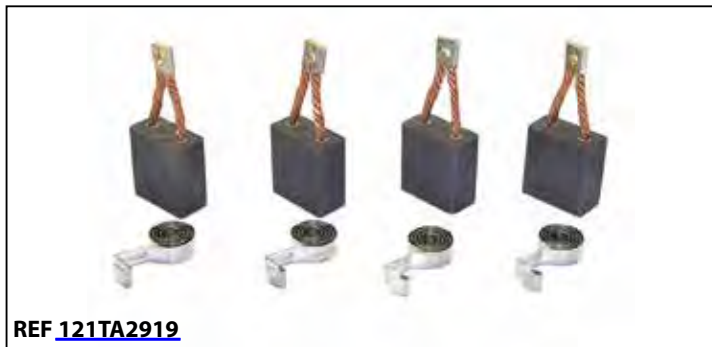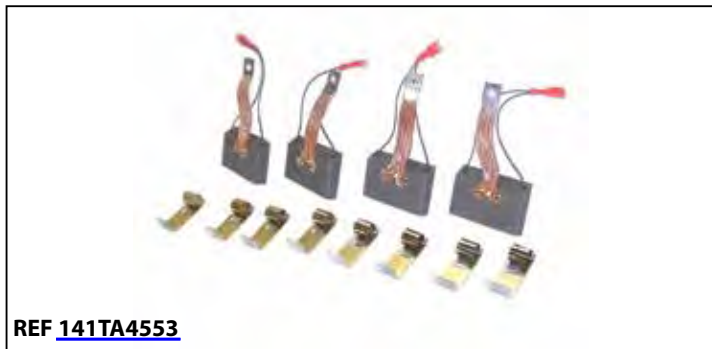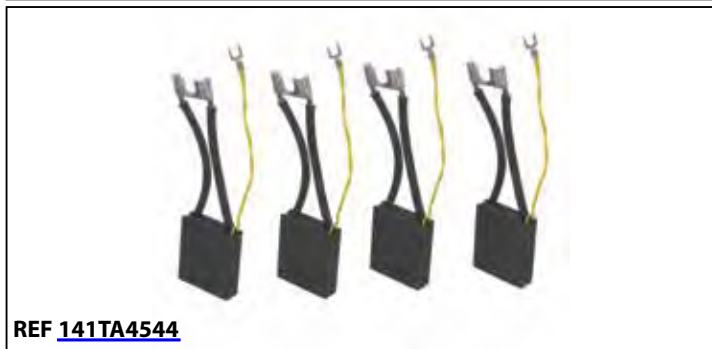


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **TOYOTA**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	16,0	31,5	33,0		141TA4557
	16,0	32,0	32,0		141TA1019
	16,0	65,0	45,5		141TA4556
	17,0	53,5	44,5	yes	121TA2923
8	7,0	22,0	19,5		141TA4558
	7,0	22,0	19,5		141TA4559
	7,0	22,0	20,0		141TA4560
	7,0	22,0	20,0		141TA4561

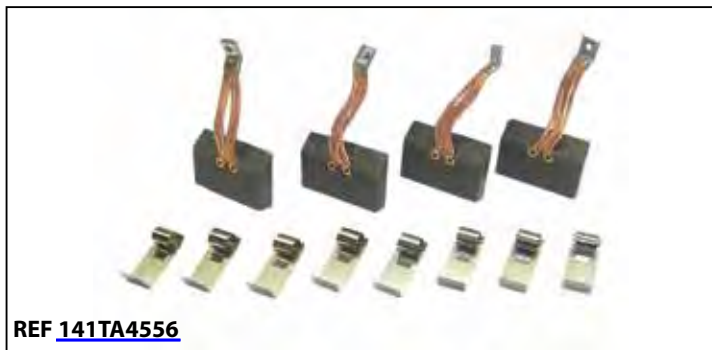

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **TOYOTA**




Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	8,5	16,0	24,0		141TA4562
	8,5	16,0	24,0		141TA4563
	9,5	19,0	22,0		141TA4564
	10,0	20,0	25,5		141TA1020
	10,0	25,5	35,0		141TA4565
	10,5	25,5	35,0		141TA4566
	12,5	15,5	35,0		141TA4570
	12,5	16,0	28,5		141TA4571




Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **TOYOTA**

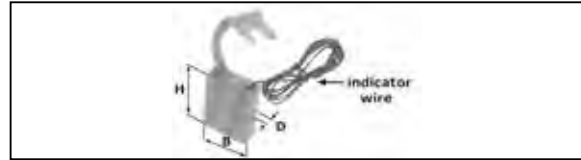


Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	12,5	16,0	35,0		141TA4572
	12,5	25,0	32,0		141TA1021
	12,5	25,0	35,5	yes	141TA4568
	12,5	25,0	44,5		141TA4567
	12,5	25,0	45,0	yes	141TA4569
	12,5	31,5	37,5		141TA4573
	12,5	32,0	32,0	yes	141TA1022
	12,5	32,0	41,0		141TA4574

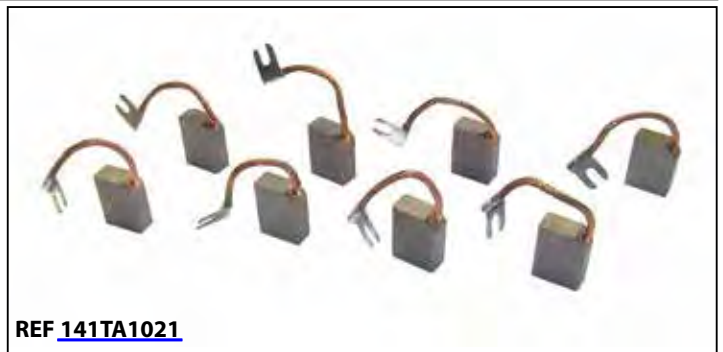

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **TOYOTA**

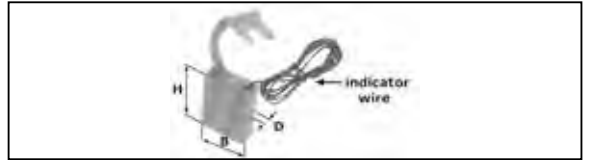


Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	14,0	25,0	35,5		141TA4576
	14,0	25,0	38,0	yes	141TA4581
	14,0	25,5	32,0		141TA4582
	14,0	25,5	35,0	yes	141TA4579
	14,0	25,5	35,0		141TA4580
	14,0	25,5	35,5		121TA2932
	14,0	25,5	35,5		121TA2934
	14,0	25,5	37,5		141TA4577



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **TOYOTA**

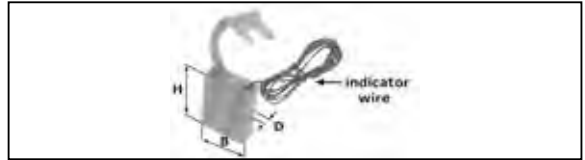

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	14,0	25,5	39,0		141TA4575
	14,0	25,5	39,0		141TA4578
	16,0	24,5	33,5		141TA4584
	16,0	31,5	44,0		141TA4585
	16,0	31,5	45,0		141TA4583
	16,0	32,0	36,0		141TA4586
	16,0	32,0	42,0		141TA4587
	19,0	31,5	41,5		141TA4588



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.


used for: **TOYOTA**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
12	14,0	25,0	35,0		141TA4589



used for: **UPRIGHT**

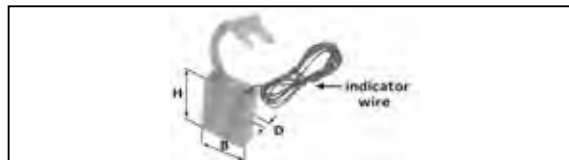

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	10,0	19,0	25,0		140TA5969
	12,5	16,0	36,5		140TA5970
E4	8,0	28,0	30,5		140TA5971
	16,0	31,5	33,0		140TA5972






BRUSH KITS

For all our latest catalogue updates and company info: www.tvh.com

BRUSH KITS

used for: **UPRIGHT**

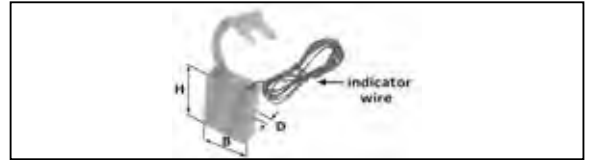


Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	8,5	19,0	17,0		141TA1023



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **YALE**

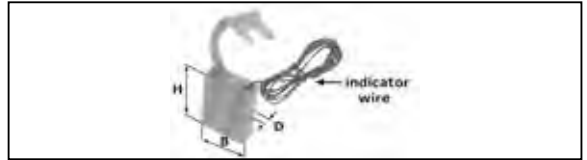


Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E1	6,5	10,0	17,0		122TA5213
	6,5	12,0	17,0		140TA5973
	6,5	19,0	16,0		122TA5212
E2	5,0	8,0	23,0		122TA5214
	6,0	7,0	20,0		122TA5215
	6,0	19,0	19,5		122TA5216
	6,0	22,0	24,0		140TA5974
	6,5	12,0	16,0		140TA5975
	7,0	10,0	18,0		122TA5219
	7,0	18,0	18,0		122TA5218
	7,5	22,0	22,5		140TA5976
	8,0	12,5	22,0		122TA5223



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **YALE**

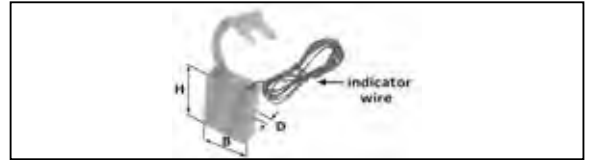


Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	8,0	12,5	22,0		140TA5977
	8,0	14,0	19,0		122TA5220
	8,0	24,0	17,0		122TA5221
	8,0	25,0	19,5		140TA5978
	8,0	25,0	20,0		122TA5222
	8,0	25,0	21,5		140TA5979
	9,0	25,0	22,5		122TA5224
	9,5	16,0	28,5		140TA5980
	9,5	16,0	28,5	yes	122TA5226
	9,5	16,0	28,5	yes	122TA5228
	9,5	16,0	28,5	yes	140TA5981
	9,5	16,0	29,0	yes	140TA5982



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **YALE**

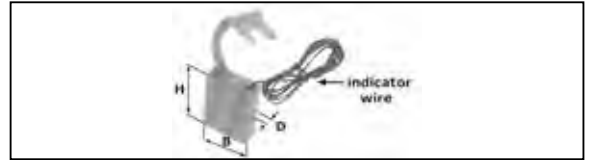

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	9,5	20,5	30,0		140TA5983
	9,5	22,0	35,0		140TA5984
	9,5	31,5	32,0		122TA5225
	10,0	12,0	23,0		140TA5985
	10,0	12,5	22,5		140TA5986
	10,0	16,0	26,0		140TA5987
	10,0	25,0	20,0		122TA5230
	10,0	25,0	23,0		140TA5988
	10,0	28,0	20,0		140TA5989
	10,0	28,0	20,0		140TA5990
	12,5	16,0	22,5	yes	140TA5991
	12,5	16,0	23,0		140TA5992



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **YALE**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	12,5	16,0	36,5		140TA5993
	12,5	25,0	29,5		140TA5994
	12,5	25,0	30,0		122TA5231
	12,5	25,0	32,0		140TA5995
	12,5	29,5	27,0		122TA5232
	13,0	16,0	38,5		118TA4751
	13,0	16,0	38,5	yes	122TA5234
E3	10,0	20,0	22,0		140TA5996
	10,0	20,0	23,0		140TA5997
	11,0	40,0	33,5		122TA5235
	12,0	20,0	30,0		122TA5236
	12,0	20,0	30,0	yes	140TA5998



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **YALE**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E3	12,0	20,0	30,5		140TA5999
	16,0	56,0	33,0		122TA5237
E4	6,0	22,0	25,5		140TA6000
	6,0	28,0	30,5		122TA5238
	7,0	25,0	29,0		140TA6001
	7,5	22,0	22,5		122TA5239
	8,0	22,0	22,0		140TA6002
	8,0	25,0	23,0		122TA5241
	8,0	28,0	30,0		140TA6003
	8,0	28,0	30,5		122TA5240
	8,0	28,0	30,5		140TA6004
	8,0	28,0	31,0		140TA6005



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **YALE**

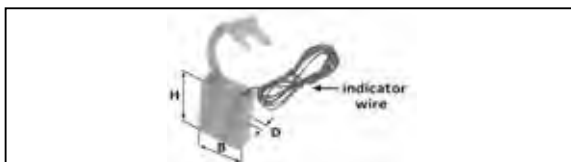

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	8,0	28,0	31,0	yes	140TA6006
	8,0	30,0	25,0		140TA6007
	8,0	32,0	30,0		140TA6008
	8,0	32,0	32,0		122TA5242
	8,5	19,0	22,0		140TA6009
	9,0	16,0	20,0		122TA5243
	9,0	16,0	20,0		140TA6010
	9,5	20,5	28,0		122TA5244
	9,5	44,0	25,0		140TA6011
	10,0	20,0	22,0		140TA6012
	10,0	20,0	27,0		122TA5252
	10,0	25,0	22,0		122TA5246



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **YALE**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	10,0	25,0	22,0		140TA6013
	10,0	25,0	25,0		122TA5253
	10,0	26,0	30,0		140TA6014
	10,0	26,0	30,0	yes	140TA6015
	10,0	26,0	30,5		122TA5247
	10,0	26,0	31,0		140TA6016
	10,0	28,0	30,0		122TA5249
	10,0	28,0	30,5	yes	140TA6017
	10,0	28,0	30,5	yes	140TA6018
	10,0	28,0	31,0		140TA6019
	10,0	28,0	31,0		122TA5248
	10,0	28,0	31,0		140TA6020



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **YALE**

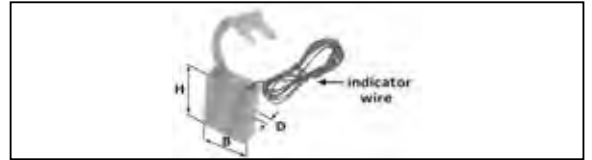

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	10,0	31,5	32,5	yes	122TA5245
	10,0	32,0	31,0		140TA6021
	10,0	32,0	32,0		122TA5254
	10,0	32,0	32,0		140TA6022
	10,0	32,0	32,0		140TA6023
	10,0	32,0	32,0		140TA6024
	10,0	32,0	40,0		122TA5251
	11,0	28,5	30,5		122TA5256
	12,0	20,0	35,0		122TA5257
	12,0	32,0	32,0		140TA6025
	12,0	32,0	32,0		122TA5259
	12,0	32,0	32,0		140TA6026



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **YALE**



Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	12,0	32,0	40,0		122TA5258
	12,0	48,0	32,0		122TA5260
	12,5	16,0	36,0		140TA6027
	12,5	20,0	32,0		140TA6028
	12,5	25,0	24,0		122TA5267
	12,5	25,0	46,0	yes	122TA5261
	12,5	31,5	28,0		122TA5262
	12,5	31,5	33,0		122TA5269
	12,5	31,5	33,0	yes	122TA5276
	12,5	31,5	41,0		140TA6029
	12,5	31,5	42,0		122TA5275
	12,5	31,5	42,0		122TA5273



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **YALE**




Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	12,5	31,5	42,0	yes	122TA5274
	12,5	32,0	32,0		122TA5263
	12,5	32,0	34,0		140TA6030
	12,5	32,0	34,0	yes	140TA6031
	12,5	32,0	34,5	yes	140TA6032
	12,5	32,0	40,0		140TA6033
	12,5	40,0	25,5		140TA6034
	12,5	40,0	45,0	yes	122TA5264
	12,5	40,0	45,5	yes	122TA5271
	12,5	40,0	46,0		122TA5272
	12,5	47,0	41,0		140TA6035
	12,5	47,0	42,0	yes	122TA5277



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **YALE**

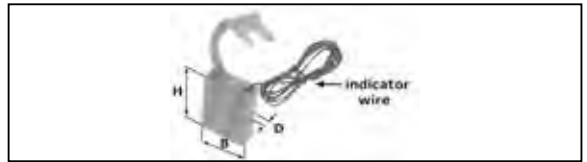


Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E4	12,5	47,5	42,0	yes	140TA6036
	12,5	47,5	43,0		122TA5278
	12,5	48,0	32,0		122TA5265
	12,5	48,0	32,0	yes	140TA6037
	12,5	48,0	33,0		122TA5266
	12,5	53,0	44,0		140TA6038
	13,0	32,0	33,0		122TA5279
	13,0	64,0	29,0		122TA5280
	14,0	25,5	37,5		140TA6039
	16,0	25,0	32,0		122TA5281
	16,0	40,0	34,0		140TA6040
	20,0	25,0	32,5		140TA6041



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **YALE**

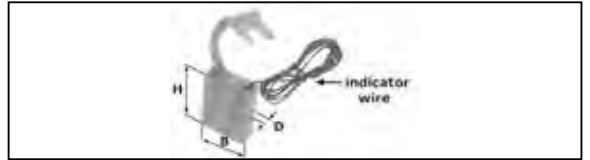


Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
M2	4,5	12,0	17,5		122TA5282
	9,0	19,0	13,5		122TA5283
	9,5	44,0	25,5		140TA6042
	12,5	20,0	40,0		140TA6043
	12,5	28,0	36,0		122TA5284
	12,5	28,5	38,0	yes	122TA5285
	12,5	32,0	31,0	yes	140TA6044
	13,0	28,5	36,0	yes	122TA5286
	13,0	28,5	36,0	yes	140TA6045
	13,0	28,5	38,0		122TA5288
	13,0	32,0	29,0	yes	140TA6046
	13,0	32,0	38,0		140TA6047



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.


used for: **YALE**

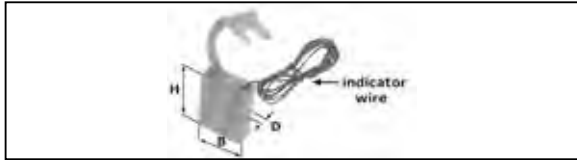

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
M2	16,0	28,5	43,5	yes	122TA5290
	16,0	28,5	45,0	yes	122TA5291
	16,0	31,5	45,5	yes	122TA5292
	19,0	28,5	51,0		140TA6048
	19,0	28,5	51,0	yes	122TA5293
M4	7,0	22,0	19,0		122TA5294



used for: **YALE**

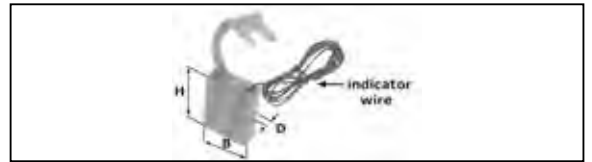

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
2	5,0	8,0	19,5		141TA4590
	5,0	8,0	19,5		141TA4591
	6,0	22,5	22,5		121TA2936
	8,0	22,0	32,0		141TA4592
	8,0	25,0	20,0		121TA2937
	8,5	19,0	22,5		141TA4593
4	6,0	12,5	22,0		141TA4595
	6,0	22,0	25,5		141TA4594




Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **YALE**




Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	6,0	27,0	19,0		141TA4596
	6,0	28,0	30,5		141TA1151
	6,5	12,0	17,0		141TA4600
	6,5	12,5	16,5		141TA4597
	6,5	19,0	16,0		141TA4598
	6,5	19,0	16,0		141TA4599
	7,0	10,0	17,0		141TA4602
	7,0	12,5	19,0		141TA1024

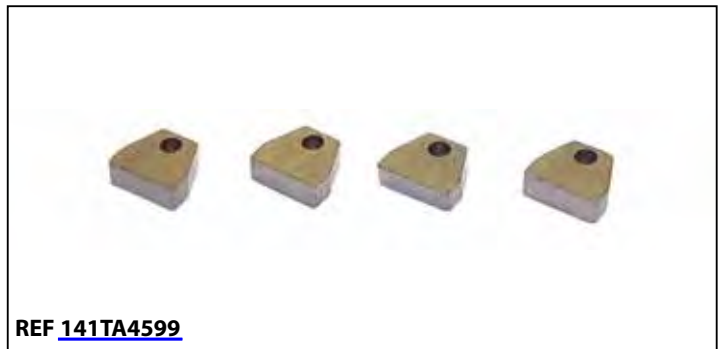

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **YALE**

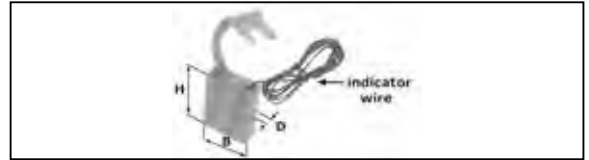

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	7,0	18,0	18,5		141TA4601
	7,0	19,0	16,5		141TA4604
	7,0	25,5	28,5		141TA4603
	8,0	12,5	22,0		141TA1025
	8,0	16,0	31,5		141TA1031
	8,0	19,0	19,0		141TA4610
	8,0	19,0	22,5		121TA2945
	8,0	20,0	25,0		121TA2947




Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **YALE**




Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	8,0	20,0	25,5		141TA4605
	8,0	25,0	22,0		141TA4609
	8,0	25,0	23,0		121TA2946
	8,0	28,0	30,5		141TA4606
	8,0	31,5	30,0		141TA4607
	8,0	31,5	32,0		121TA2944
	8,0	32,0	32,0		141TA4608
	8,5	11,5	16,0		121TA2948


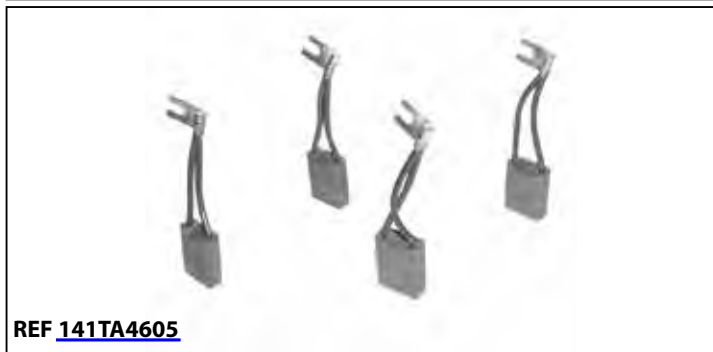


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **YALE**

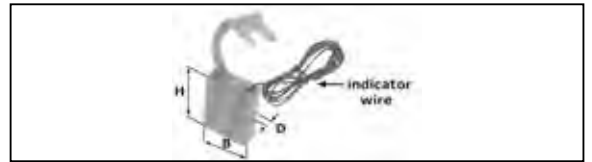

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	8,5	17,5	20,0		141TA4611
	8,5	17,5	25,5	yes	141TA1036
	8,5	19,0	14,0		121TA2949
	8,5	19,0	16,5		121TA2950
	8,5	19,0	16,5		141TA4612
	8,5	19,0	16,5		141TA1152
	8,5	19,0	16,5		141TA4613
	8,5	19,0	17,0		141TA4614

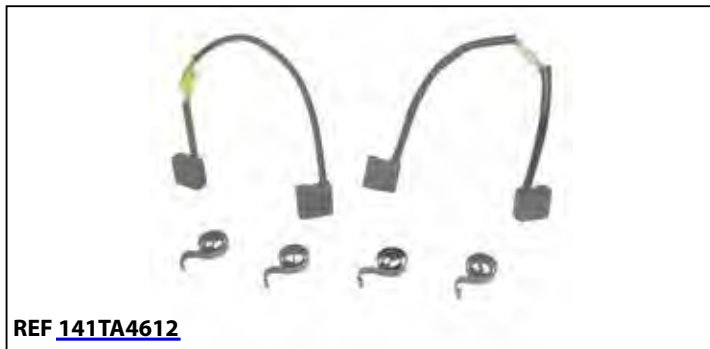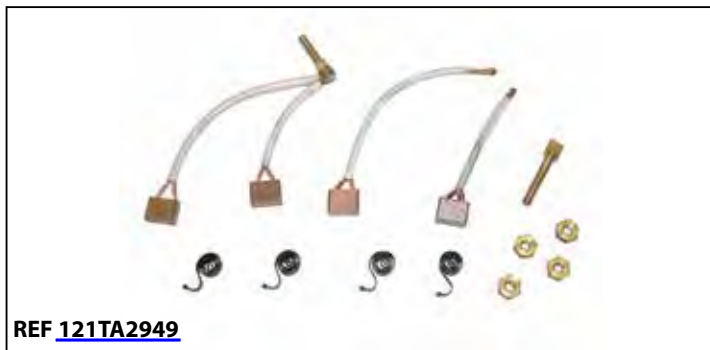


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **YALE**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	8,5	19,0	19,0		121TA2952
	8,5	19,0	23,0		141TA1040
	8,5	19,0	25,5		141TA4615
	9,0	12,5	25,5		141TA4632
	9,0	13,0	25,5		141TA4616
	9,0	13,0	25,5		141TA4629
	9,0	13,0	26,0		141TA1027
	9,0	13,0	28,5		141TA1028

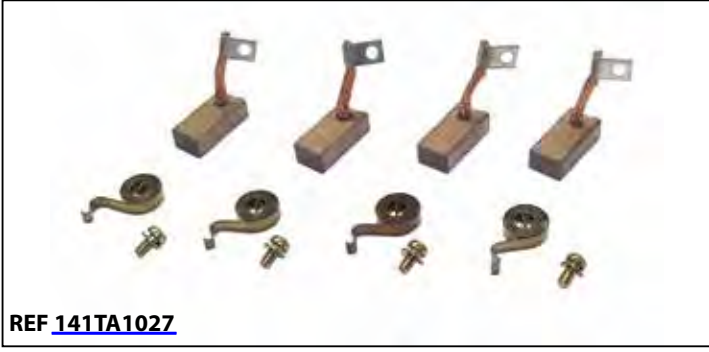


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **YALE**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	9,0	16,0	17,0		141TA4617
	9,0	16,0	17,0		141TA4630
	9,0	16,0	17,0		121TA2956
	9,0	17,5	13,0		141TA1033
	9,0	17,5	13,0		141TA4618
	9,0	17,5	13,0		141TA4619
	9,0	17,5	16,0		141TA4620
	9,0	17,5	16,0		141TA4621

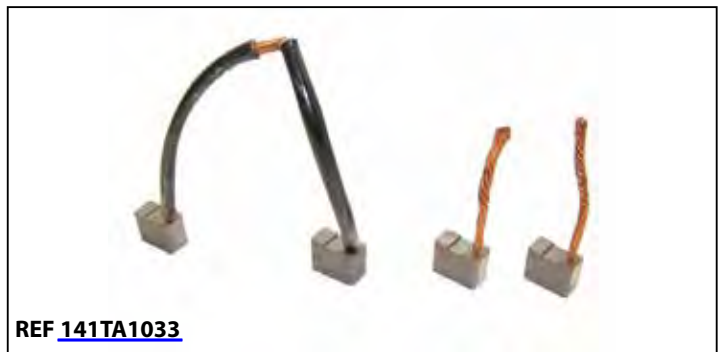

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **YALE**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	9,0	17,5	20,0		121TA2954
	9,0	17,5	25,5		141TA4622
	9,0	17,5	25,5		141TA4623
	9,0	19,0	16,5		141TA4624
	9,0	19,0	22,0		141TA4625
	9,0	20,0	22,0		141TA4633
	9,0	25,5	27,0		141TA4626
	9,0	26,0	25,5		141TA4627




Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **YALE**




Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	9,0	29,5	25,5		141TA4628
	9,0	30,0	26,0		141TA4631
	9,0	30,0	28,0		141TA1048
	9,5	16,0	28,5	yes	141TA4636
	9,5	16,0	28,5		121TA2961
	9,5	19,0	19,0		141TA4641
	9,5	20,5	25,5		141TA4637
	9,5	20,5	28,5		141TA1043

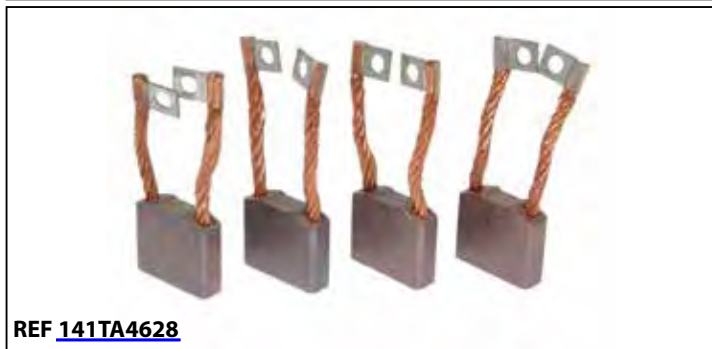

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **YALE**

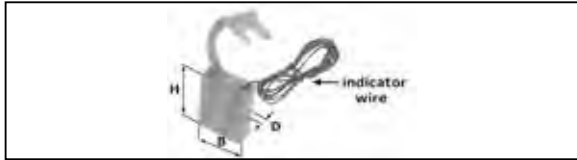


Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	9,5	20,5	29,0		141TA4634
	9,5	22,0	25,0		141TA4635
	9,5	32,0	27,0		141TA4638
	9,5	38,0	22,0		141TA1055
	9,5	38,0	22,5		141TA1056
	9,5	38,0	32,0		121TA2962
	9,5	44,0	25,5		141TA4639
	9,5	44,5	25,0		141TA4640



Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **YALE**

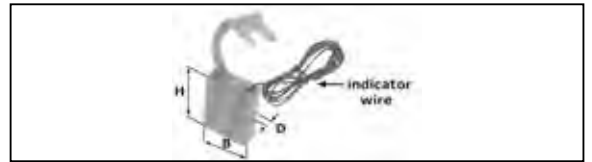

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	10,0	19,0	19,0		141TA4642
	10,0	21,5	36,5		141TA4653
	10,0	25,0	16,5		141TA4643
	10,0	25,0	31,0		141TA4647
	10,0	25,5	35,0		141TA4654
	10,0	25,5	35,0		141TA4655
	10,0	25,5	35,0		141TA4656
	10,0	28,0	28,0		141TA1047





Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **YALE**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	10,0	28,0	30,5		141TA4644
	10,0	28,0	30,5		141TA4645
	10,0	28,0	30,5		141TA4648
	10,0	28,0	30,5		141TA4649
	10,0	28,0	30,5		141TA4650
	10,0	32,0	32,0	yes	141TA4646
	10,0	40,0	30,0		121TA2966
	10,0	40,0	36,0		141TA1057

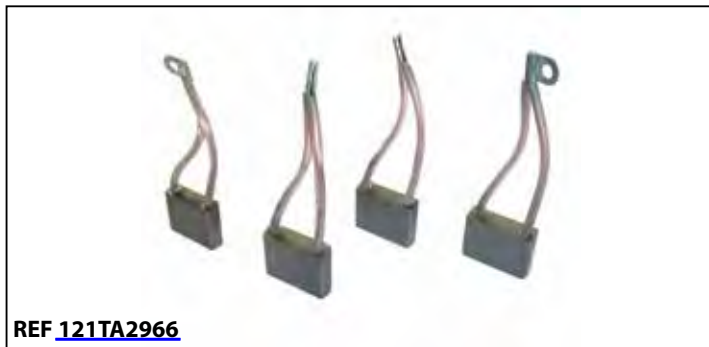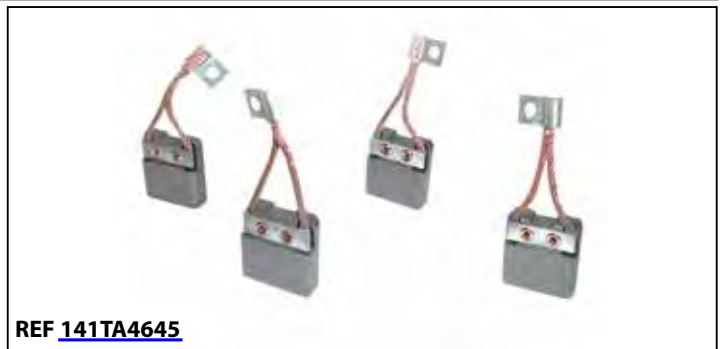

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **YALE**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	10,0	40,0	46,0		121TA2964
	10,0	40,0	46,0		141TA4651
	10,0	40,0	46,0	yes	141TA4652
	10,5	25,5	35,5		141TA4657
	11,0	25,5	25,5		141TA4658
	11,0	25,5	25,5		141TA4659
	12,0	32,0	32,0		141TA4661
	12,0	36,0	26,5		141TA4660




Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **YALE**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	12,5	16,0	35,0		141TA4670
	12,5	16,0	36,5		141TA1032
	12,5	20,0	25,5	yes	141TA4671
	12,5	25,5	39,0		141TA4677
	12,5	31,5	27,5		141TA4662
	12,5	31,5	31,5	yes	141TA4678
	12,5	31,5	32,5		141TA4664
	12,5	31,5	32,5		141TA4672

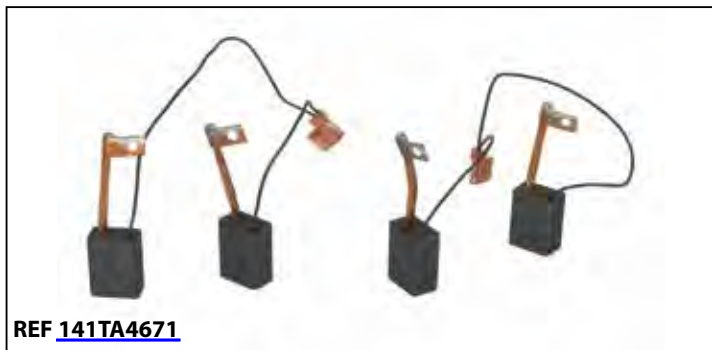

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **YALE**




Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	12,5	31,5	34,0		141TA4663
	12,5	31,5	42,0		141TA1052
	12,5	32,0	30,0		141TA4666
	12,5	32,0	30,0		141TA4667
	12,5	32,0	35,0		141TA4673
	12,5	32,0	35,5		141TA4679
	12,5	32,0	35,5		141TA4680
	12,5	32,0	35,5		141TA1053




Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **YALE**

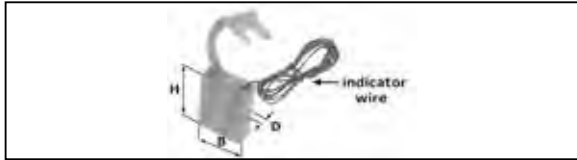

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	12,5	32,0	38,0		141TA4681
	12,5	32,0	38,0		141TA4682
	12,5	32,0	38,0		141TA4683
	12,5	32,0	40,0	yes	141TA4665
	12,5	40,0	42,5	yes	141TA4674
	12,5	40,0	45,0	yes	141TA4675
	12,5	40,0	45,5		141TA4668
	12,5	40,0	45,5	yes	141TA4669

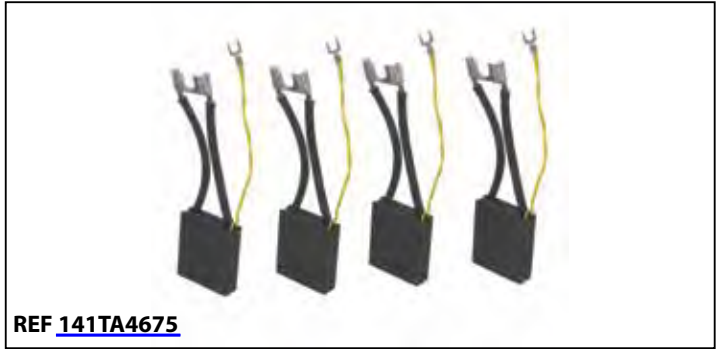


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **YALE**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	12,5	40,0	46,0		121TA2969
	12,5	40,0	46,0		141TA4676
	12,5	53,5	44,5		141TA4684
	12,5	53,5	45,0	yes	141TA4685
	12,5	64,0	29,0		141TA1062
	14,0	31,5	50,5		141TA4686
	15,5	63,5	45,0	yes	141TA4687
	16,0	24,5	33,0		141TA4689



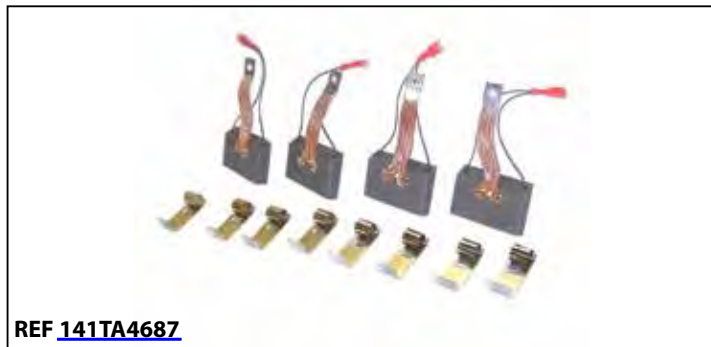


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **YALE**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	16,0	31,5	33,0		141TA1051
	16,0	31,5	33,0		141TA1049
	16,0	31,5	33,0		141TA4690
	16,0	31,5	33,0		141TA1050
	16,0	38,0	51,0		141TA4688
	16,0	40,0	46,0		141TA4691
	16,0	40,0	53,5		141TA4692
	16,0	65,0	45,5		141TA1063

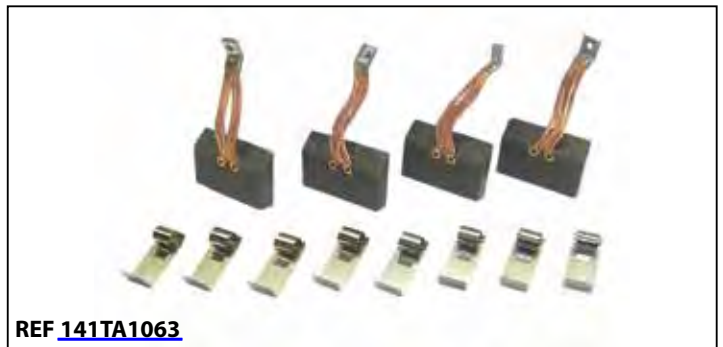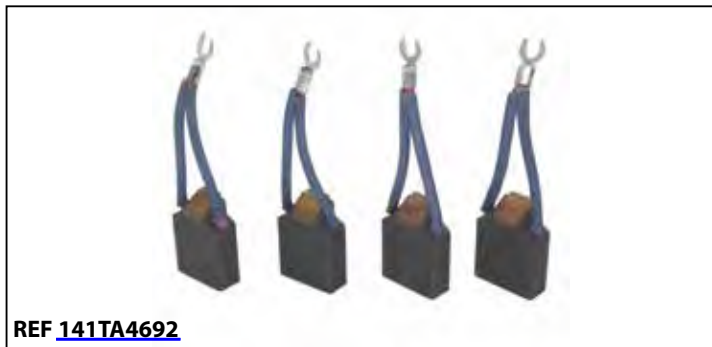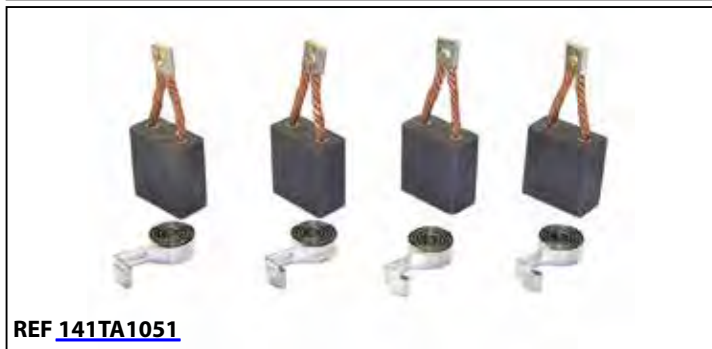

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **YALE**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
4	17,0	35,0	30,0		141TA4693
	17,0	53,5	44,5	yes	141TA4694
	23,0	24,5	10,0		141TA1044
8	6,0	28,0	30,5		121TA2976
	6,5	12,5	22,0		141TA4695
	7,0	22,0	19,5		141TA4696
	7,0	22,0	19,5		141TA4697
	7,0	22,0	20,0		141TA4698




Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **YALE**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	7,0	22,0	20,0		141TA4699
	8,5	16,0	24,0		141TA4700
	8,5	16,0	24,0		141TA4701
	9,0	13,0	25,5		121TA2979
	9,5	19,0	22,0		141TA4702
	10,0	25,0	32,5		141TA1067
	10,0	25,5	35,0		141TA4703
	10,0	26,0	31,0		141TA1072

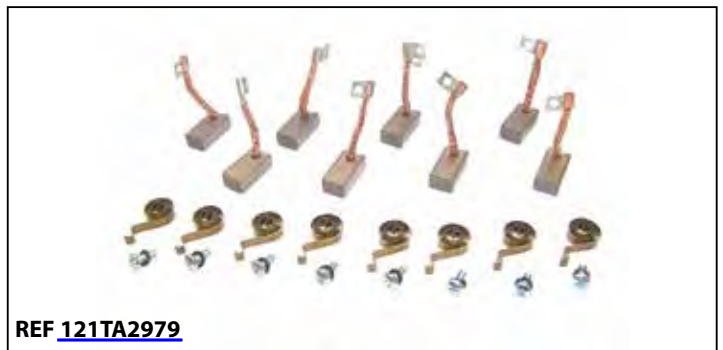

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **YALE**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	10,5	25,5	35,0		141TA1068
	10,5	25,5	35,0		141TA4704
	12,5	15,5	35,0		141TA4712
	12,5	16,0	28,5		141TA4713
	12,5	16,0	35,0		141TA1066
	12,5	25,0	35,5	yes	141TA4705
	12,5	25,0	42,0		121TA2981
	12,5	25,0	45,0	yes	141TA4707




Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **YALE**



Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	12,5	25,0	46,0	yes	141TA4706
	12,5	28,5	38,5	yes	121TA2986
	12,5	31,5	37,5		141TA4714
	12,5	31,5	41,0		141TA4715
	12,5	32,0	40,0	yes	141TA4708
	12,5	32,0	45,0		141TA4710
	12,5	32,0	45,5		141TA4709
	12,5	32,0	45,5	yes	141TA4711

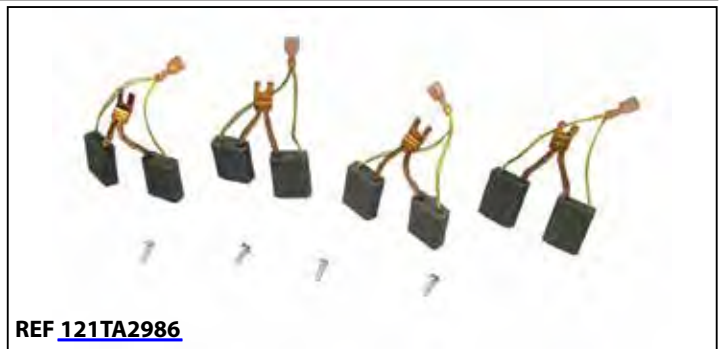

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **YALE**




Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	12,5	32,0	46,0		121TA2983
	14,0	25,0	35,5		141TA4718
	14,0	25,5	35,0	yes	141TA4720
	14,0	25,5	35,0		141TA4721
	14,0	25,5	35,5		121TA2987
	14,0	25,5	35,5		141TA4717
	14,0	25,5	35,5		141TA1071
	14,0	25,5	37,5		141TA4719







Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **YALE**

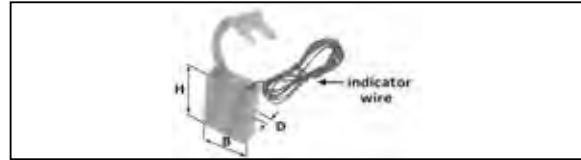

Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	14,0	25,5	39,0		141TA1070
	14,0	25,5	47,0		141TA4716
	16,0	24,5	33,5		141TA4726
	16,0	28,5	44,5		141TA4722
	16,0	28,5	45,0		121TA2989
	16,0	28,5	45,0	yes	141TA4723
	16,0	31,5	38,5		141TA4725
	16,0	31,5	44,0		141TA4727

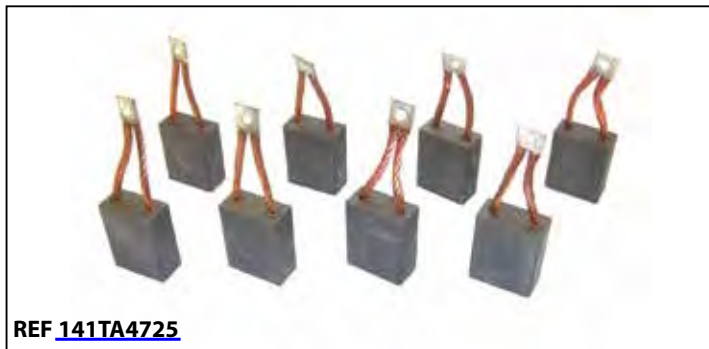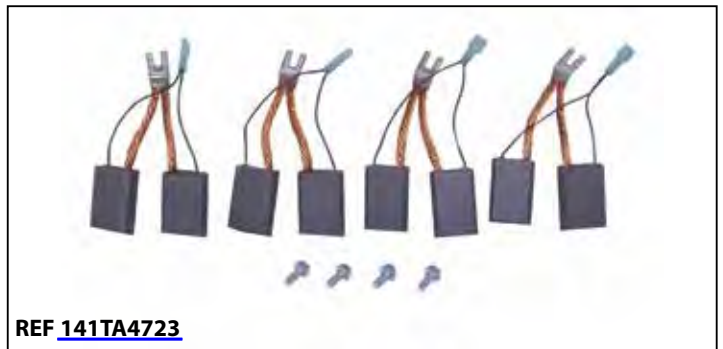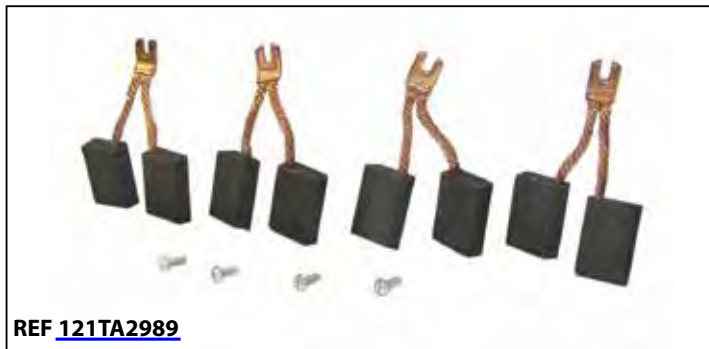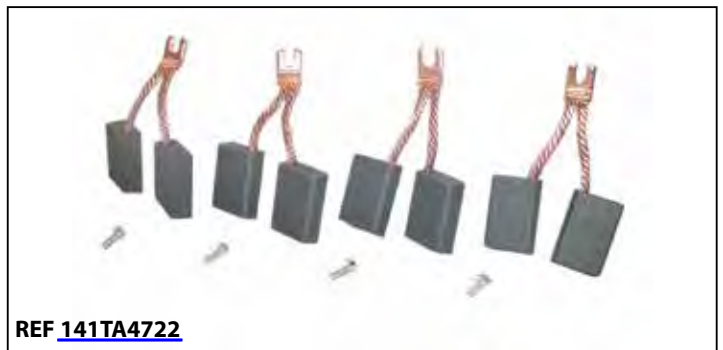


Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **YALE**




Quantity of brush blocks	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush kit
8	16,0	31,5	45,0		141TA4724
	16,0	32,0	36,0		141TA4728
	16,0	32,0	42,0		141TA4729
	19,0	28,5	51,5		141TA1073
	19,0	31,5	41,5		141TA4730
	20,0	25,0	45,5		121TA2990
12	14,0	25,5	45,0		141TA4731

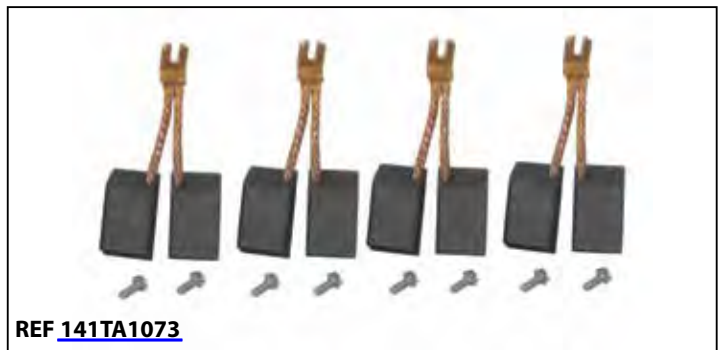

Should you come across brushes with identical dimensions, and you are not sure what the difference is, please contact us.

used for: **YANG-YAM-PUMA**

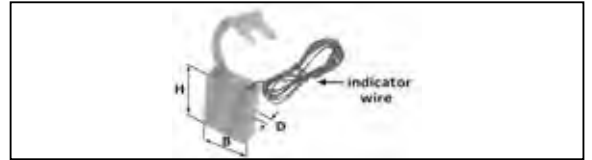

Type brush	Thickness +/- (mm) D	Width +/- (mm) B	Height +/- (mm) H	Indicator wire MD	REF brush
E2	12,0	20,0	30,0		140TA6049

